


CROSSBAR ASSEMBLY INSTRUCTIONS

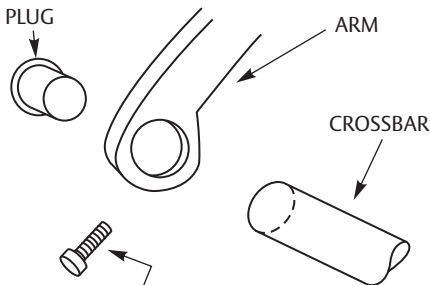


NYLON TIP LOCKS
ASSEMBLY IN POSITION WHEN
SCREW IS **TIGHT**

USE 5/32" SOCKET HEAD WRENCH TO
ASSEMBLE

BE SURE SCREW IS

TIGHT

CUT AND RE-DRILL

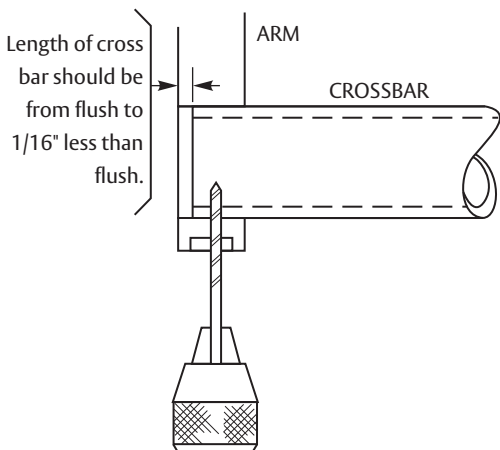

Note: If a shorter crossbar is required, cut crossbar to length and re-drill a $\frac{3}{16}$ " hole thru one side using hole in arm for locating.

IMPORTANT!

SEE OTHER SIDE FOR ASSEMBLY
INSTRUCTIONS.