



| LOCK FUNCTION | | OUTSIDE | | INSIDE | |
|---------------|---|-----------------|---|-----------------|---|
| 15 | ● | Cylinder Hole | ● | Cylinder Hole | ● |
| 16 | ● | Thumb Turn Hole | ● | Thumb Turn Hole | ● |
| 17 | ● | | | | |
| 18 | ● | | | | |
| 29 | ● | | | | |

DOOR PREPARATION CHART

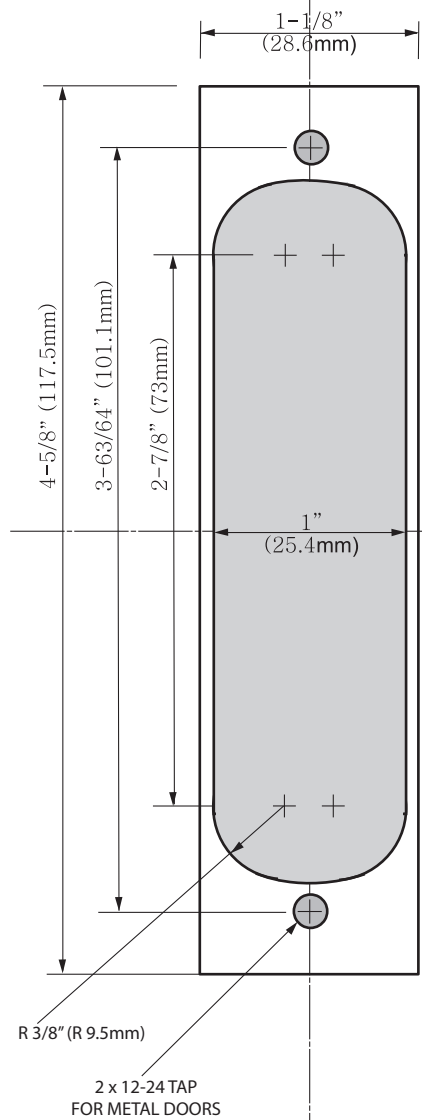

R 3/8" (R 9.5mm)
2 x 12-24 TAP FOR METAL DOORS

Of Lock And Door Thickness

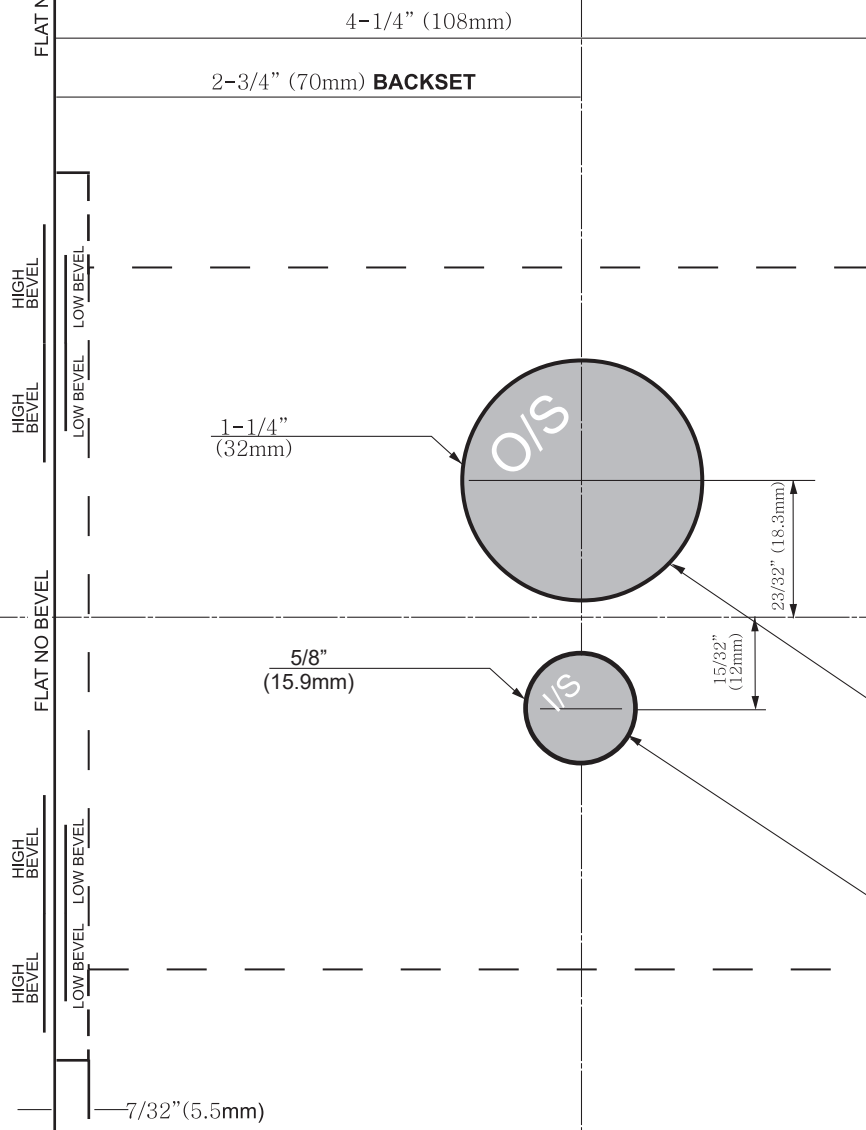

DBM TEMPLATE

HEAVY DUTY DEADBOLT

OUTSIDE-ONLY
INSIDE-ONLY

Match To Door CL

1" 25.4mm
If This Measures 1" or 25.4mm Scale Is Correct


LOCATOR POINT

MATCH WITH VERTICAL LINE DRAWN ON DOOR

RESPONSIBILITY
Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material or method of construction.

FOR OPPOSITE HAND, PLEASE SEE REVERSE SIDE

RECESS TO FIT STRIKE PLATE

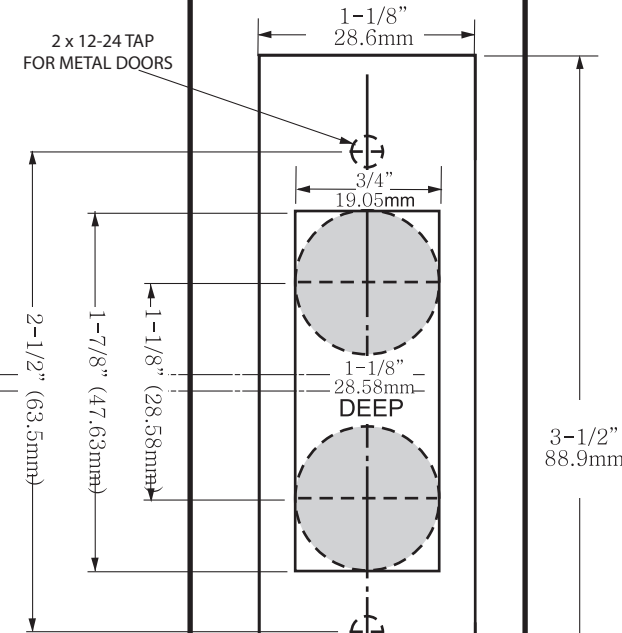

DOOR FRAME VIEW

STRIKE TEMPLATE