


PRINTING INSTRUCTIONS: SET PAGE SCALING TO NONE. ATTACH PAGES 1 & 2 TOGETHER, LINING UP THE MOUNTING HOLES SHOWN WITH ARROWS.

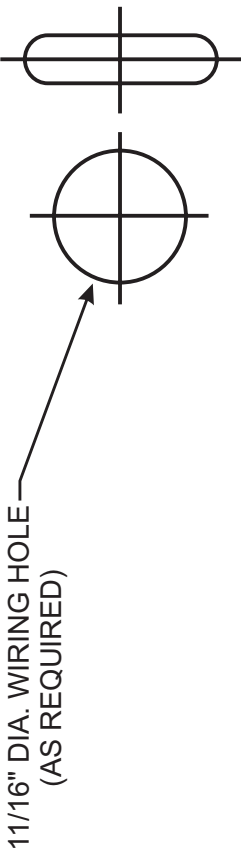

PLACE AGAINST HEADER

FOLD ON DOTTED LINE

### ES ELECTROMAGNETIC LOCK



11/32" DRILL FOR THRU BOLT MOUNTING  
OR  
5/16"-18 TAP FOR MOUNTING ON  
REINFORCED DOOR ONLY  
(SEE INSTRUCTIONS)


GUIDE PIN  
(PLACES)



PLACE AGAINST HEADER

DRILL AND TAP FOR 1/4"-20  
MACHINE SCREW - 1" DEEP  
OR

3/16" DRILL FOR #14 SHEET  
METAL SCREW - 1" DEEP  
(2 PLACES - SEE INSTRUCTIONS)



**#2268 SERIES ELECTROMAGNET**

PLACE AGAINST JAMB  
OPPOSITE HINGES FOR  
L.H.R. DOOR INSTALLATION



1/4" DIA. ARMATURE GUIDE PIN  
HOLE 9/16" DEEP (2 PLACES)

