



**FOR LOCATION OF SERIES RIM & VERTICAL ROD DEVICE
USING PULL TRIM, OR ESC LEVER HANDLE TRIM**

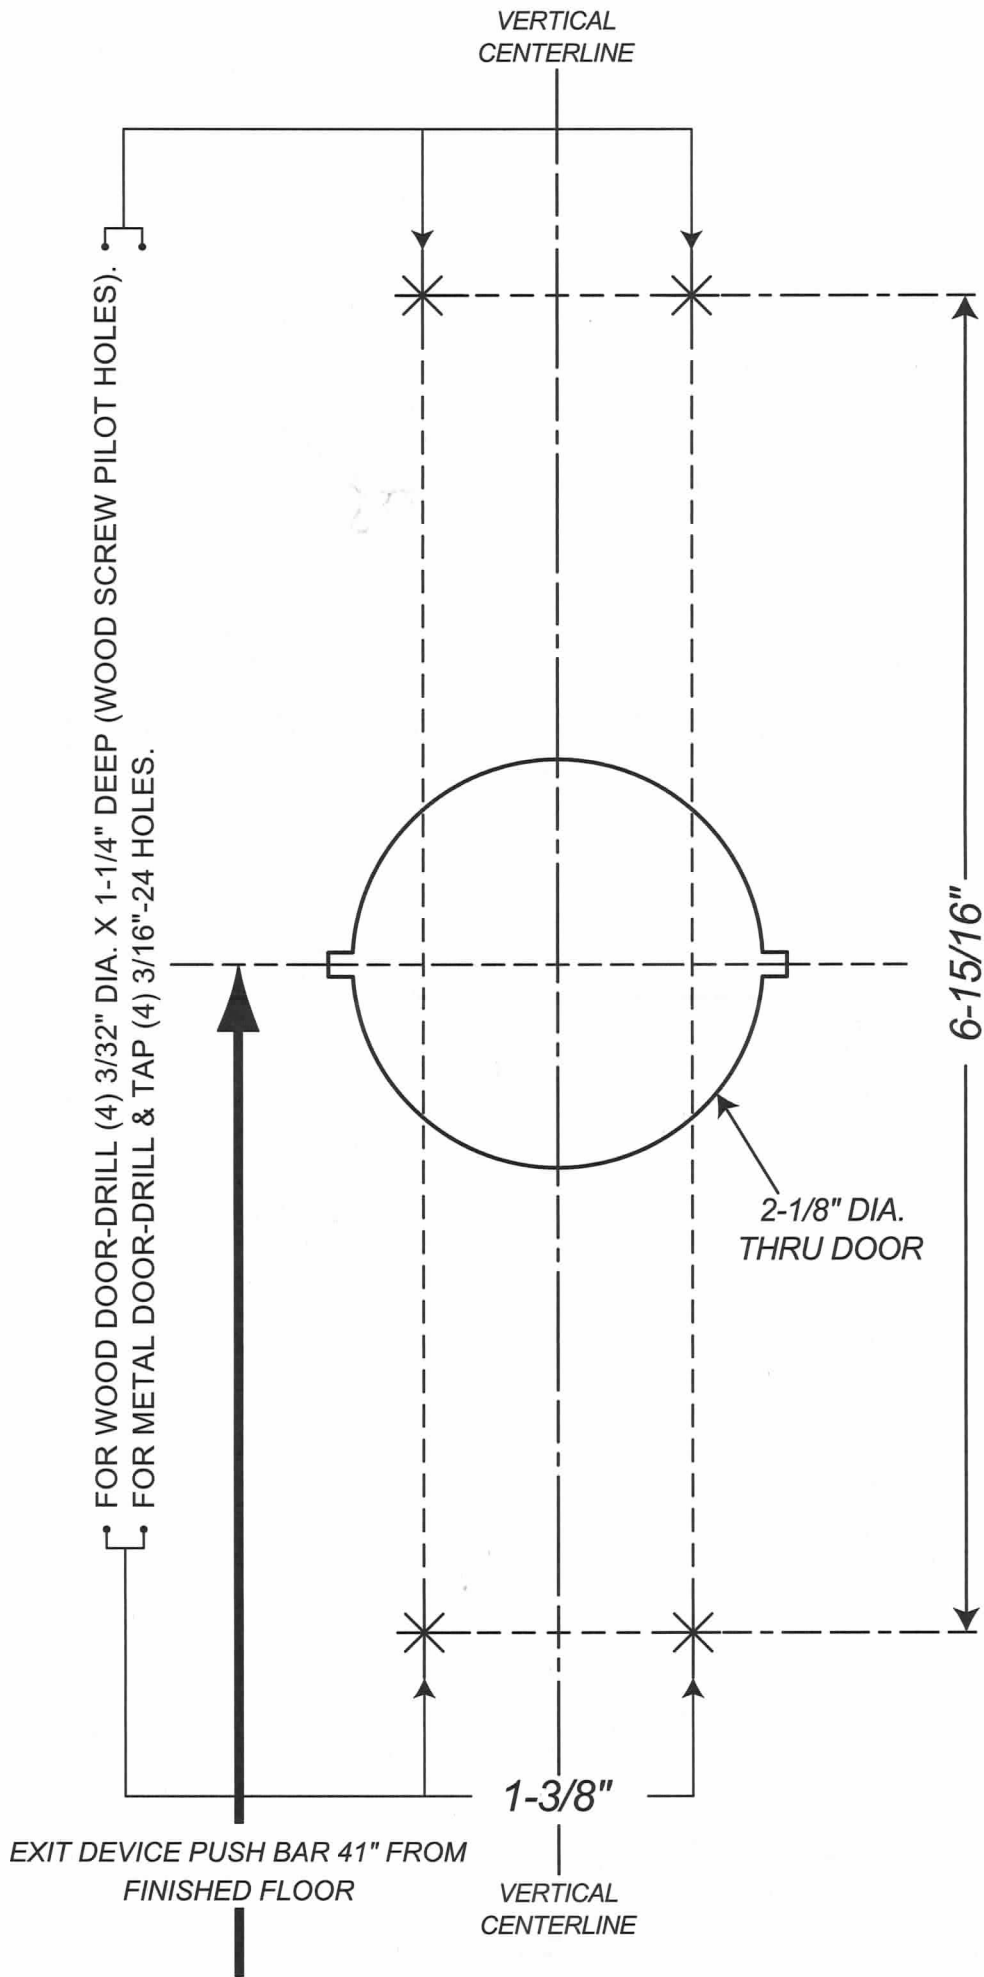

TEMPLATE FOR RIM EXIT DEVICES


FOR LOCATION OF SERIES RIM & VERTICAL ROD DEVICE
USING PULL TRIM, OR ESC LEVER HANDLE TRIM

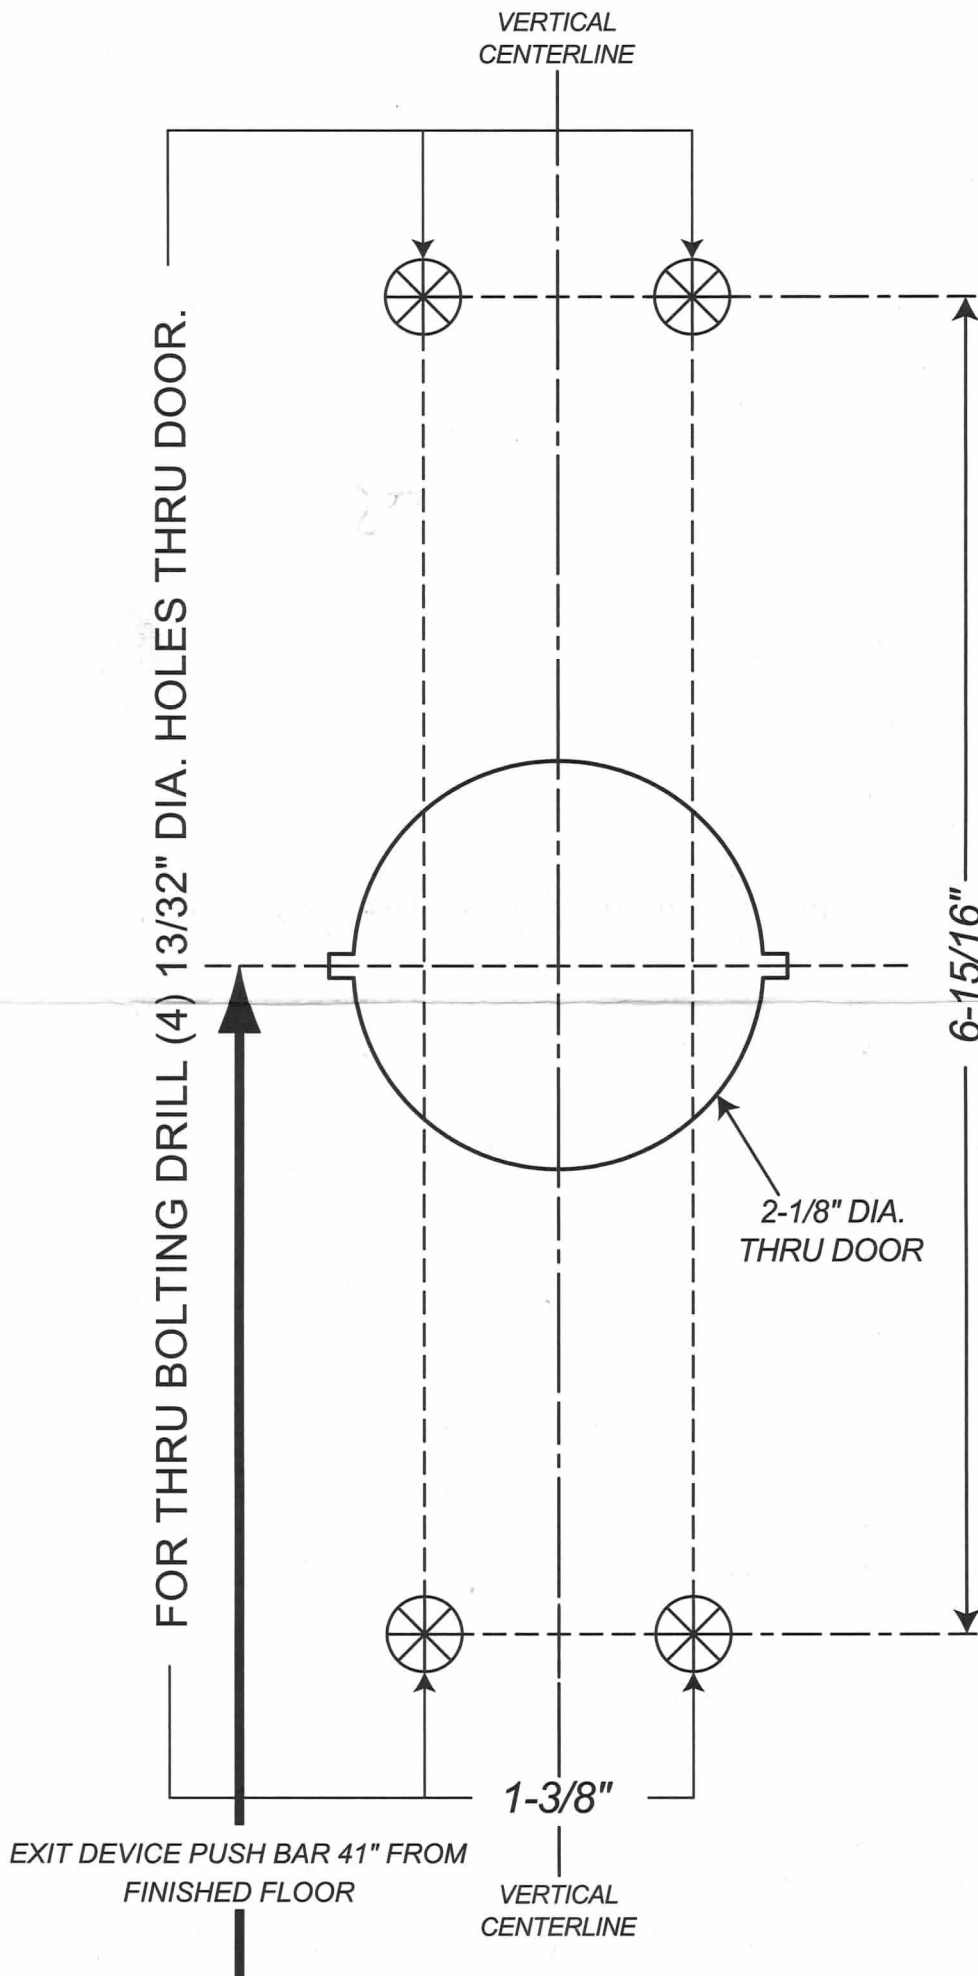


TEMPLATE FOR RIM EXIT DEVICES

THIS TEMPLATE NOT TO BE USED FOR 881
MONITOR STRIKE, PREPARE DOOR USING
INSTRUCTIONS PACKED WITH MONITOR STRIKE

THIS TEMPLATE NOT TO BE USED FOR
MONITOR STRIKE PREP DOOR USING
INSTRUCTIONS PACKED WITH MONITOR STRIKE

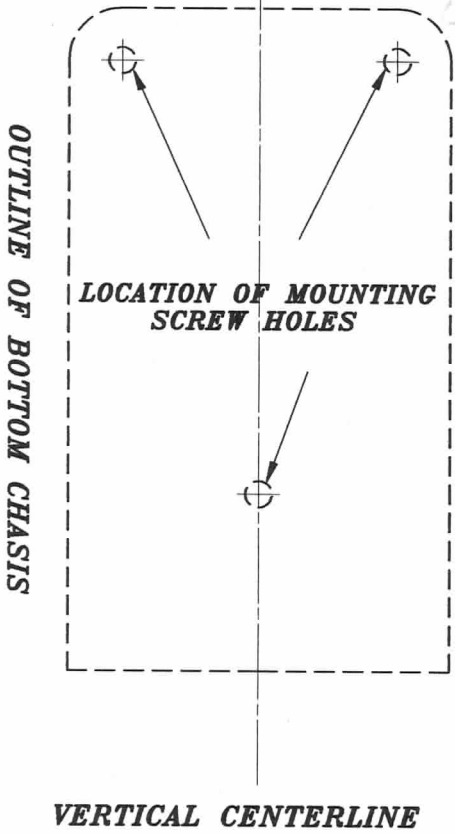

3100

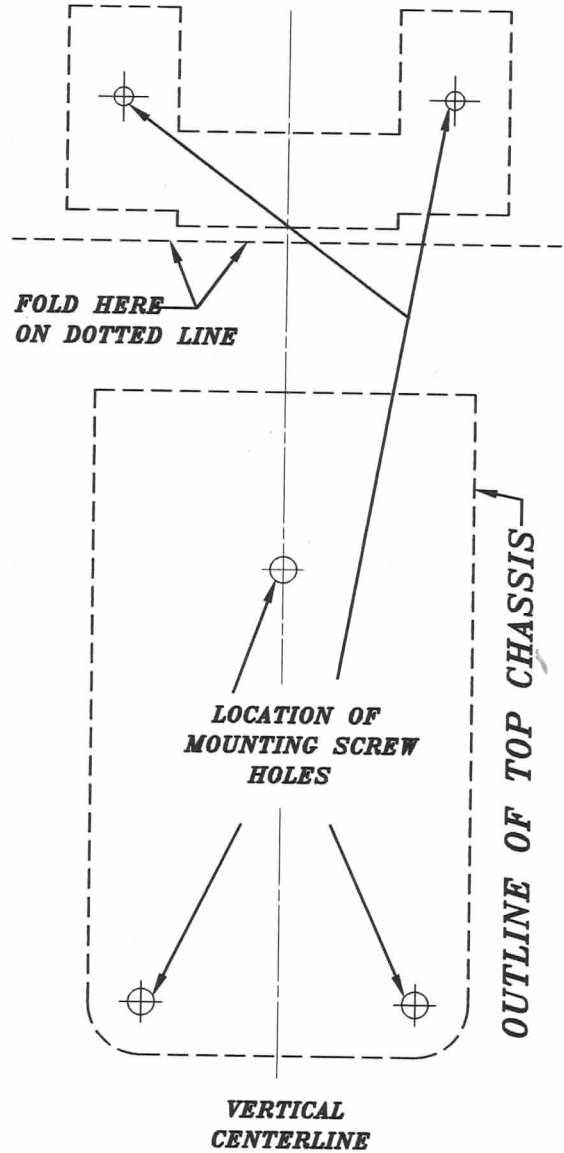

3100