



Installation Instructions-Tubular Monolithic Entry Set - Double Cylinder Deadbolt

Door Prep - Active Lock

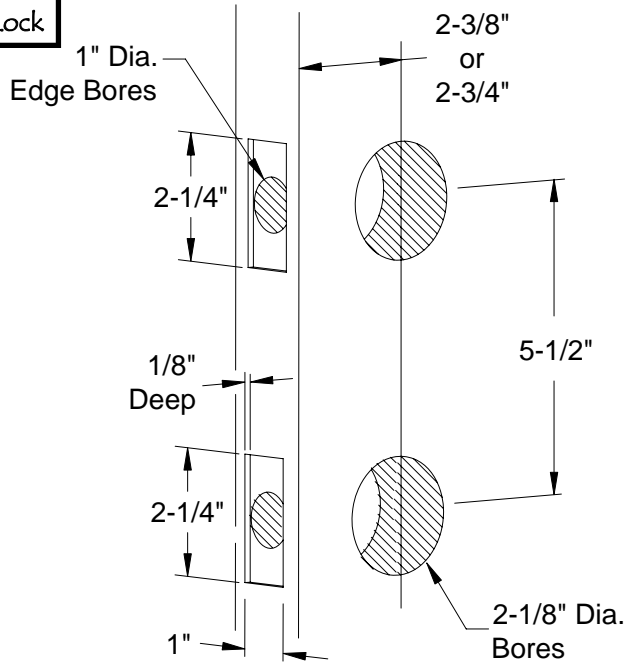


Door Jamb for Active Locks

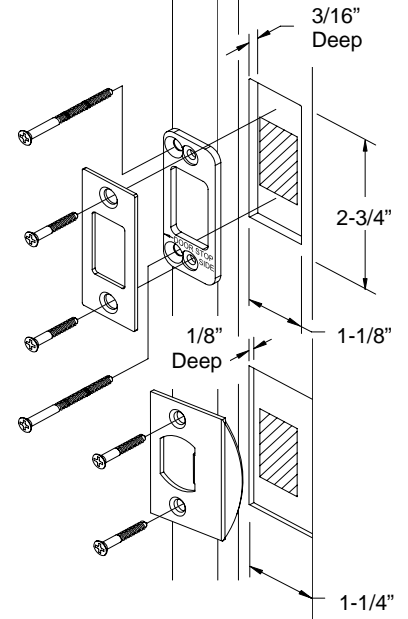


Outside Trim

Tailpiece Horizontal

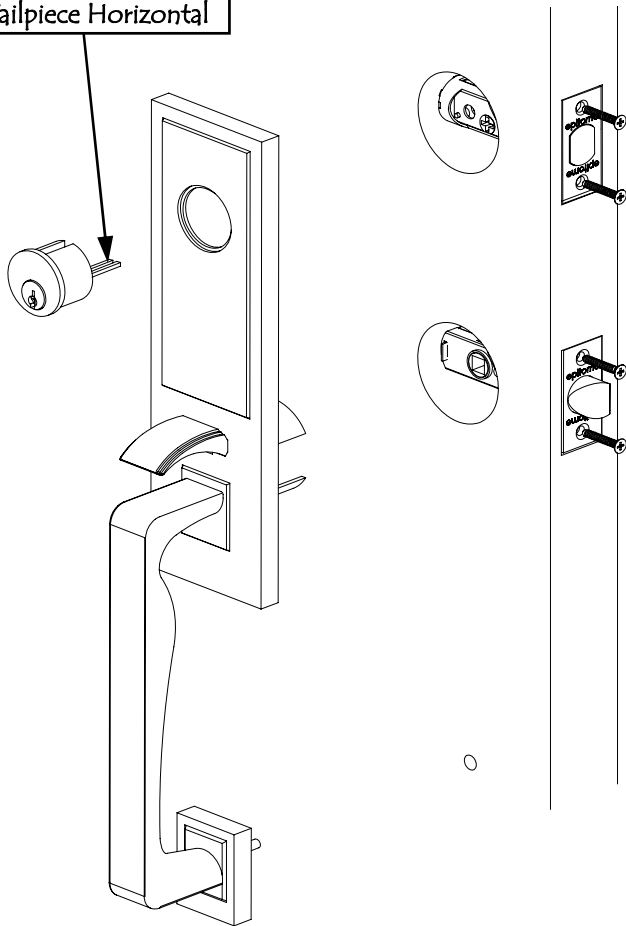

Inside Trim

Tailpiece Vertical

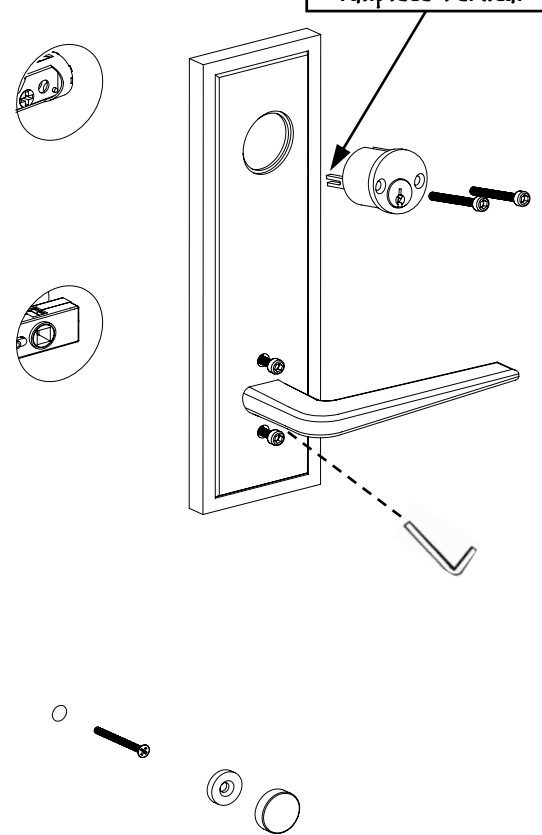

Plates and grip vary depending on style.

epitome<sup>®</sup>  
ASSA ABLOY

After lock has been installed tighten set screw with allen wrench.