
## 25-C Concealed Vertical Rod Centerslide Preparation

Panic Devices - Wood Door, LHR Shown, RHR Opposite

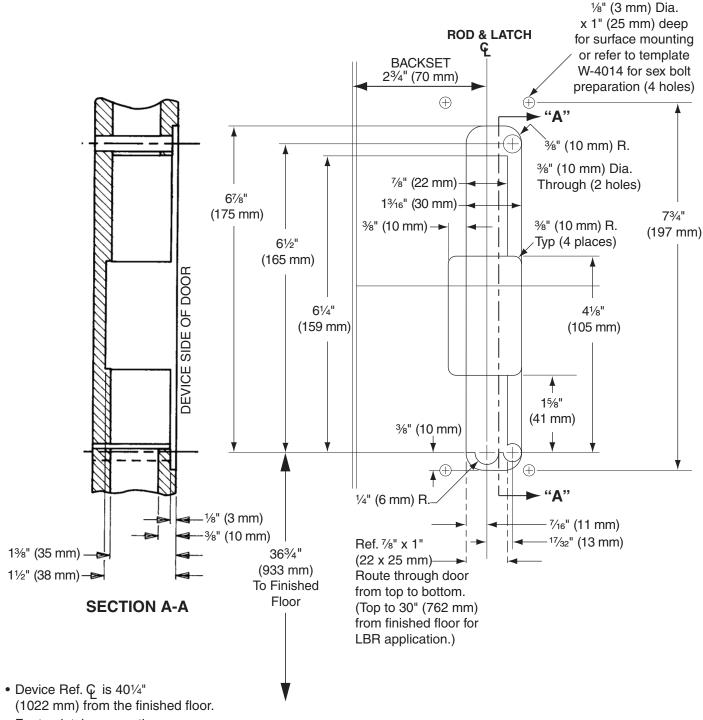

- For top latch preparation, refer to Template W-1282.
- For bottom bolt preparation, refer to Template W-1283.
- For Less Bottom Rod (LBR) application omit bottom bolt preparation.
- For outside trim, see trim template for door preparation.

**TEMPLATE** 

W-1281-c