


(F)XX-M Device with FSA or FSE Feature

Metal Door, LHR Shown, RHR Opposite

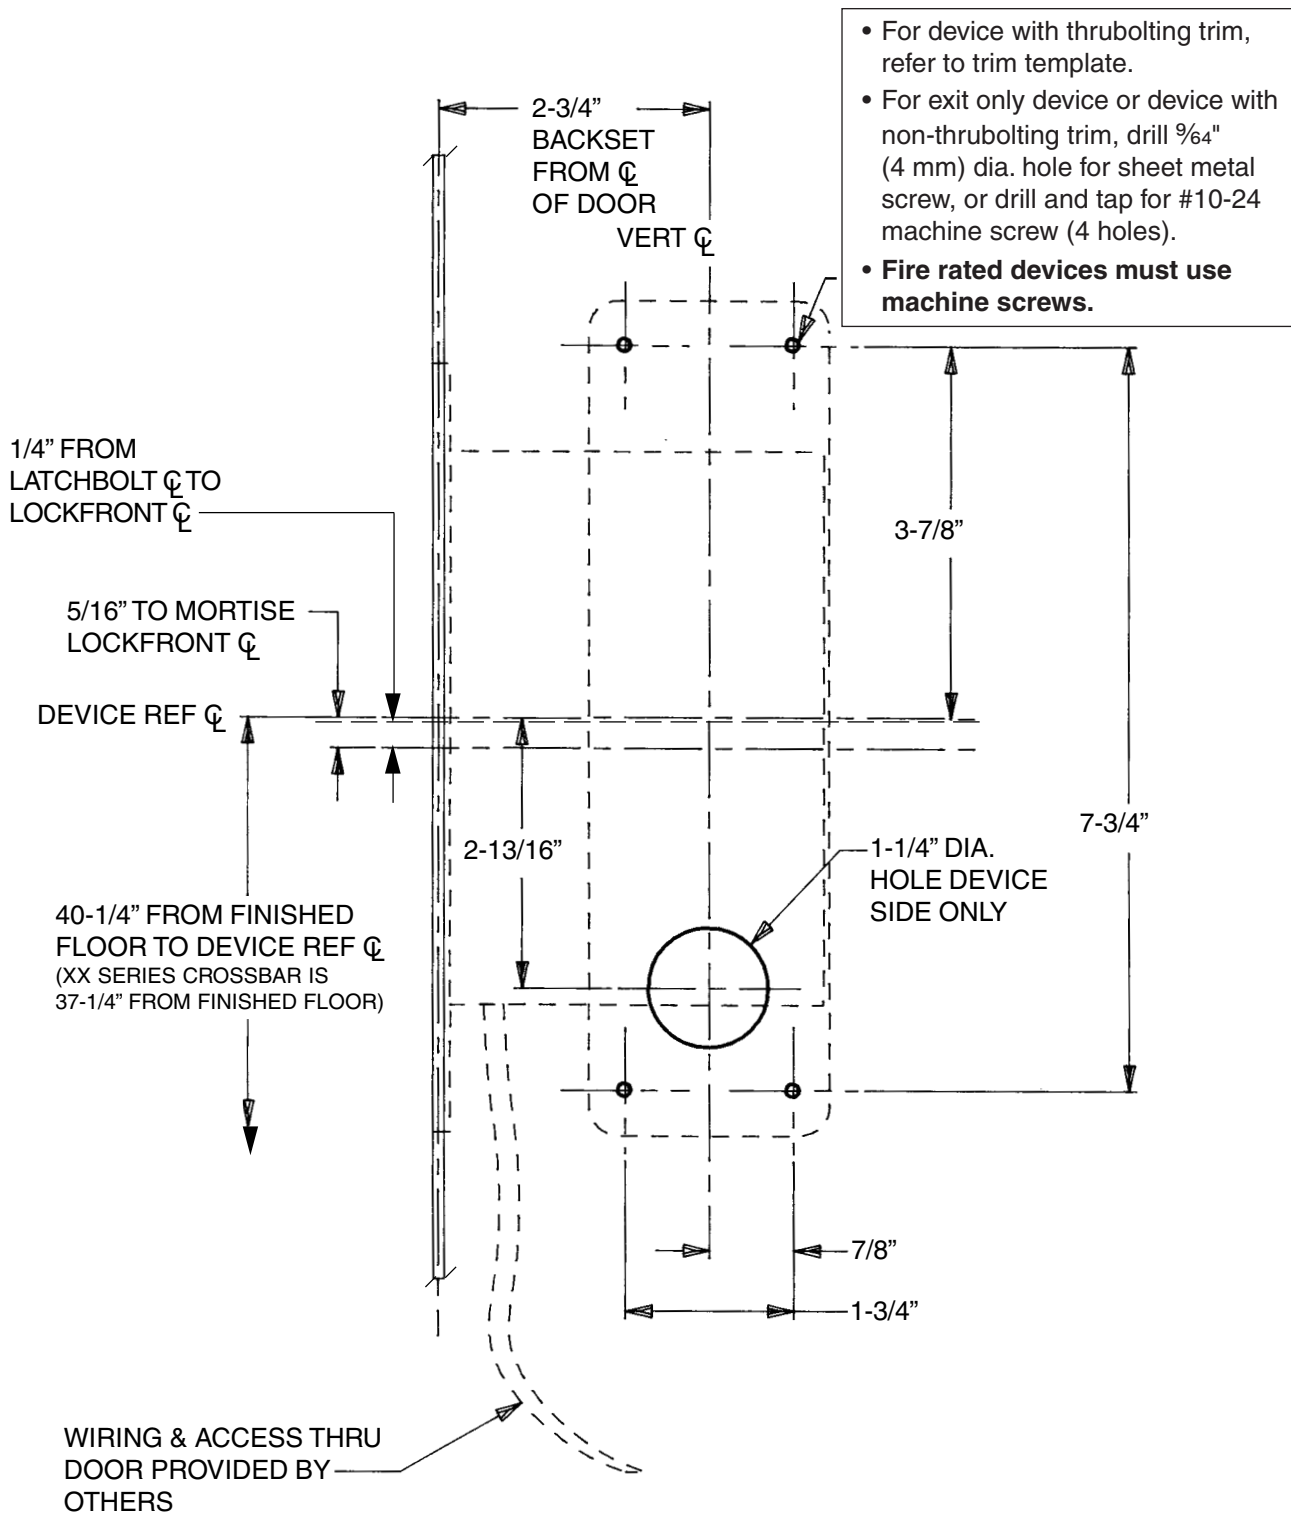

- For doors with existing mortise lock preparation, the device ref \varnothing is $\frac{5}{16}$ " (8 mm) above the lockfront \varnothing .
- See Template T-4012 for mortise lock preparation.
- For outside trim, see trim template for door preparation.
- For sexbolt preparation, refer to Template T-4014.
- See Master Sheet #0100 for suggested reinforcing.

TEMPLATE
T-5010-a