


## FALCON 20

### RAISED LIP PULL PLATE TEMPLATE

#### Cylinder Pull Plate

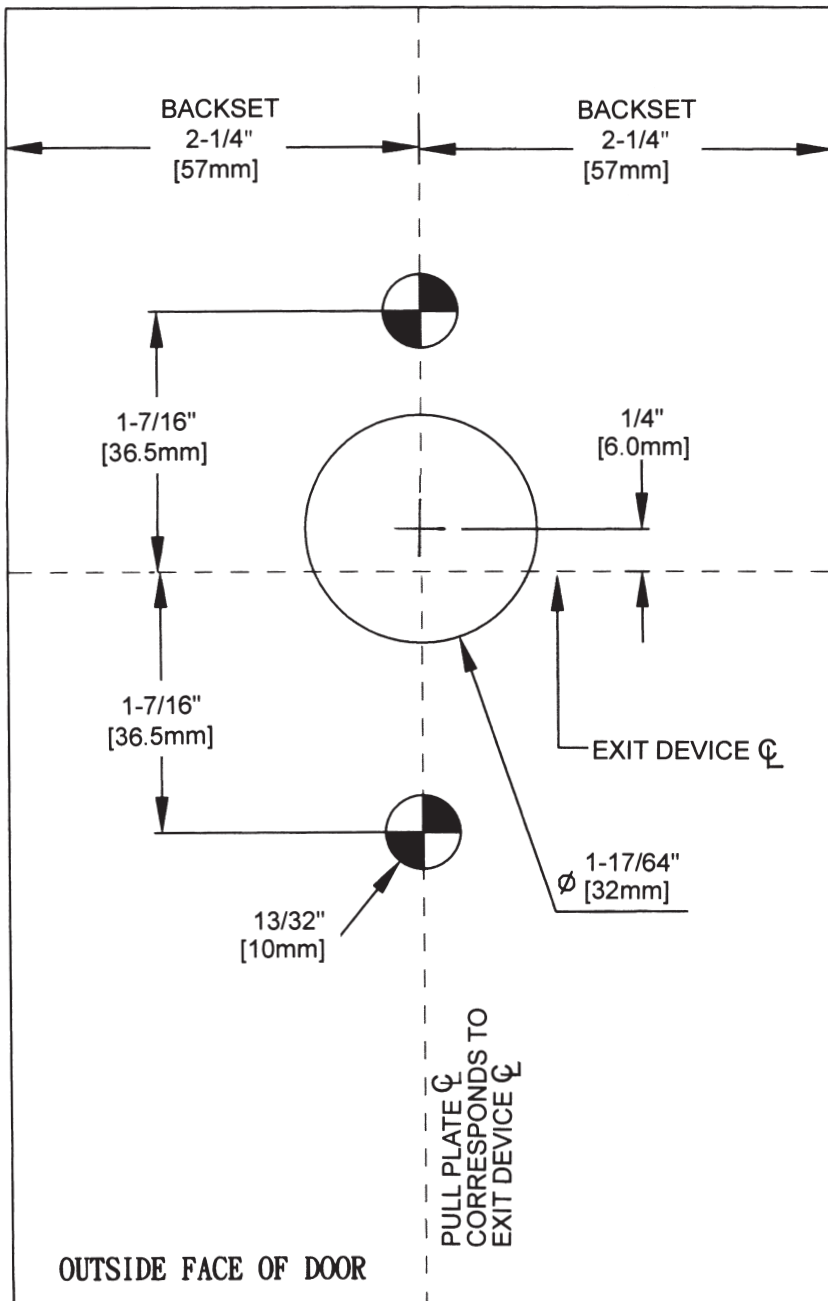

#### Simple installation instructions:

1. Drill two 13/32"(10mm) Dia. through holes on outside face of door for sex bolts use, shown as the marks.

For Metal Door Application:  
 9/32"(07mm) Dia. Drill Inside  
 13/32"(10mm) Dia. Drill Outside

For Wood Door Application  
 13/32"(10mm) Dia. Drill Through

2. Drill 1-17/64"(32mm) Dia. on outside face of door for Rim Cylinder use.
3. Fasten supplied mounting screws into the sex bolts from inside of the door. The two screws must go through the device chassis.
4. Install cylinder, see the instructions of this Raise Lip Pull Plate.

#### Note:

1. For single door and double door with mullion use, the backset 2-1/4" (57mm) is to *stop face*.
2. For double door without mullion use, the backset 2-1/4" (57mm) is to door edge.



HOLE MARK

PRIMARY DIMENSIONS SHOWN IN INCHES,  
 DIMENSIONS IN [ ] ARE MILLIMETERS.

**FOR REFERENCE ONLY!**

**DRAWING IS NOT TO SCALE!**