FALCON


Installation Instructions


1. Prepare frame header for filler or adapter plate. Install filler or adapter plate and top bracket.

For RM70 and RM170, see Figures 1 and 2. (Filler, filler mounting screws, and bracket mounting screws by others.)

For RM70A and RM170A, see Figures 3 and 4.

- 2. Prepare floor and threshold for bottom bracket. Install bottom bracket (Figures 5 and 6, other side).
- 3. Cut mullion to length from top (Figures 7 and 8, other side).
- 4. Slide mullion over top fitting and swing into position on bottom fitting (Figure 9, other side).
- 5. Slide mullion clamp over top fitting and secure with three screws (Figure 10, other side).
- 6. Install security clips on door (Figure 11, other side).

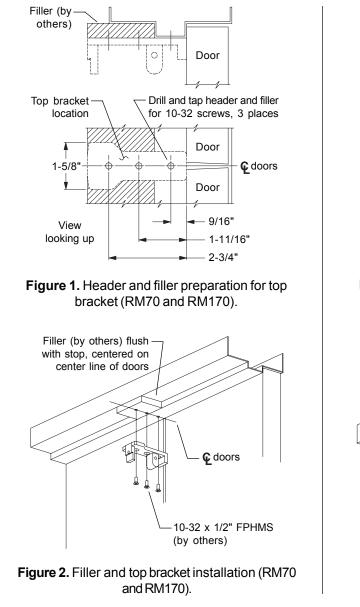

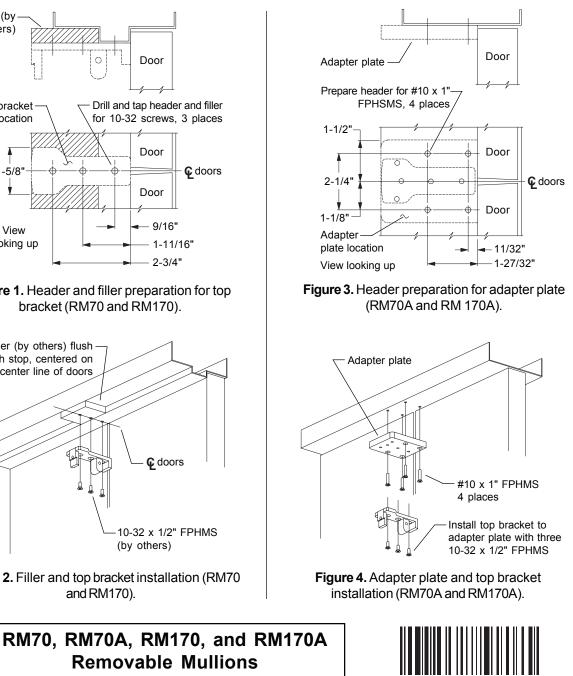



Customer Service	
1-877-671-7011	www.allegion.com/us

© Allegion 2016 Printed in U.S.A. 4270108237 Rev. 12/16-f

PAGE

Removable Mullions

PAGE NO.	REVISION
1 of 2	F



4270108237

