
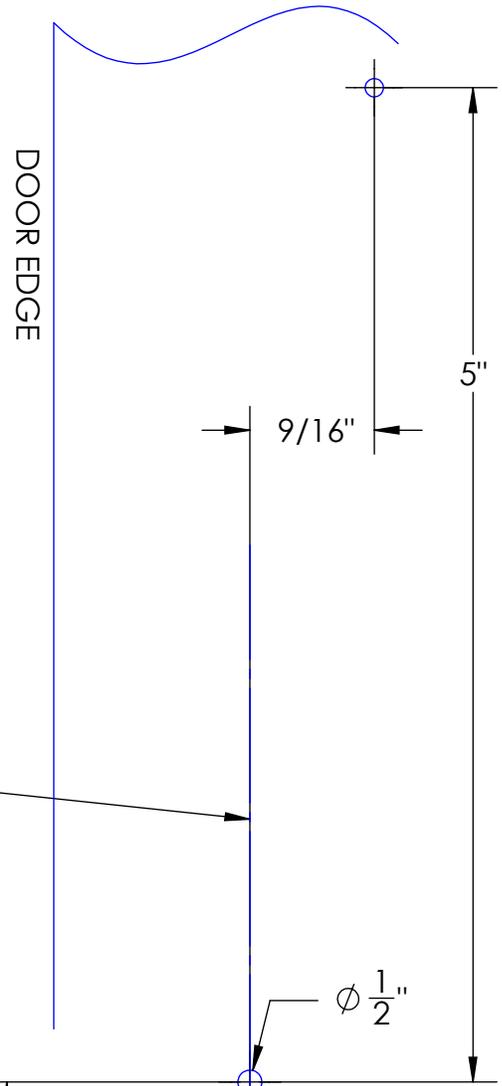


# LEVER INSTALLATION TEMPLATE


for First Choice for CVR 3690 Exit Device  
Model L3620 Lever Trim Right Hand Reverse Bevel  
With out electric control

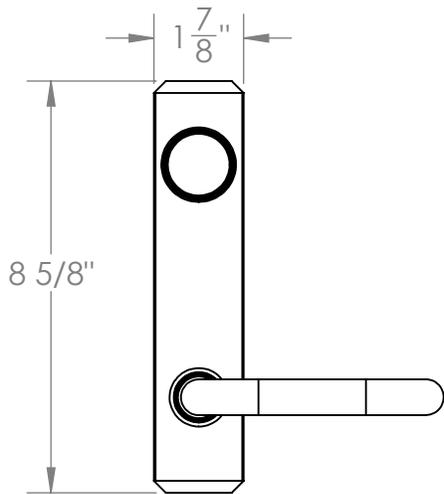

SEE EXIT DEVICE  
TEMPLATE FOR  
BACKSET

## DOOR & FRAME PREPARATION INSTRUCTIONS

FOR CENTERLINE REFERENCE USE THE EXIT DEVICE  
TEMPLATE TO  
LOCATE PINION GEAR HOLE, ALSO KNOWN AS  
THE OPERATOR HOLE.

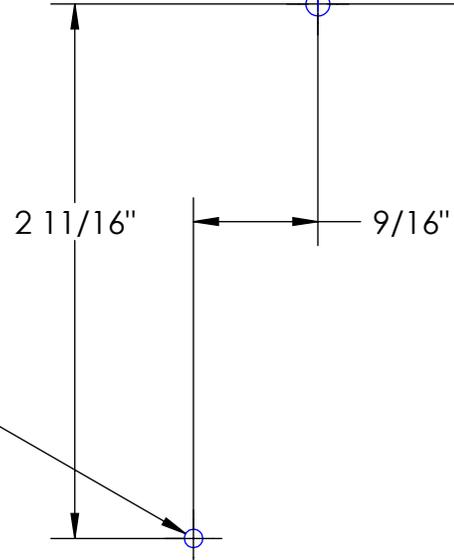

3/8" drill on exterior  
side and countersink  
for #10-32 on interior  
side of door 2 places

**FIRST CHOICE**  
BUILDING PRODUCTS

REVISED: 08.05.2011

Template shows exterior of door