
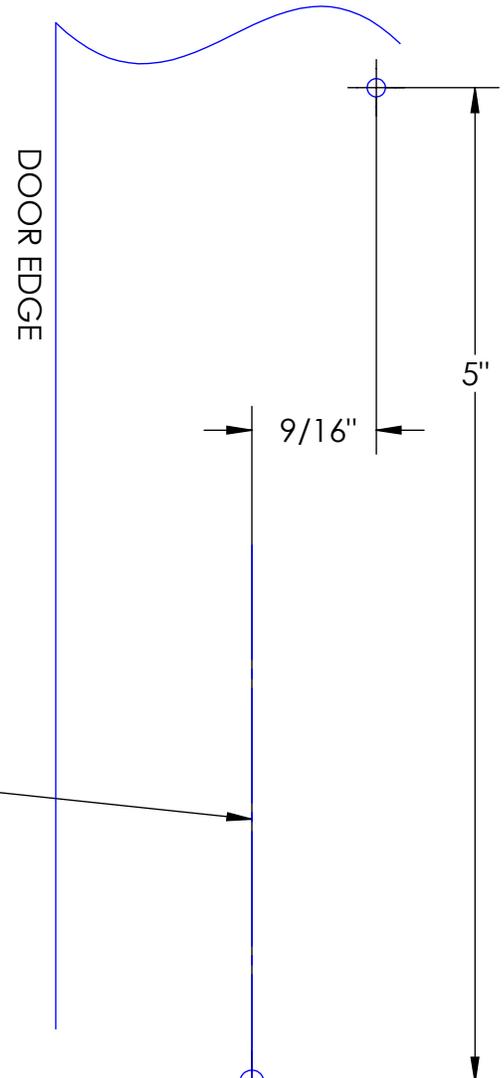


LEVER INSTALLATION TEMPLATE


for First Choice for CVR 3690 Exit Device
Model L3620-M0 Lever Trim Right Hand Reverse Bevel
INACTIVE LEVER
With out electric control

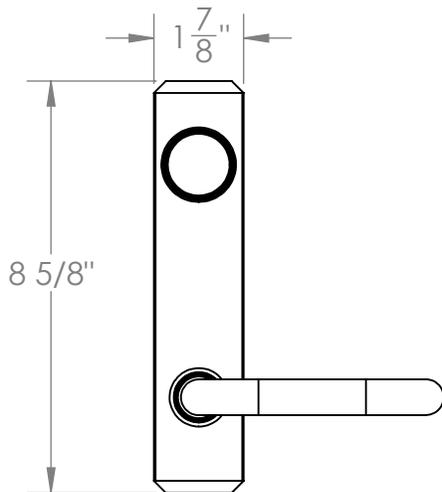

SEE EXIT DEVICE
TEMPLATE FOR
BACKSET

DOOR & FRAME PREPARATION INSTRUCTIONS

FOR CENTERLINE REFERENCE USE THE EXIT DEVICE
TEMPLATE TO
LOCATE PINION GEAR HOLE, ALSO KNOWN AS
THE OPERATOR HOLE.

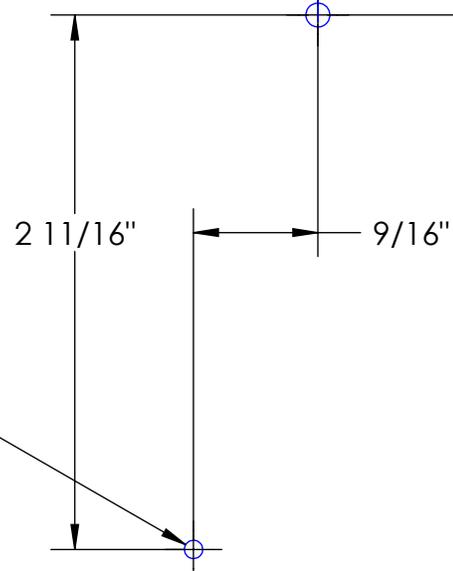

3/8" drill on exterior
side and countersink
for #10-32 on interior
side of door 2 places

FIRST CHOICE
BUILDING PRODUCTS

REVISED: 08.05.2011

Template shows exterior of door