
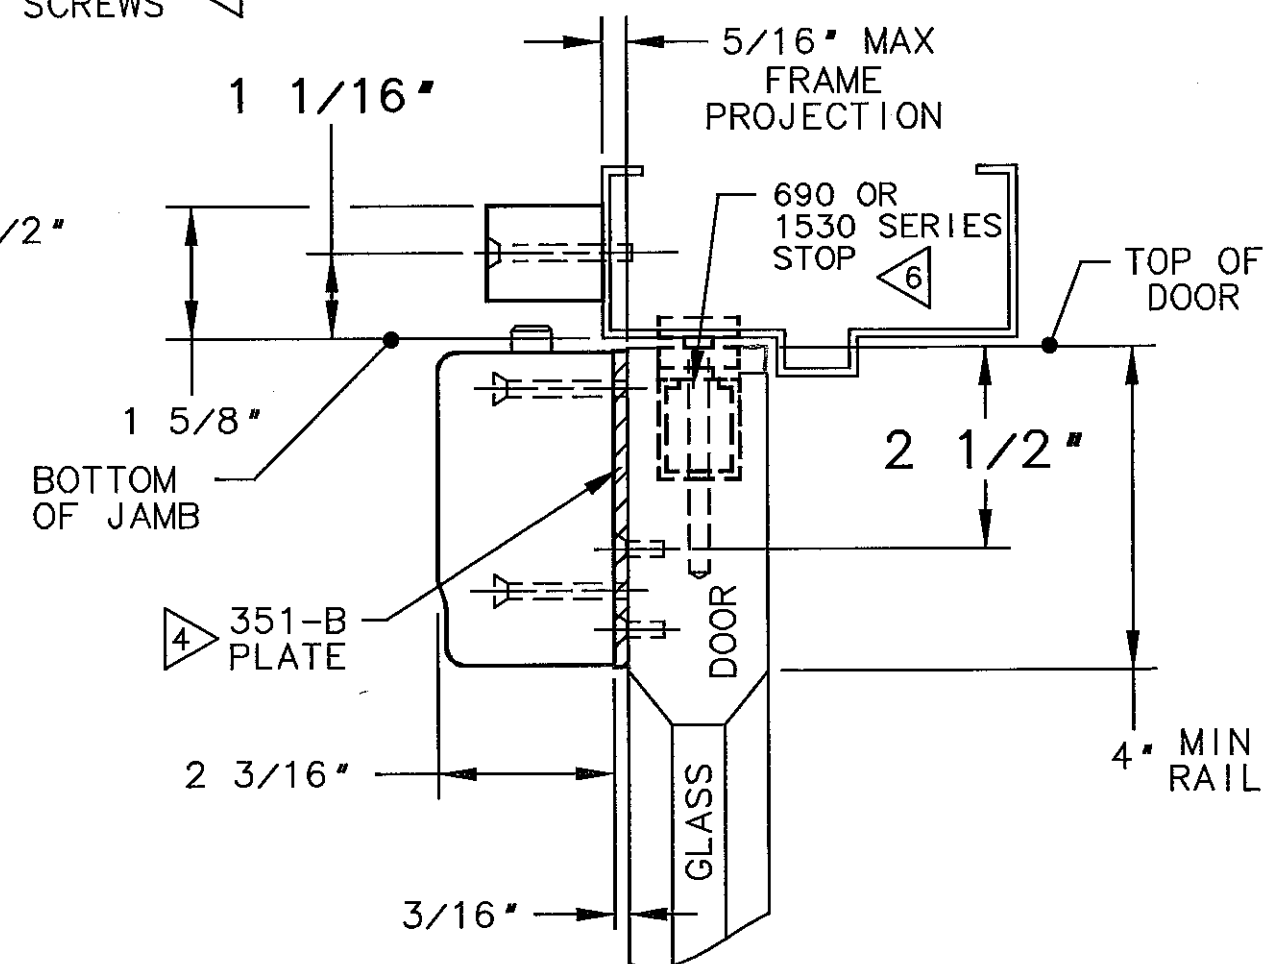
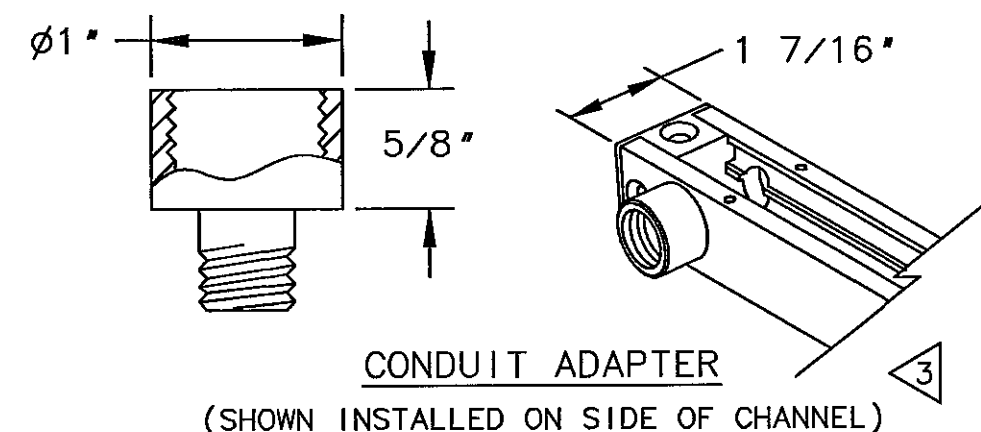


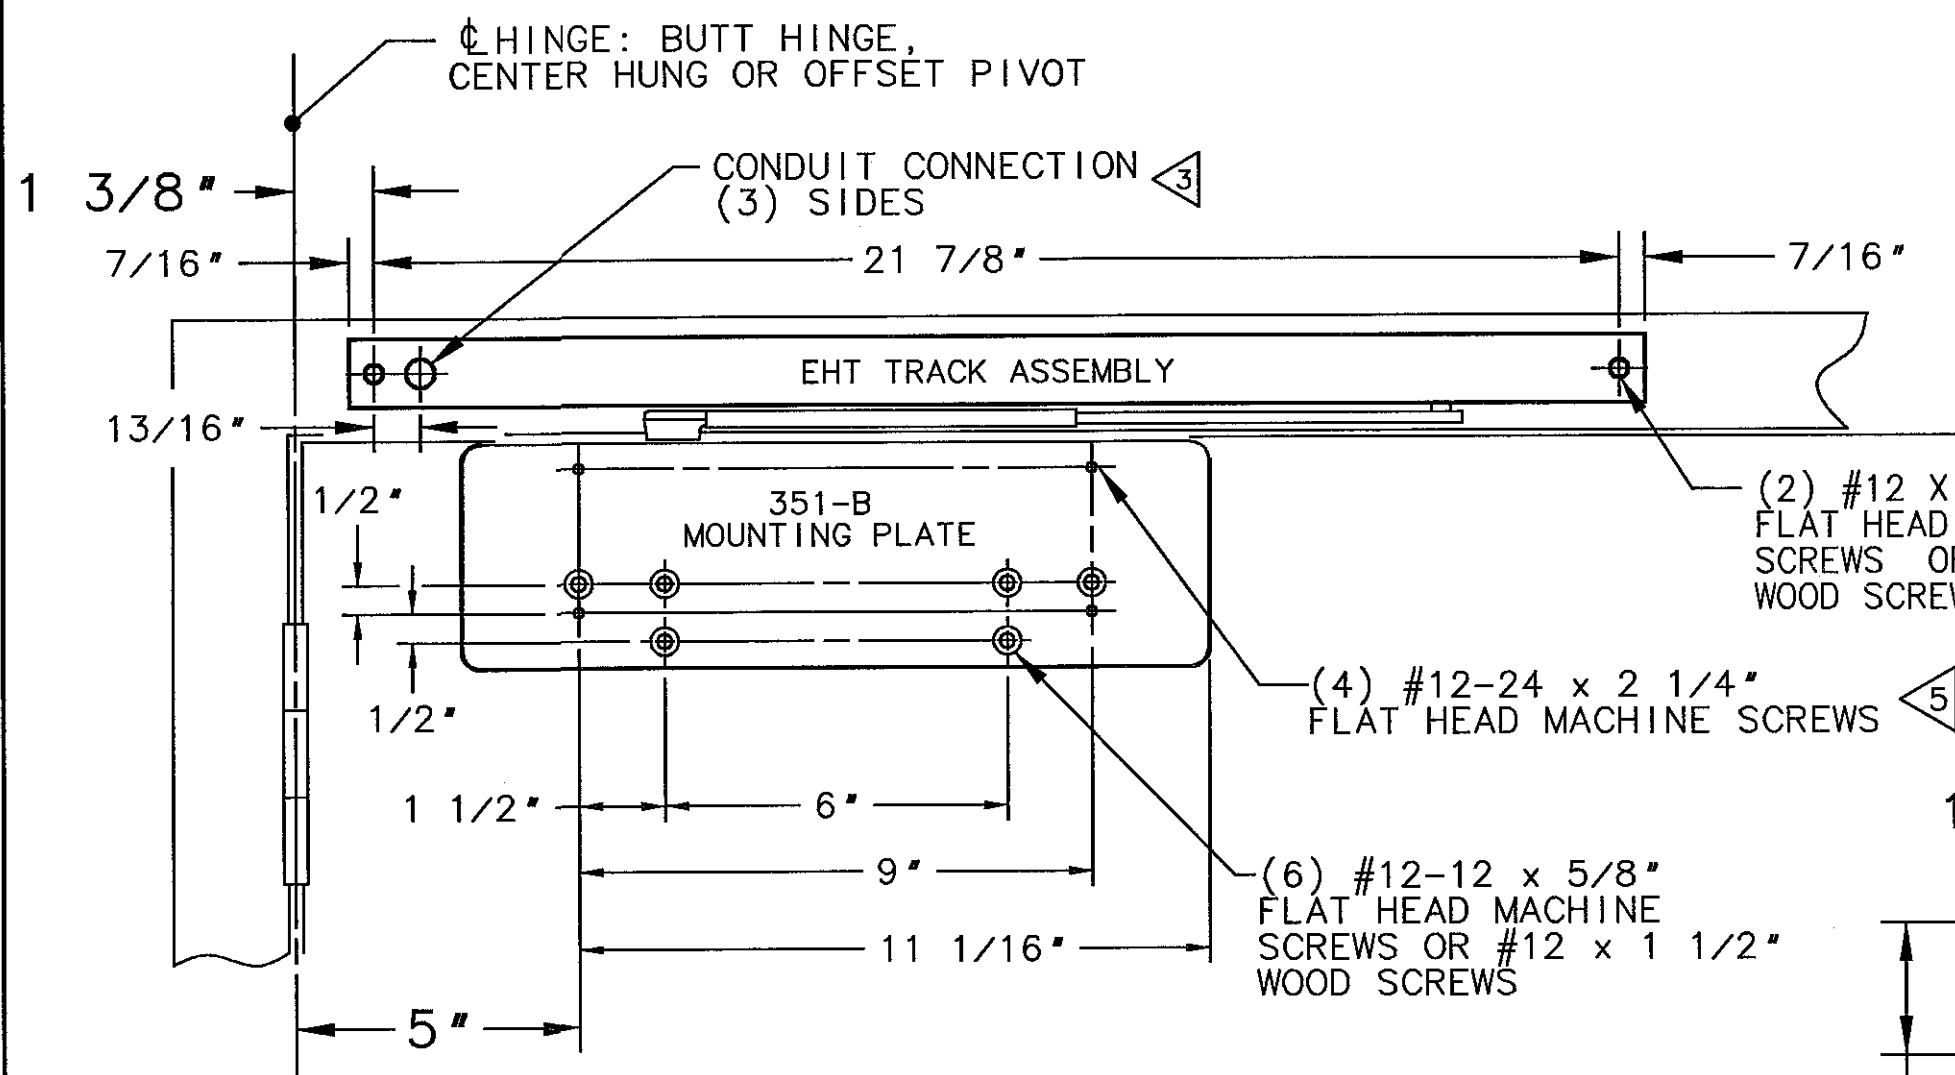

NOTES

1. REINFORCE METAL DOORS AND FRAMES PER ANSI A250.8 & SDI-100, 12 GAUGE RECOMMENDED.
2. RIGHT HAND DOOR SHOWN, LEFT HAND OPPOSITE.
3. (3) HOLES ARE PROVIDED FOR THE CONDUIT CONNECTION. AN ADAPTER IS INCLUDED THAT THAT ACCEPTS STANDARD 1/2" THREADED CONDUIT.
4. THE 351-B MOUNTING PLATE IS REQUIRED FOR WOOD DOORS & SEVERE DUTY APPLICATIONS AND MAY ALSO BE USED TO AVOID SHORTENING THE UPPER CLOSER MOUNTING SCREWS ON 690 INSTALLATIONS.
5. WHEN A 351-B IS USED, PROVIDE 5/16" DIA. CLEARANCE HOLES IN DOOR FOR CLOSER MOUNTING SCREWS WHICH PROTRUDE 1/8" BEYOND PLATE.
6. OVERHEAD STOPS SHOULD BE INSTALLED AT THE DESIRED DOOR POSITION (85°-110°) AS GIVEN IN THE TABLES ON TEMPLATES A7482-A7484 FOR 697-699 INSTALLATIONS AND A7485-A7487 FOR 1536-1539 INSTALLATIONS. THE HOLD OPEN POSITION CAN THEN BE SET BY ADJUSTING THE LENGTH OF THE 351-EHT ARM. NOTE: THE EHT ARM SHOULD BE ADJUSTED SO THAT THE DOOR HOLDS OPEN JUST PRIOR TO THE STOP POSITION.

SARGENT® Manufacturing Company
100 Sargent Drive New Haven, CT 06511

DATA SHEET: 351EHT SERIES
CLOSER-HOLDER, PULL SIDE
APPLICATION WITH A 690 OR
1530 SERIES STOP

EFFECTIVE DATE
17 JULY 03
TEMPLATE NO.
A7638 A