


Installation Instructions for 11-(70-73-43) Small Format Interchangeable Core Cylinders

FOR ASSISTANCE, CONTACT SARGENT AT 800-727-5477 or www.sargentlock.com

1. Install cylinder set screw (#12-24), slotted end first in to cylinder housing.
2. Using a 1/8" flat blade screw driver inserted through the "figure 8" opening, screw the set screw in until the pointed end is just below the threads on the outside of the cylinder body.
3. Orient the cam upright and install the mortise cylinder housing into the trim/lockset by turning clockwise.
4. When mortise cylinder housing is installed into the trim/lockset, tighten the cylinder set screw to fix the mortise cylinder housing in place. Use caution so that the set screw tightens into the mortise lock case and does not fall into lock body. This set screw is used with a mortise cylinder housing to prevent unauthorized removal of the cylinder and lock.

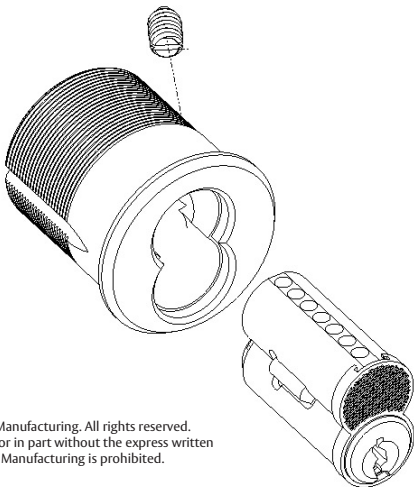

Copyright © SARGENT Manufacturing. All rights reserved.
Reproduction in whole or in part without the express written
permission of SARGENT Manufacturing is prohibited.