


SARGENT 881 MONITOR STRIKES INSTALLATION INSTRUCTIONS

For installation assistance call SARGENT at 1-800-727-5477 • www.sargentlock.com


1 FRAME PREPARATION

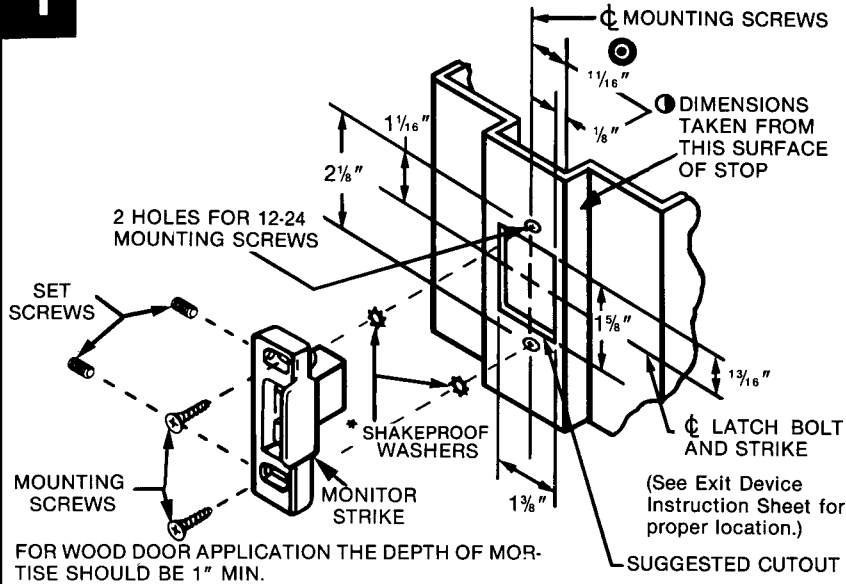

2 APPLY STRIKE

1. IDENTIFY TYPE OF INSTALLATION.
 - A. Single Door
 - B. Double Door
 - C. Vertical Rod
2. LOCATE STRIKE & EXIT DEVICE ACCORDING TO TYPE OF INSTALLATION.
3. INSTALL STRIKE TO FRAME OR MULLION USING 2 #12-24 MOUNTING SCREWS
* BE SURE TO PLACE SHAKEPROOF LOCKWASHERS BETWEEN STRIKE AND FRAME OR MULLION.
4. PROVIDE HOLES AS NECESSARY FOR WIRING. REFER TO WIRING DIAGRAM.
5. USE CONNECTORS ALLOWED BY LOCAL CODE.
6. AFTER FINAL ADJUSTMENT OF STRIKE TIGHTEN SET SCREWS FIRMLY AGAINST MOUNTING SCREWS.


A SINGLE DOOR

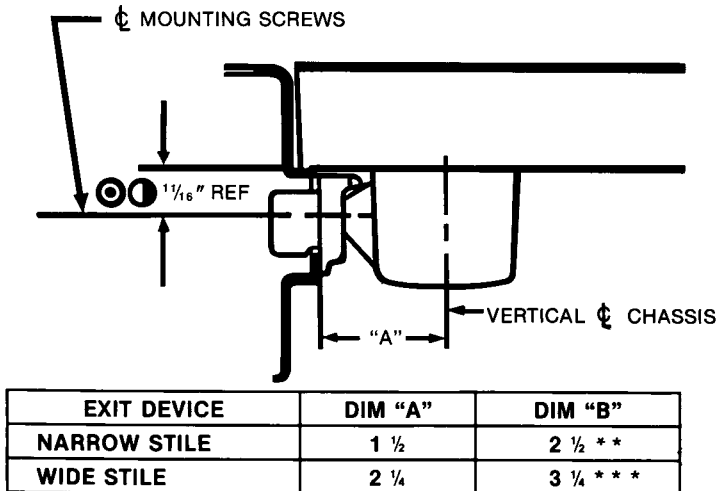


** MINIMUM STILE REQUIREMENT 3 1/2"

*** MINIMUM STILE REQUIREMENT 4 1/2"

C VERTICAL ROD

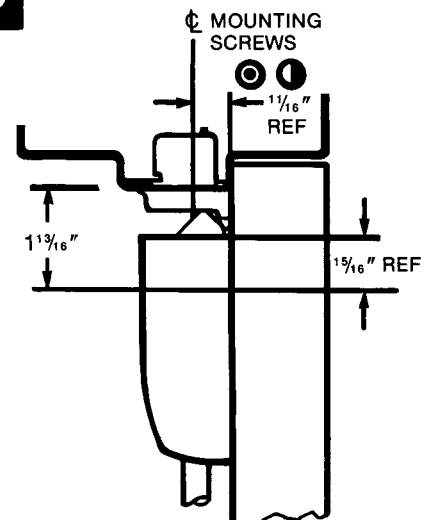

B DOUBLE DOOR

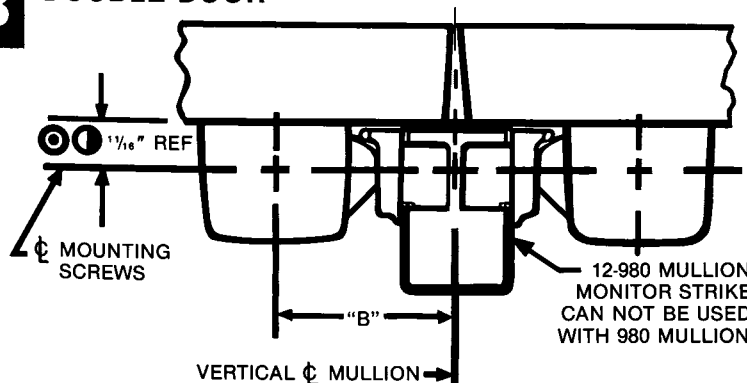

NOTES:


1. ① DIMENSIONS TAKEN FROM SURFACE OF STOP
2. ② IF DOOR SILENCERS ARE USED ON THE DOOR FRAME DECREASE THIS DIMENSION ACCORDINGLY.
1. FRACTIONAL TOLERANCES $\pm 1/32$ "

SARGENT 881 MONITOR STRIKES INSTALLATION INSTRUCTIONS

For installation assistance call SARGENT at 1-800-727-5477 • www.sargentlock.com

ASSA ABLOY, the global leader
in door opening solutions

WIRING DIAGRAM

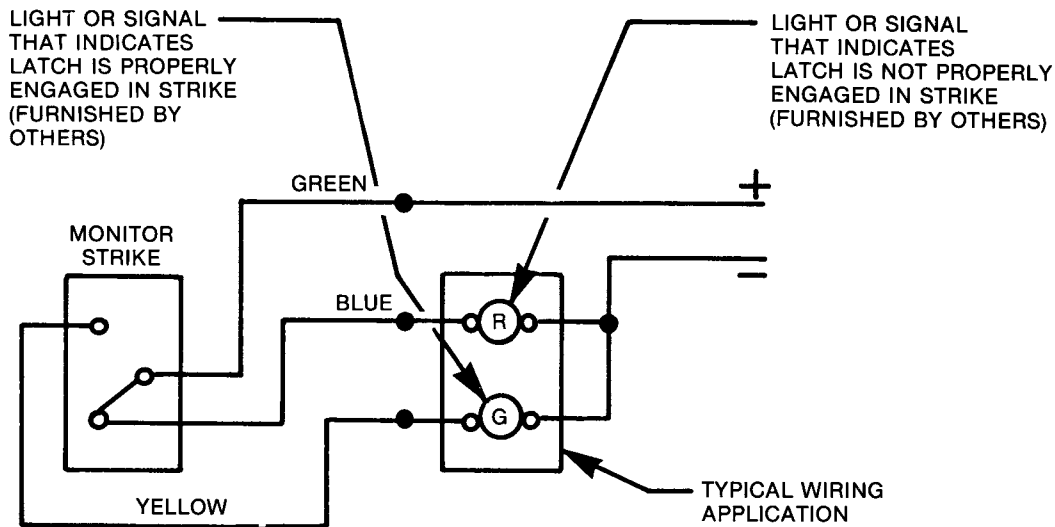

WIRING DIAGRAM
CONTACT RATING 3A 125VAC 2A 30VDC

NOTE:

1. FOR USE WITH CLASS II CIRCUITRY ONLY.
2. WIRING DIAGRAM INDICATES LATCH IS NOT PROPERLY ENGAGED IN STRIKE.