
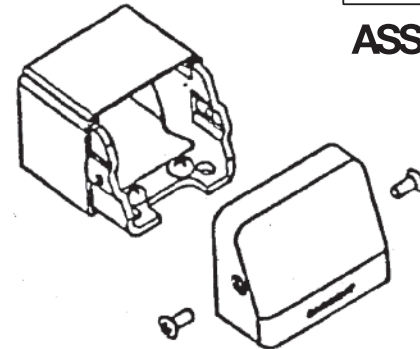


SLIDE MOUNTING PLATE INTO RAIL, UNTIL THE MOUNTING PLATE IS FIRMLY AGAINST THE RAIL.

MOUNTING PLATE BASE SHOULD REST FLAT ON DOOR OR SHIMS, WITH NO OVERLAP OF THE MOUNTING PLATE BASE AND RAIL.

FOR NEW INSTALLATION USE THE INNER MOUNTING HOLES.
(FOR RETROFIT USE WHICH EVER HOLES ARE IN-LINE WITH THE HOLES IN THE DOOR.)

FOR MORE SECURE MOUNTING USE ALL FOUR SCREWS.

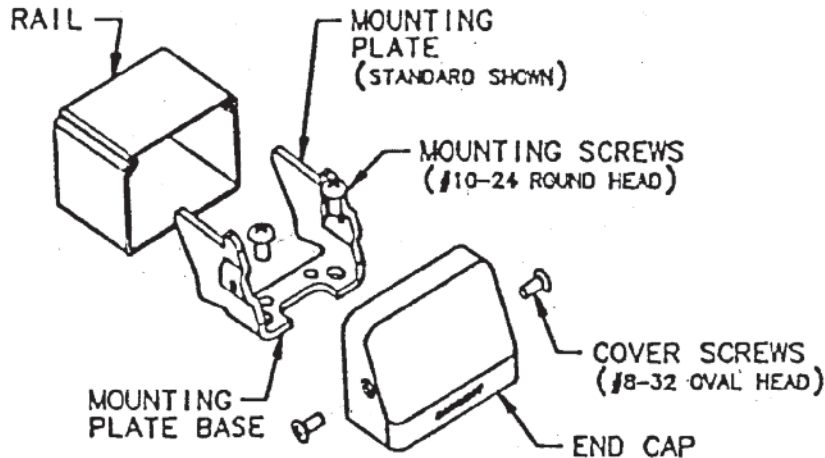

NEW INSTALLATION SHOWN

