
MORTISE CASE CENTER SPRING



IF THE DOOR DOES NOT CONTAIN WELDED TABS IN THE MORTISE POCKET TO CENTER THE LOCK BODY, INSTALL THE PROVIDED CENTER SPRING ONTO THE BACK OF THE MORTISE CASE AS SHOWN. THEN INSTALL THE MORTISE CASE INTO THE DOOR. THIS APPLIES TO THE FOLLOWING PRODUCTS:

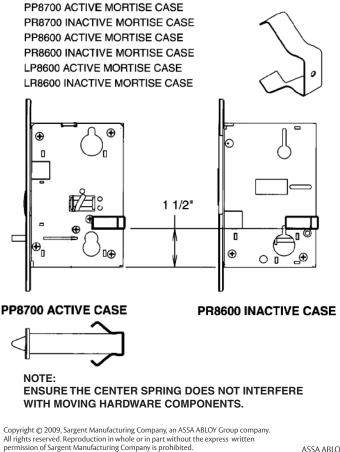

ASSA ABLOY, the global leader in door opening solutions

A7435A