
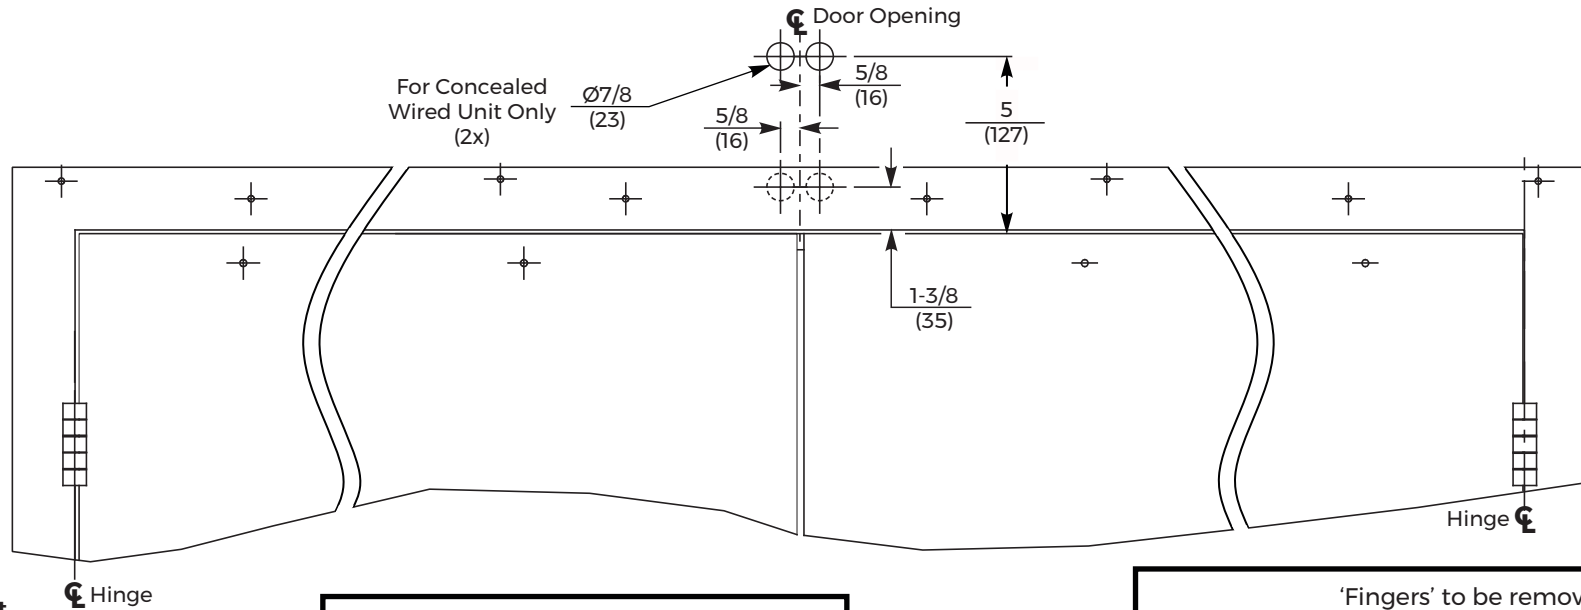


6011/6021/6031/6051/6061/6071 Template for installing conduit holes above frame (into wall)

Approved 2023-09-15

Page 1	 NORTON RIXSON	
	ASSA ABLOY	
TEMPLATE NUMBER	REV	DATE
7360-1043	3	09/23




Pull Side mount shown above

For additional mounting dimensions, refer to installation instructions supplied with product.

'Fingers' to be removed

Before assembly of back plates to frame, large round 'fingers' on each plate to be removed leaving the top holes open for conduit to be attached (conduit has been run thru drywall instead of frame)

Push Side mount shown below

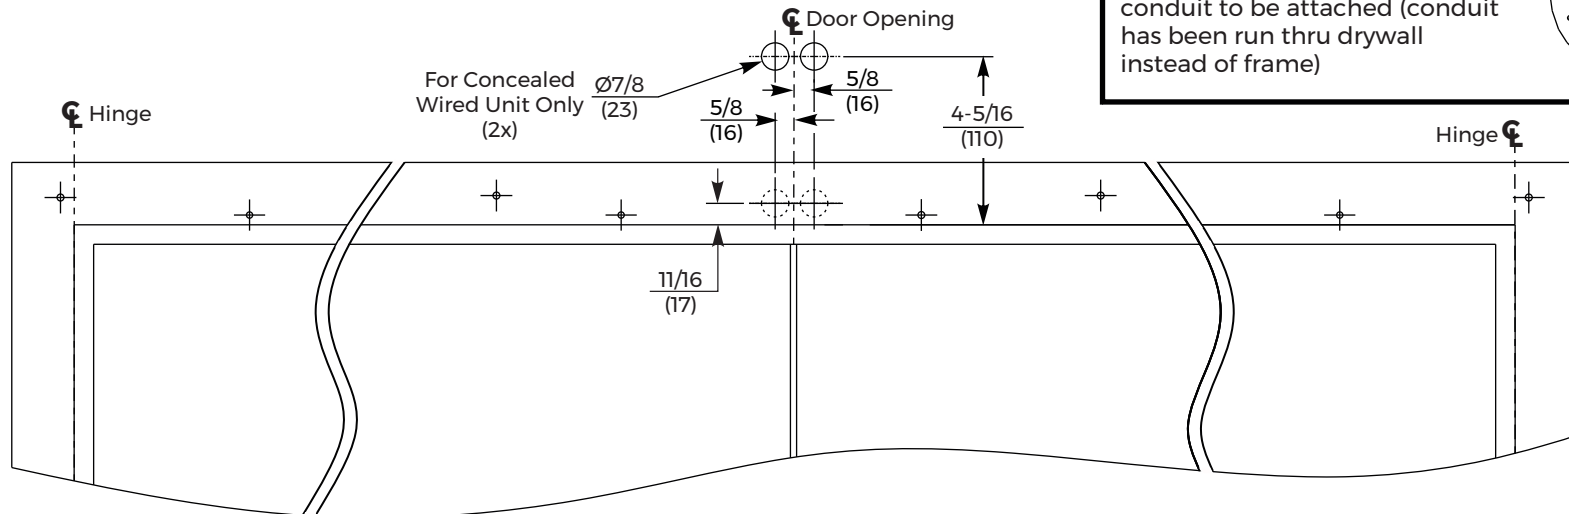

D6011/D6021/D6031/D6051/D6061/D6071 Template for installing conduit holes above frame (into wall)

Page 2



ASSA ABLOY

TEMPLATE NUMBER	REV	DATE
7360-1043	3	09/23