


View from
Ceiling down
Onto Frame

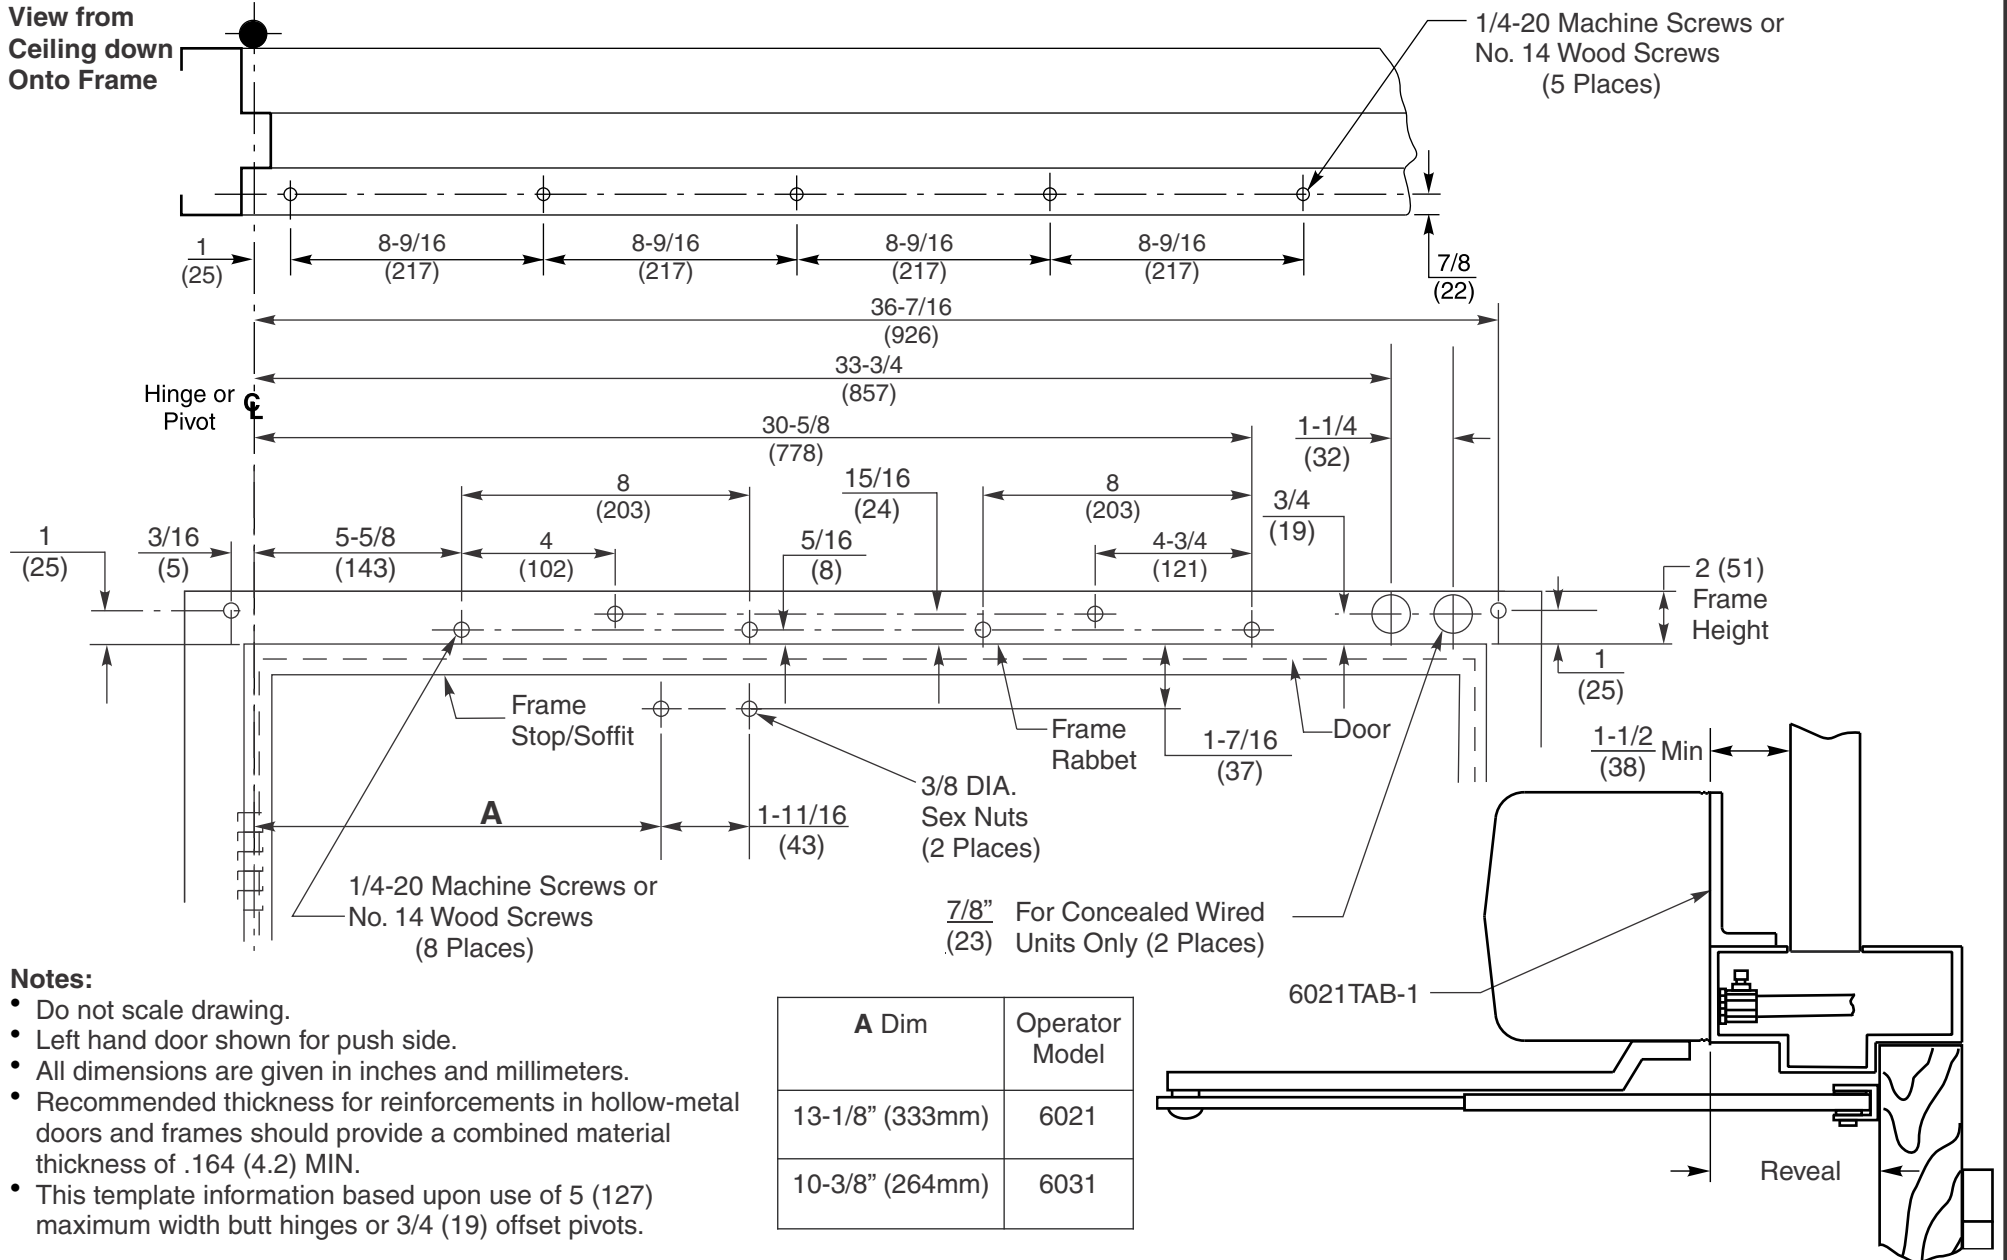

**6021/6031 Series Operator Installation Template
for Transom Application using 6021TAB-1 angle bracket
on 36" wide doors
For Reveal of 2-3/4" (70mm) to 6-7/8" (175mm)**

Norton®

ASSA ABLOY

www.nortondoortcontrols.com

TEMPLATE NUMBER	REV	DATE
80-7360-1022-020	1	07/19