


View from
Ceiling down
Onto Frame

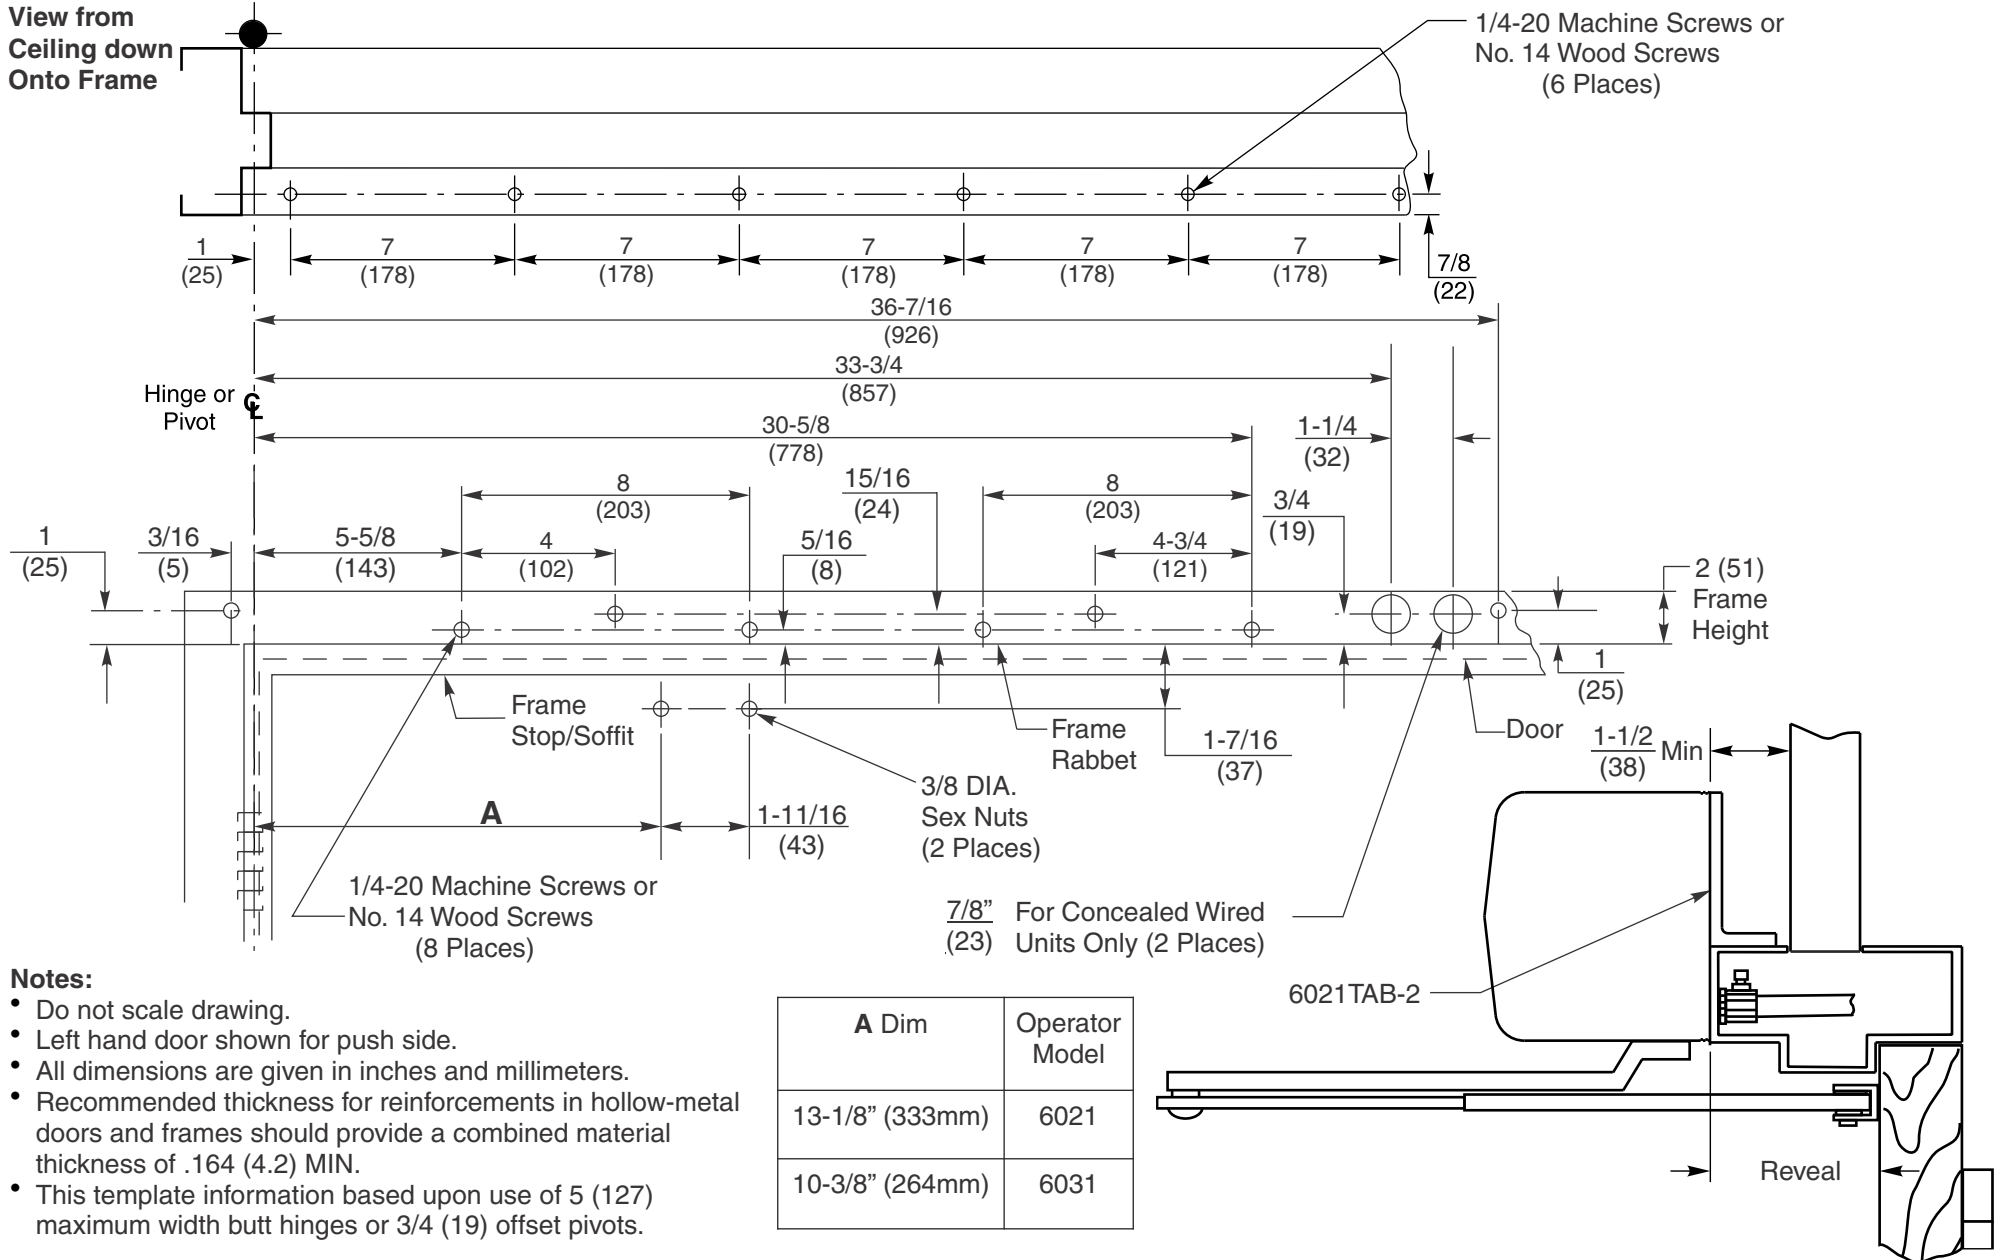

Notes:

- Do not scale drawing.
- Left hand door shown for push side.
- All dimensions are given in inches and millimeters.
- Recommended thickness for reinforcements in hollow-metal doors and frames should provide a combined material thickness of .164 (4.2) MIN.
- This template information based upon use of 5 (127) maximum width butt hinges or 3/4 (19) offset pivots.

A Dim	Operator Model
13-1/8" (333mm)	6021
10-3/8" (264mm)	6031

**6021/6031 Series Operator Installation Template
for Transom Application using 6021TAB-2 angle bracket
on 42/48" wide doors
For Reveal of 2-3/4" (70mm) to 6-7/8" (175mm)**

Norton®
ASSA ABLOY
www.nortondoorcontrols.com

TEMPLATE NUMBER	REV	DATE
80-7360-1023-020	1	07/19