


View from Ceiling down Onto Frame

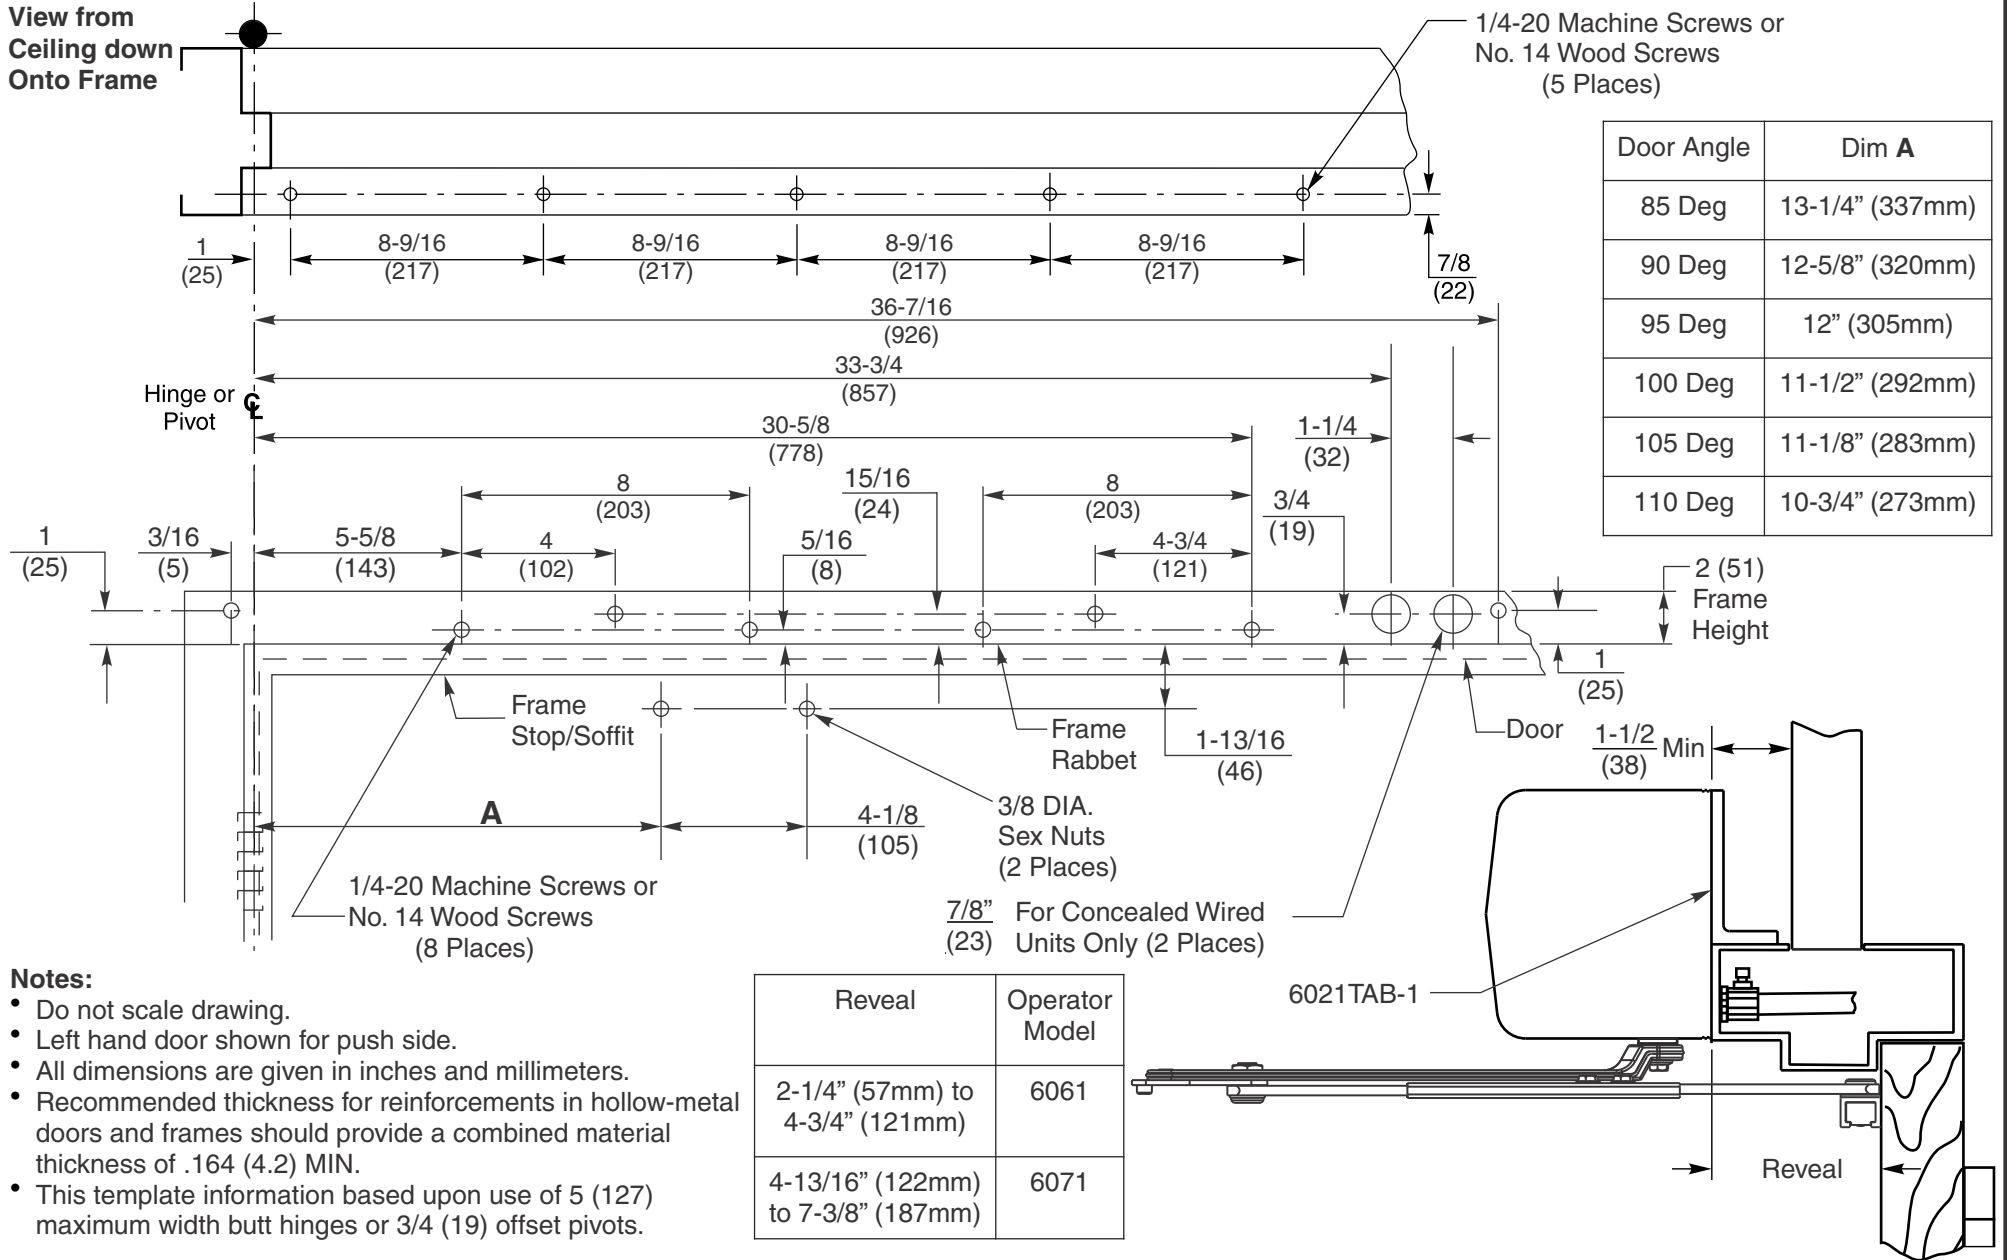

Notes:

- Do not scale drawing.
- Left hand door shown for push side.
- All dimensions are given in inches and millimeters.
- Recommended thickness for reinforcements in hollow-metal doors and frames should provide a combined material thickness of .164 (4.2) MIN.
- This template information based upon use of 5 (127) maximum width butt hinges or 3/4 (19) offset pivots.

**6061/6071 Series Operator Installation Template
for Transom Application using 6021TAB-1 angle bracket
on 36" wide doors
For Reveal of 2-1/4" (57mm) to 7-3/8" (187mm)**

Norton®

ASSA ABLOY

www.nortondoortcontrols.com

| | | |
|-------------------------|----------|--------------|
| TEMPLATE NUMBER | REV | DATE |
| 80-7360-1024-020 | 1 | 07/19 |