


View from Ceiling down Onto Frame

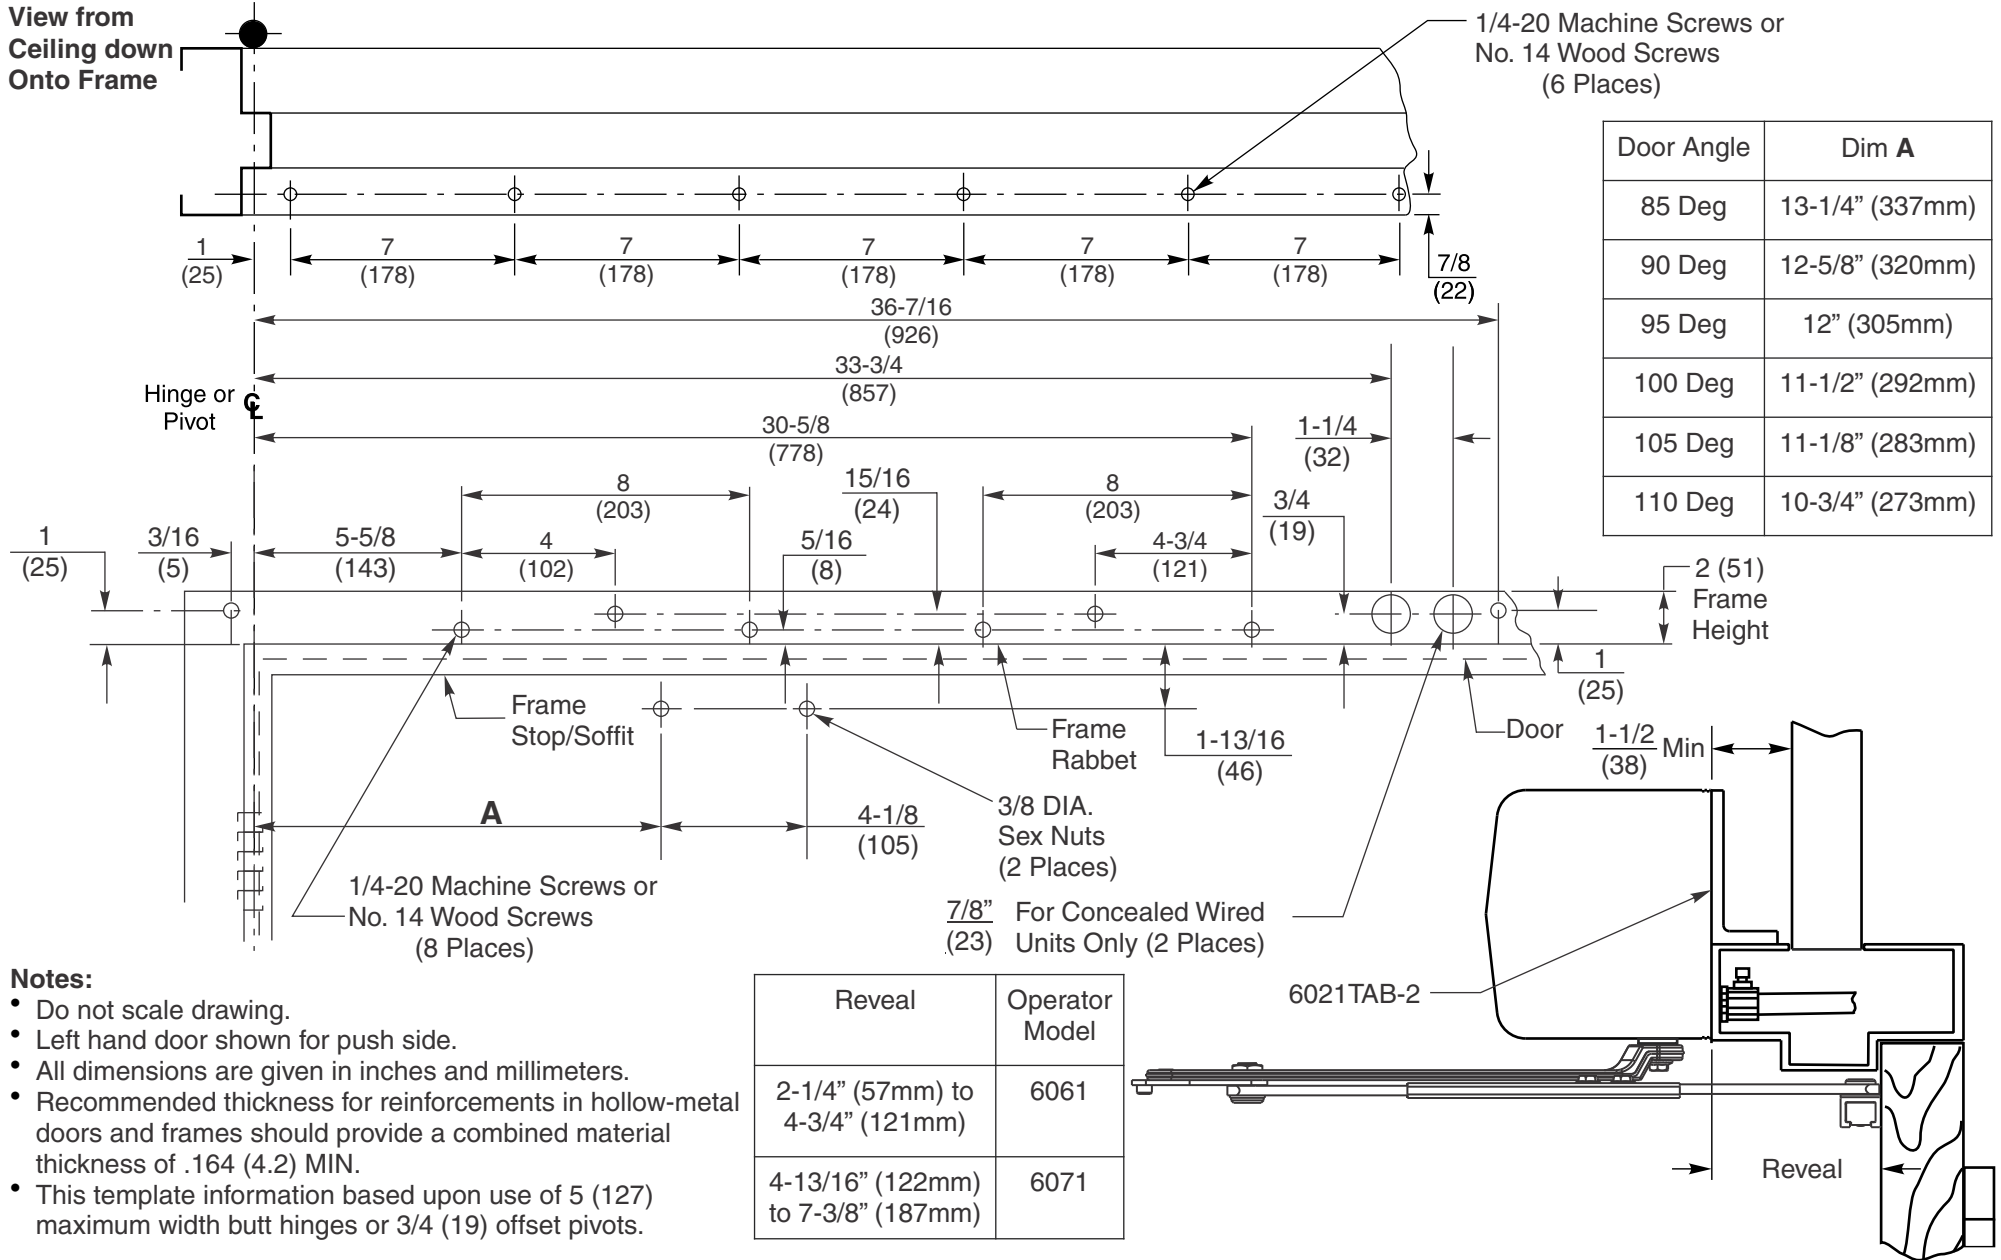

**Notes:**

- Do not scale drawing.
- Left hand door shown for push side.
- All dimensions are given in inches and millimeters.
- Recommended thickness for reinforcements in hollow-metal doors and frames should provide a combined material thickness of .164 (4.2) MIN.
- This template information based upon use of 5 (127) maximum width butt hinges or 3/4 (19) offset pivots.

**6061/6071 Series Operator Installation Template  
for Transom Application using 6021TAB-2 angle bracket  
on 42/48" wide doors  
For Reveal of 2-1/4" (57mm) to 7-3/8" (187mm)**

**Norton®**

**ASSA ABLOY**

www.nortondoorcontrols.com

TEMPLATE NUMBER	REV	DATE
<b>80-7360-1025-020</b>	<b>1</b>	<b>07/19</b>