

Door Leaf Width	OAL (Overall Length)	Dim A	Dim B	Dim D
36 (914)	74-1/4 (1886)	5-9/16 (141)	30-9/16 (776)	30-9/16 (776)
38 (965)	78-1/4 (1988)	7-9/16 (192)	32-9/16 (827)	32-9/16 (827)
40 (1016)	82-1/4 (2089)	9-9/16 (243)	34-9/16 (878)	34-9/16 (878)
42 (1067)	86-1/4 (2191)	11-9/16 (294)	36-9/16 (929)	36-9/16 (929)
44 (1118)	90-1/4 (2292)	13-9/16 (344)	38-9/16 (979)	38-9/16 (979)
46 (1168)	94-1/4 (2394)	15-9/16 (395)	40-9/16 (1030)	40-9/16 (1017)
48 (1219)	98-1/4 (2496)	17-9/16 (446)	42-9/16 (1081)	42-9/16 (1081)


Door System	Dim G	Dim H
D6021	13-1/8 (333)	12-23/32 (323)
D6031	10-3/8 (264)	15-5/16 (389)

Notes:


- Dimensions shown in inches / (mm) unless specified otherwise.
- Electrical requirements:
 - Power input of 120VAC, 5Amp minimum
 - Accessories circuit for activation to operator and low voltage
- For initial set up, doors must be un-latched and free to move
- For additional installation instructions, see instruction sheet 80-9360-1030-020. Visit www.nortondoorcontrols.com
- Refer to page 2 for proper handling of product

D6021/D6031 Series Template for Transom Bracket Install shown on pairs of 36", 38", 40", 42", 44", 46", and 48" frames shown with up to 5" Butt Hinges
 Maximum reveal of 6-7/8" and
 Maximum of 180 degrees of opening



Single Pull Side

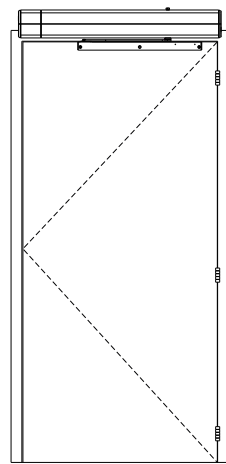



NOTE:
- All illustrations on this page shown
with 36" (914mm) wide doors

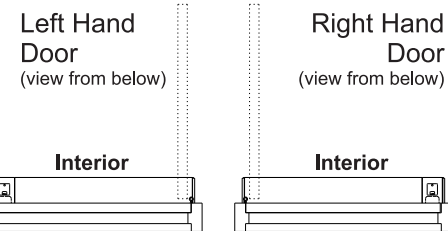



Double Door Pull Side

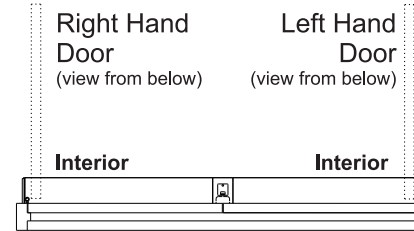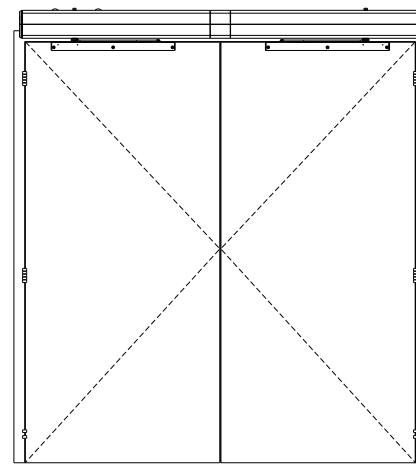



Double Door Double Egress Left Hand

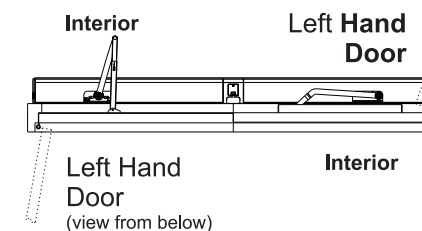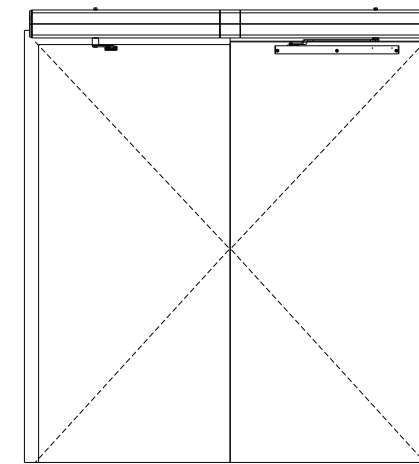



Single Push Side

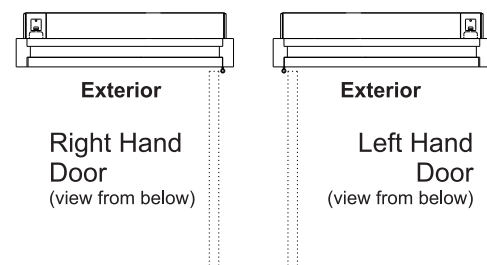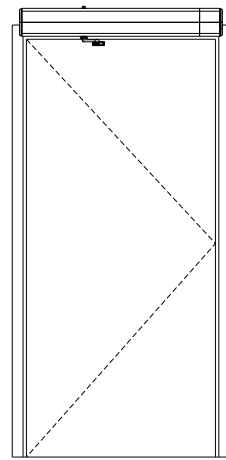


Double Door Push Side

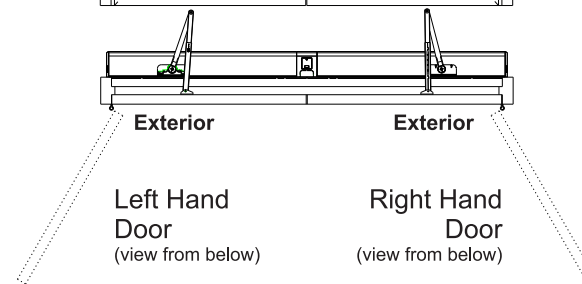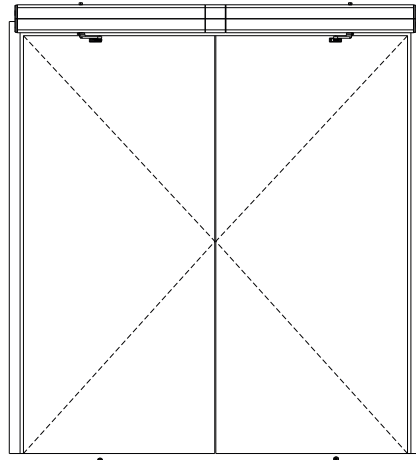

Double Door Double Egress Right Hand

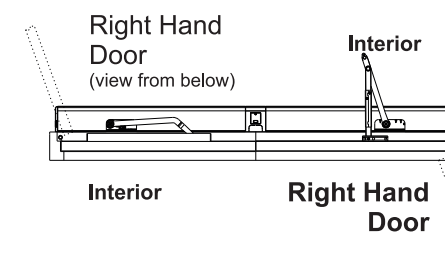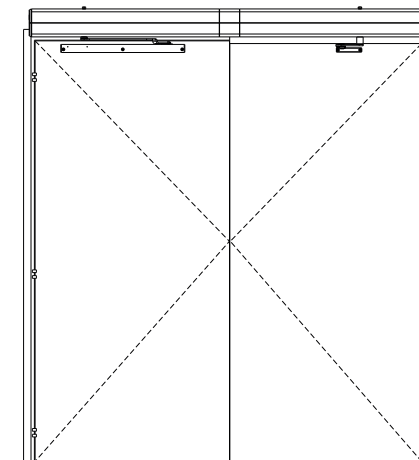


D6021/D6031 Series Template for Transom Bracket Install
shown on pairs of 36", 38", 40", 42", 44", 46", and 48" frames
shown with up to 5" Butt Hinges
Maximum reveal of 6-7/8" and
Maximum of 180 degrees of opening

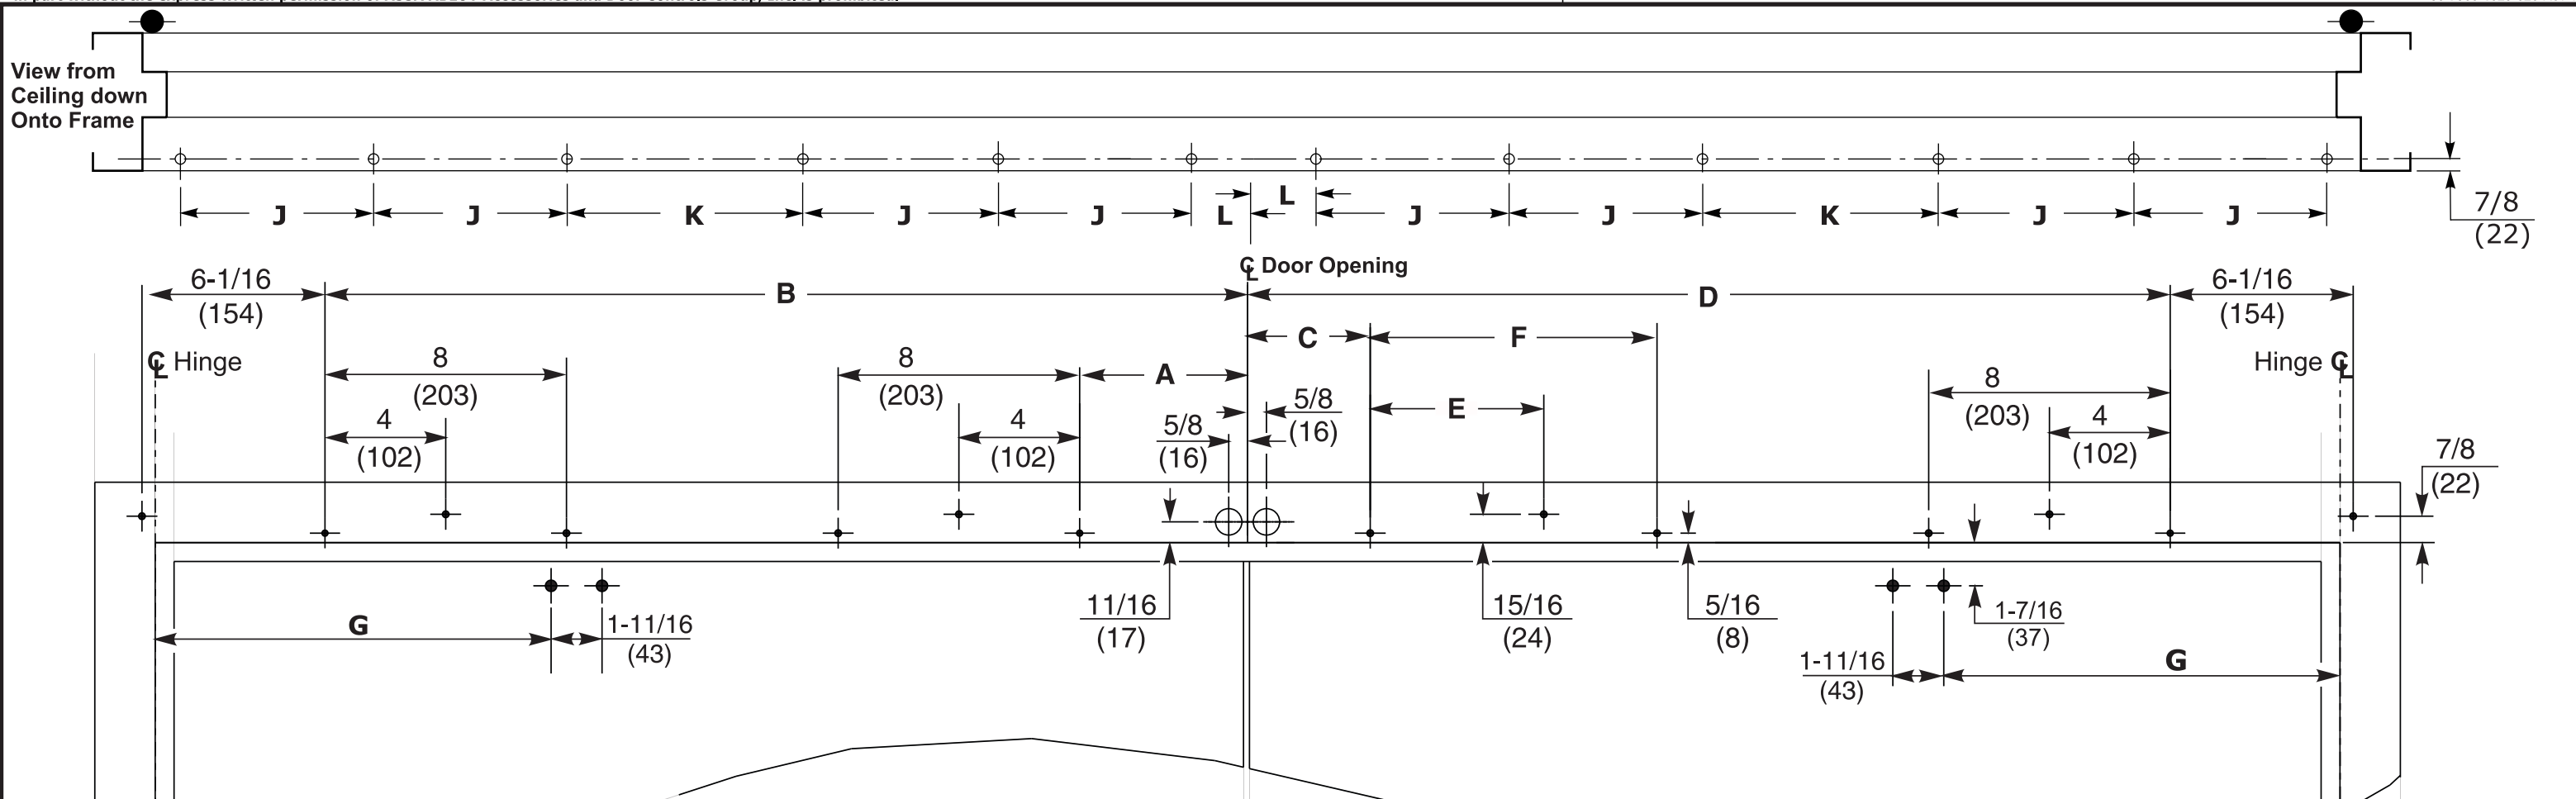


Door Width	Dim A	Dim B	Dim C	Dim D	Dim E	Dim F	Dim J	Dim K	Dim L
36 (914)	5-9/16 (141)	30-9/16 (776)	4-1/16 (103)	30-9/16 (776)	5-3/4 (146)	9-1/2 (241)	7 (178)	6-3/4 (171)	11/16 (17)
38 (965)	7-9/16 (192)	32-9/16 (827)	4-1/16 (103)	32-9/16 (827)	7-3/4 (197)	11-1/2 (292)	7-1/4 (184)	7-5/8 (194)	3/4 (19)
40 (1016)	9-9/16 (243)	34-9/16 (878)	9-9/16 (243)	34-9/16 (878)	4 (102)	8 (203)	7-3/4 (197)	7-13/16 (198)	5/8 (16)
42 (1067)	11-9/16 (294)	36-9/16 (929)	10-1/16 (256)	36-9/16 (929)	5-3/4 (146)	9-1/2 (241)	8 (203)	8-15/16 (227)	5/8 (16)
44 (1118)	13-9/16 (344)	38-9/16 (979)	12-1/16 (306)	38-9/16 (979)	5-3/4 (146)	9-1/2 (241)	8 (203)	8-5/8 (219)	5/8 (16)
46 (1168)	15-9/16 (395)	40-9/16 (1030)	14-1/16 (356)	40-9/16 (1017)	5-3/4 (146)	9-1/2 (241)	9 (229)	8-5/8 (219)	3/4 (19)
48 (1219)	17-9/16 (446)	42-9/16 (1081)	16-1/16 (408)	42-9/16 (1081)	5-3/4 (146)	9-1/2 (241)	9-1/4 (235)	9-3/4 (248)	3/4 (19)

Door System	Dim G
D6021	13-1/8 (333)
D6031	10-3/8 (264)

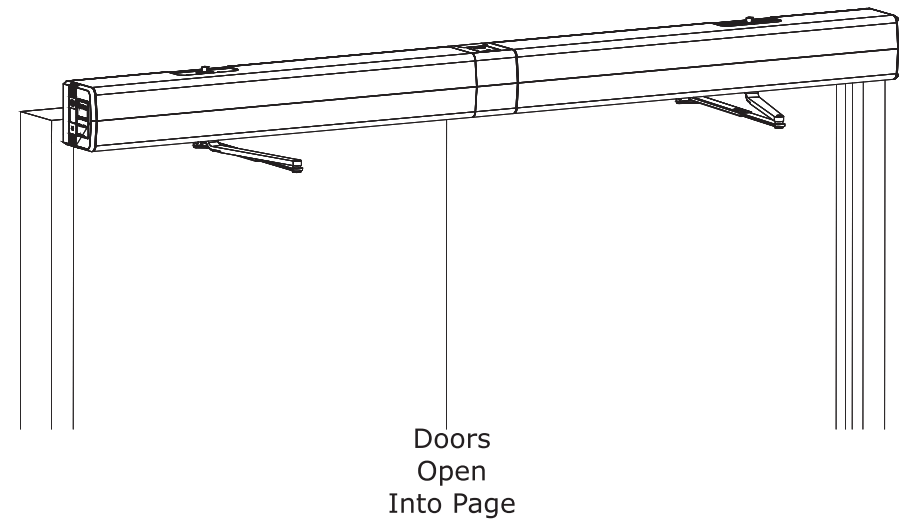

- Notes:
- Do not scale drawing.
 - Operator shown for push side double door application.
 - All dimensions are given in inches and millimeters.
 - Recommended thickness for reinforcements in hollow-metal doors and frames should provide a combined material thickness of .164 (4.2) MIN.
 - This template information based upon use of 5 (127) maximum width butt hinges or 3/4 (19) offset pivots.

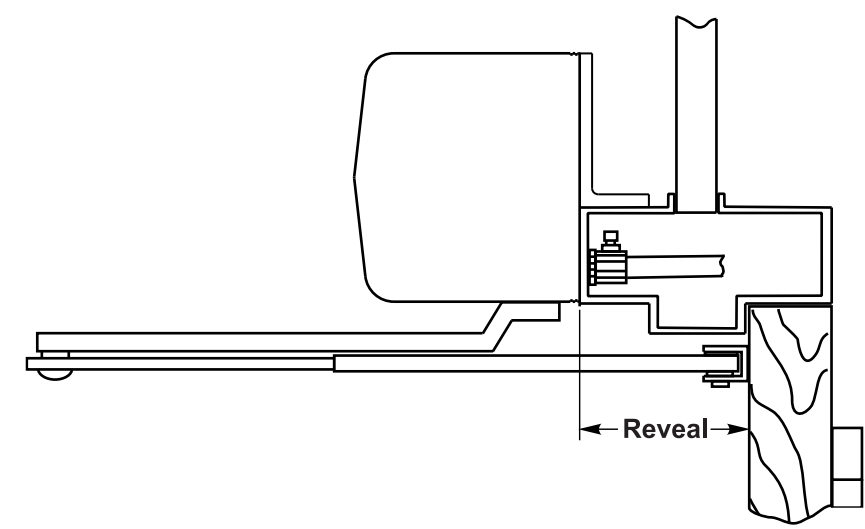

D6021/D6031 Series Template for Transom Bracket Install
 shown on pairs of 36", 38", 40", 42", 44", 46", and 48" frames
 shown with up to 5" Butt Hinges
 Maximum reveal of 6-7/8" and
 Maximum of 180 degrees of opening

Page 3

www.nortondoorcontrols.com

TEMPLATE NUMBER	REV	DATE
80-7360-1029-020	1	12/20