

#### Notes:

- 1. Do not scale drawing.
- 2. Dimensions are given in inches (mm).
- 3. Pivot drilled for 1/4-20 x 5/8" FHMS or #14 x 1-1/2" FHWS.
- 4. Right hand shown.
- 5. Template drawing for reference only.

<b>Electrified Power Transfer</b>
Intermediate Pivot
1-1/2" Offset

RIXSON° ASSA ABLOY

www.rixson.com

TEMPLATE NUMBER
EM19 x 1.5

3 05-24

Approved 2024-05-15

## Handed

# **EM19 Side Jamb Pivot** Installation Instructions

1-1/2" Offset

IMPORTANT: Prepare door and frame per instructions on reverse side. Door must be hung before the pivot is installed. The EM-19 pivot cannot take the downward load (weight) of the door. The door weight must be carried by a floor closer, bottom pivot or additional M-19 or M-190 side jamb pivots.

ALIGNMENT: To insure proper installation, the centerline of the side jamb pivot must be in line with the centerline of the top and bottom pivot points. See illustration.

### **PIVOT INSTALLATION:**

NOTE: Door and jamb portion of EM-19 are assembled in the factory. They cannot be separated and must be installed as assembled.

Open door and connect wires on the jamb portion to the wires in the frame. Push the wires back into the frame as the jamb portion is set into place in the frame mortise. Install the 5 jamb screws.


Connect the wires on the door portion to the door wires. Push the wires back into the door as the door portion is set into place in the door mortise. Install 5 door screws.


Test the electrical installation for proper operation of the wired door devices.

#### **ELECTRICAL BATINGS:**


Low voltage only

Current ratings each wire: 2 amp. continuous.

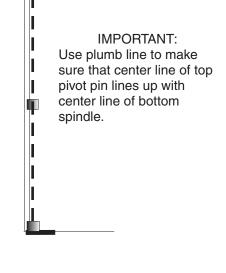

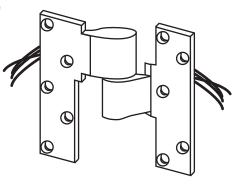

# How To Determine Hand of Door



Face a door swinging open away from you. If it opens to the right, it is right hand. If it opens to the left, it is left hand.

Electrified Power Transfer Intermediate Pivot 1-1/2" Offset RIXSON ASSA ABLOY

www.rixson.com

TEMPLATE NUMBER

EM19 x 1.5

3

05-24

Approved 2024-05-15