

**Notes:**

1. Do not scale drawing.
2. Dimensions are given in inches (mm).
3. Pivot drilled for 1/4-20 x 5/8" FHMS or #14 x 1-1/2" FHWS.
4. Right hand shown.
5. Template drawing for reference only.

**M19, FM19, M190, and FM190  
 Intermediate Pivot  
 1-1/2" Offset**

**RIXSON<sup>®</sup>**  
**ASSA ABLOY**

www.rixon.com

TEMPLATE NUMBER	REV	DATE
IS-(F)M19(0) x 1.5	3	05-24


# M19, FM19, M190 & FM190 Side Jamb Pivot

## Installation Instructions


Handed

1-1/2" Offset


Door should already be hung with top pivot and bottom pivot (or floor closer)


1.  Mortise door & frame per template on reverse side.

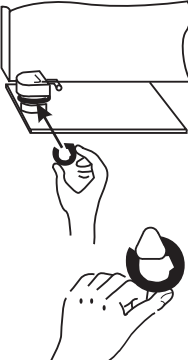
2.  Affix pivot to door & frame.

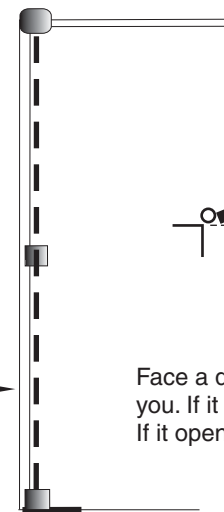
3.  Align pivot point from top pivot to bottom arm. (See diagram)

4.  Loosen arm screw\*.

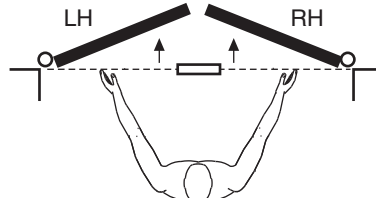
5.  Remove hex cap.

6.  Turn stud screw clockwise. Raise the door to the desired height.


7.  Using shims furnished with bottom arm, fill gap between arm and base.




### How To Determine Hand of Door



Face a door swinging open away from you. If it opens to the right, it is right hand. If it opens to the left, it is left hand.

8.  Turn stud screw counterclockwise until door rests on shims.

9.  Tighten arm screw on spindle. Open and close door several times. Re-tighten arm screw.

10.  Replace hex cap.

\* If bottom arm is for a Uni-Chek 67/68 or 117 pivot, make sure the arm is sitting all the way down on the base. Make NO adjustments to the M19.



M19, FM19, M190, and FM190  
 Intermediate Pivot  
 1-1/2" Offset

**RIXSON**  
 ASSA ABLOY

www.rixon.com

TEMPLATE NUMBER

IS-(F)M19(0) x 1.5

REV

3

DATE

05-24