

**Required Drill & Screw Sizes**

For 1/4-20 Machine Screw:


#7 (.201) Drill

For #14 Wood Screw:

#1 (.288) Drill

For Sex Bolts When Required:

3/8" Dia. Drill (Order Special #5467 for 1-3/4" Door)

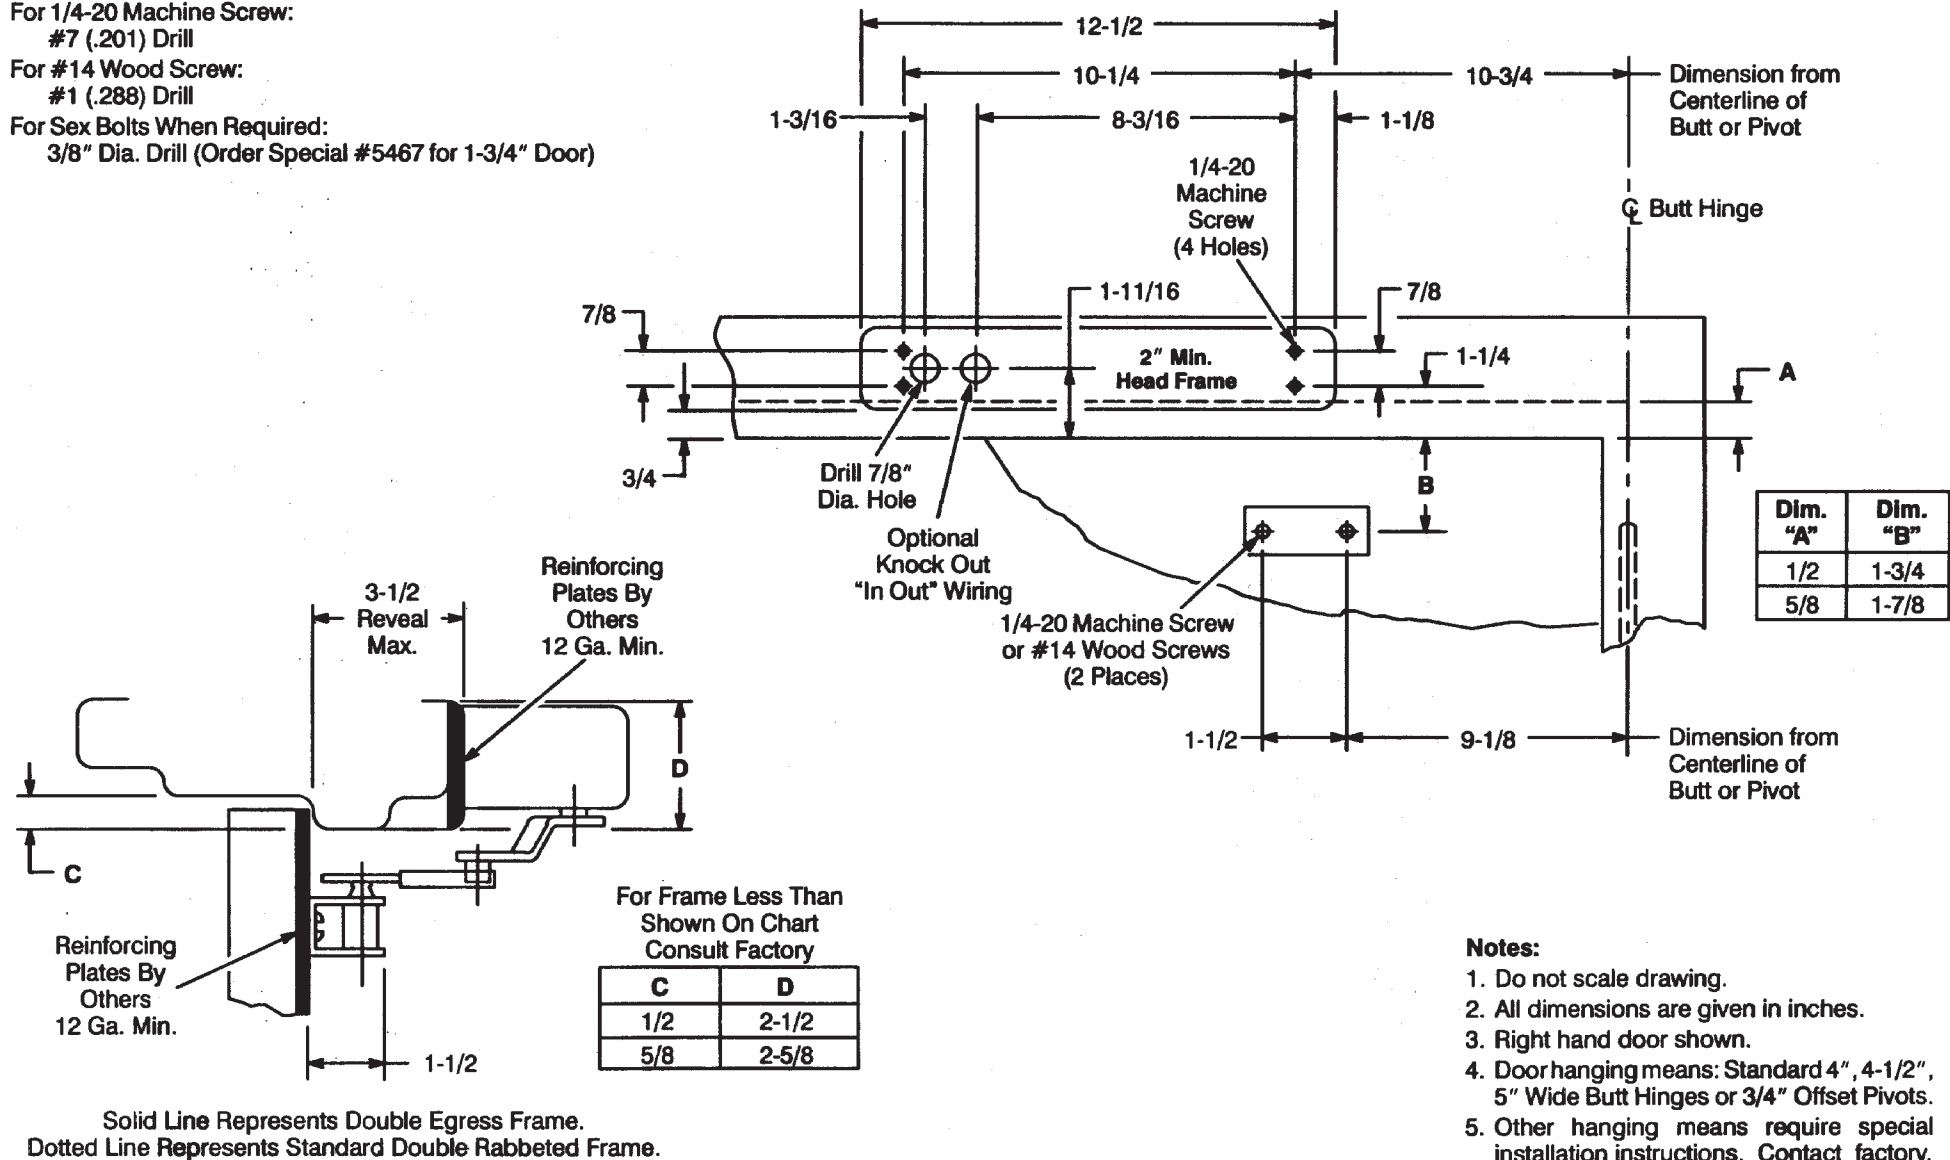

Dim. "A"	Dim. "B"
1/2	1-3/4
5/8	1-7/8

For Frame Less Than Shown On Chart Consult Factory

C	D
1/2	2-1/2
5/8	2-5/8

- Notes:**
1. Do not scale drawing.
  2. All dimensions are given in inches.
  3. Right hand door shown.
  4. Door hanging means: Standard 4", 4-1/2", 5" Wide Butt Hinges or 3/4" Offset Pivots.
  5. Other hanging means require special installation instructions. Contact factory.

Solid Line Represents Double Egress Frame.  
 Dotted Line Represents Standard Double Rabbeted Frame.

**Smok-Chek V Without Detector  
 FM-0101  
 Push Side Mounting  
 85° Thru Maximum Degree Hold Open**



TEMPLATE NUMBER	REV	DATE
<b>SC90110</b>	<b>3</b>	<b>01/22</b>