



Wood Jamb Installation

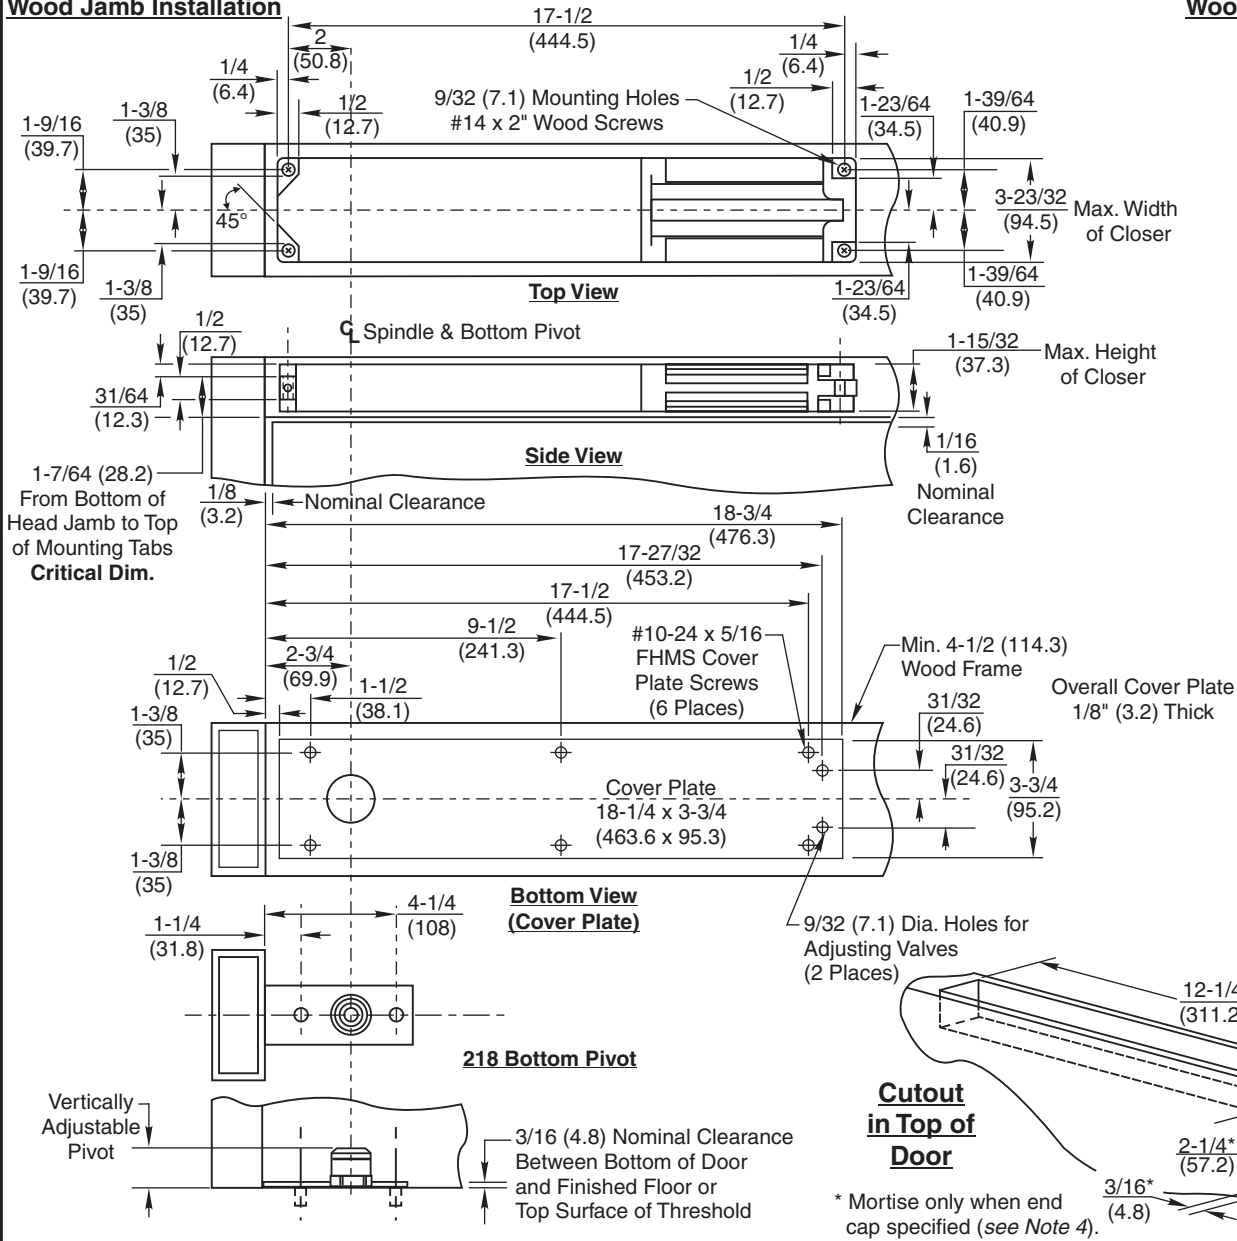

Wood Door Installation

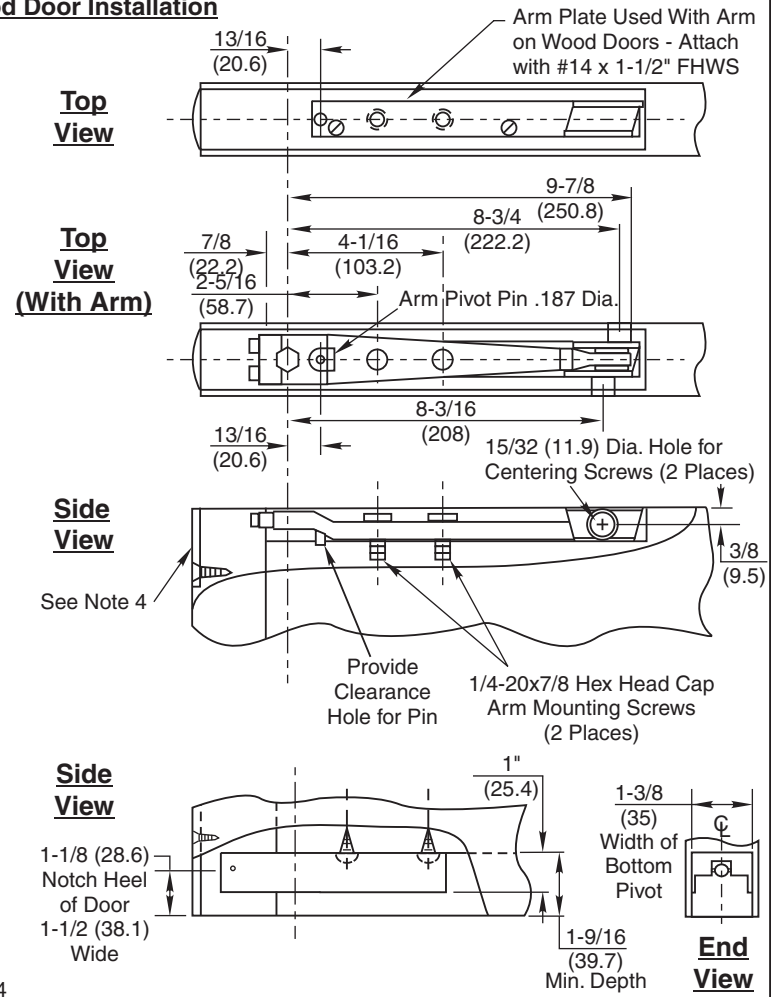



- NOTES:**
- Do not scale drawing.
 - #198 Wood Mounting Plate details on OC60120B.
 - Single acting operation requires a door stop on the underside of frame.
 - #199 door end cap optional extra. (mortise for top and bottom of door is identical.)
 - Door radius recommended is 2-5/8" (66.7).
 - All dimensions given in inches (mm).

**W700 Single Acting & W800 Double Acting
 Overhead Concealed Door Closer
 Center Hung for Wood Doors and Wood Frames**



TEMPLATE NUMBER	SHEET	REV	DATE
OC60120	1 of 2	3	01/22

198 Wood Mounting Plate Center Hung

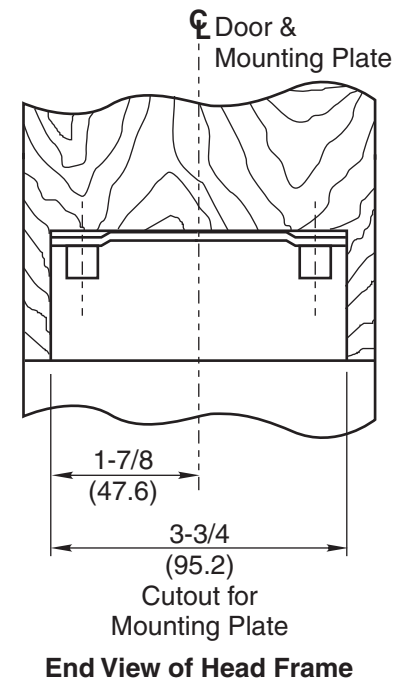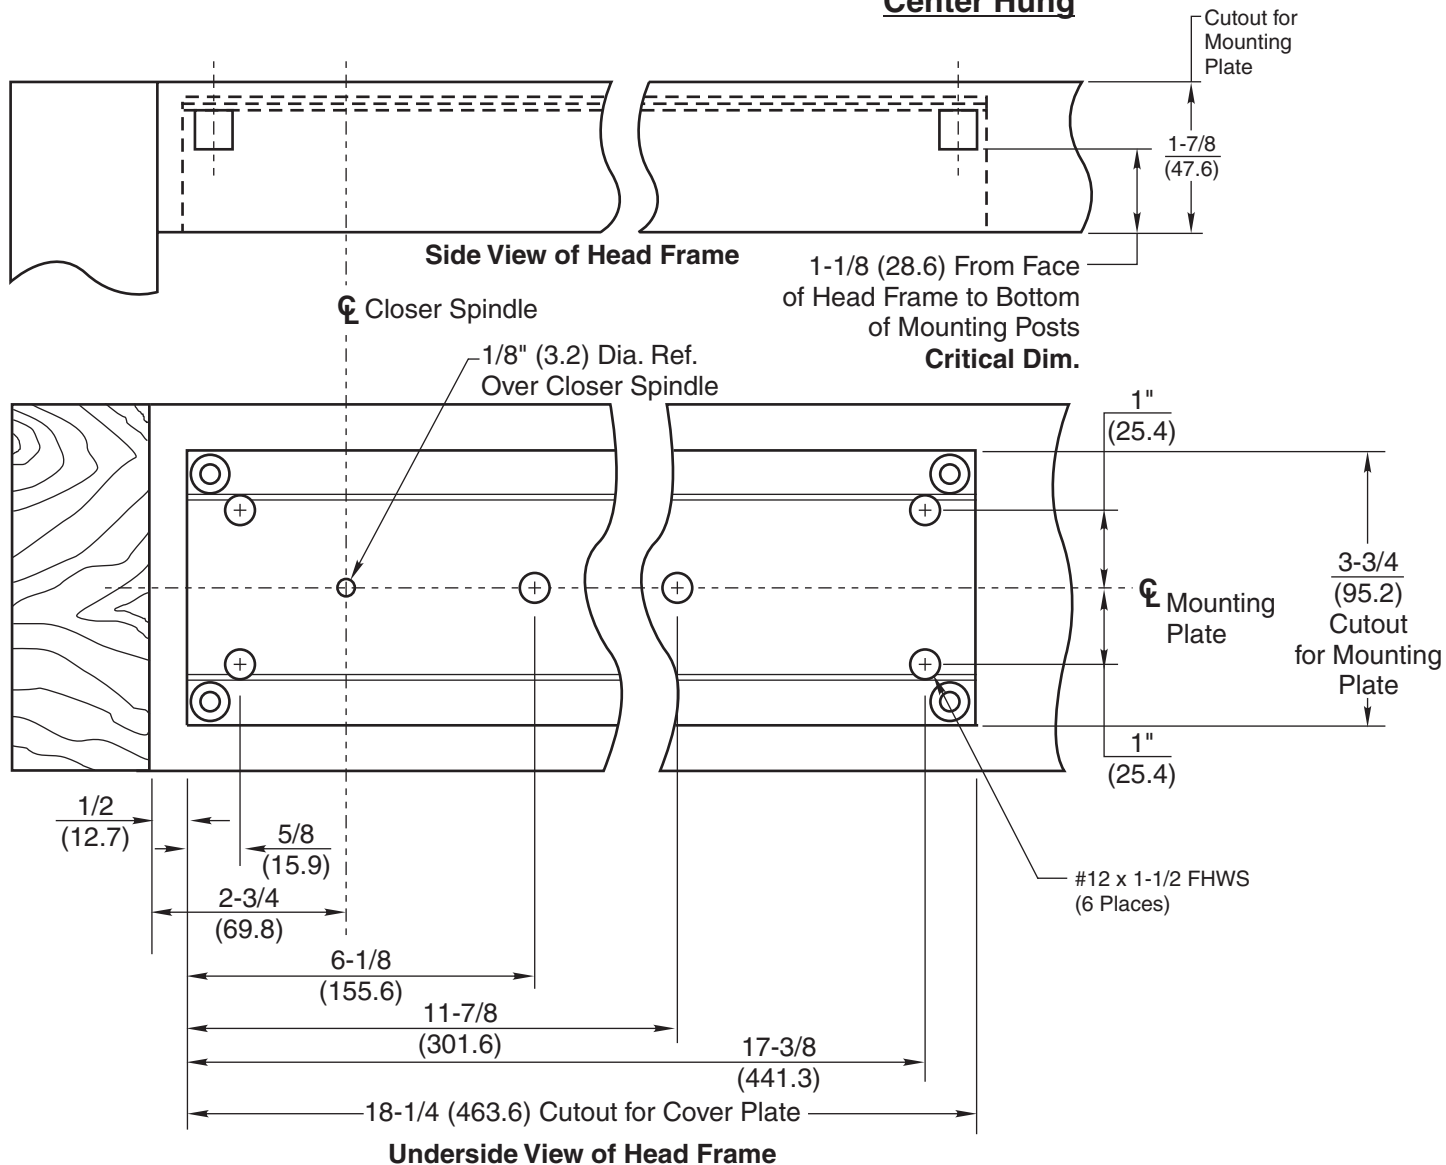

- NOTES:
1. Do not scale drawing.
 2. Right hand shown.
 3. All dimensions given in inches (mm).

**W700 Single Acting & W800 Double Acting
 Overhead Concealed Door Closer
 Center Hung for Wood Doors and Wood Frames**



ASSA ABLOY

TEMPLATE NUMBER	SHEET	REV	DATE
OC60120	2 of 2	3	01/22