

# Cylinder Installation Instructions

## 800LC :: Cylinder installation for 800LC cabinet drawer lock

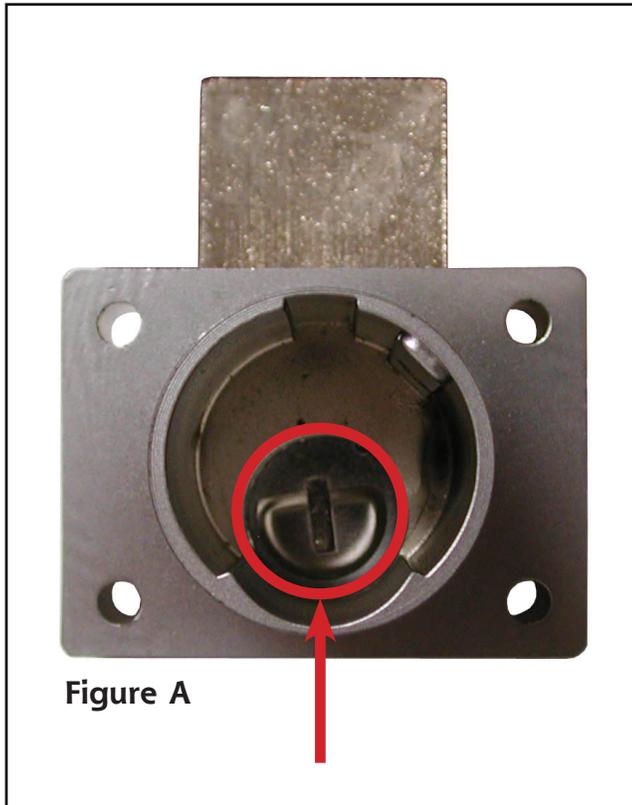


Figure A



Figure B-1  
Universal Driver

Figure B-2  
Tailpiece for 1-1/8"  
barrel length (800LCA)

Figure B-3  
Tailpiece for 1-3/8" barrel  
length (800LCM)

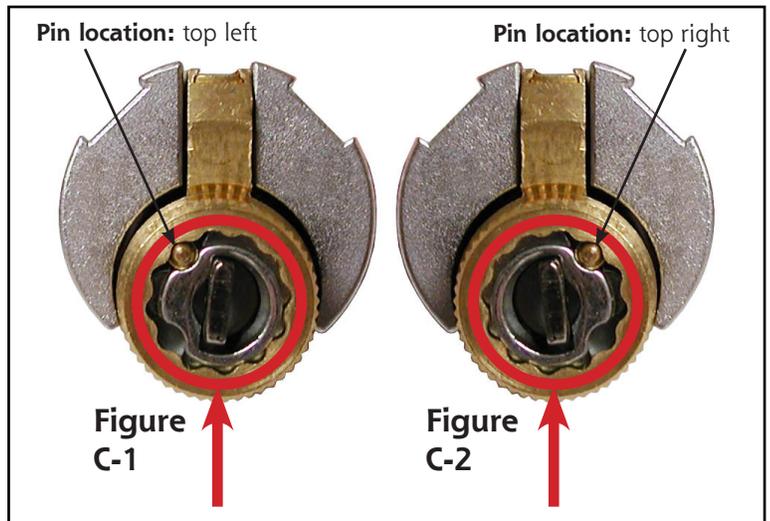


Figure C-1

Figure C-2

**Step 1:** Cycle lock so that the deadbolt is either completely up or completely down. The slot inside the lock case should be in a vertical (up/down) orientation (**Figure A**).

**Step 2:** Install the universal driver (**Figure B-1**) into the back of the cylinder. If pin is located on the top left, install as shown in **Figure C-1**. If pin is located on top right, install as shown in **Figure C-2**.

**Step 3:** Install the tailpiece into the back of the cylinder in the vertical position such that the overhang is facing in the same direction as the bolt (**Figure D**).

**Step 4:** Pick up the lock body and slide it down over the cylinder. If the the tailpiece does not immediately go into the vertical slot, pick up the complete assembly, put the key into the cylinder, and turn the key slightly back and forth until the tailpiece drops into the slot. Secure the cylinder housing to the body using the supplied set screw.

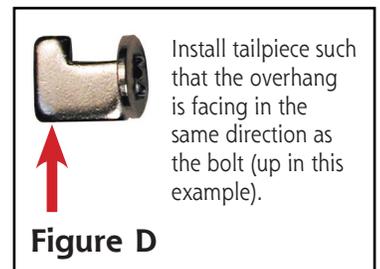


Figure D

Title  
Cylinder installation instructions for 800LC series cabinet drawer lock

Series	Barrel Length	Bolt type	Mounting	Revision Date
800LC	1-1/8" or 1-3/8"	Deadbolt	Surface	11/2012

**OLYMPUS**  
LOCK, INC.