
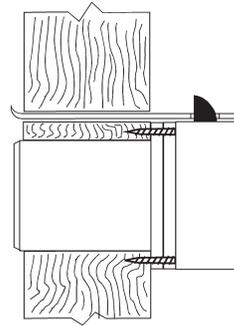





# Installation Instructions

## 950

**Note:** Line up center mark on latch with center mark on strike for correct strike placement.

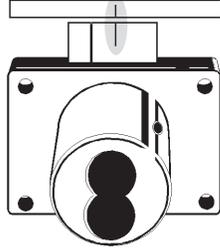


**Note:** Strike must be lined up so that dead lock portion of latch is depressed when drawer is closed.

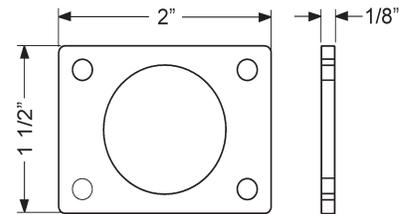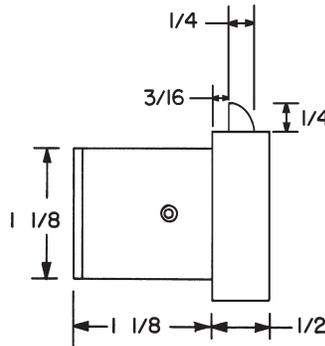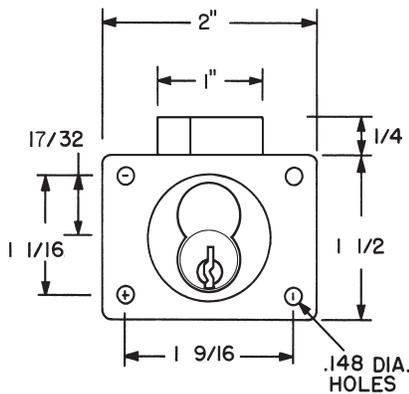

**10-350 - 1/8" spacer**

**Note:** Use of spacers and strikes depends on application and material thickness.

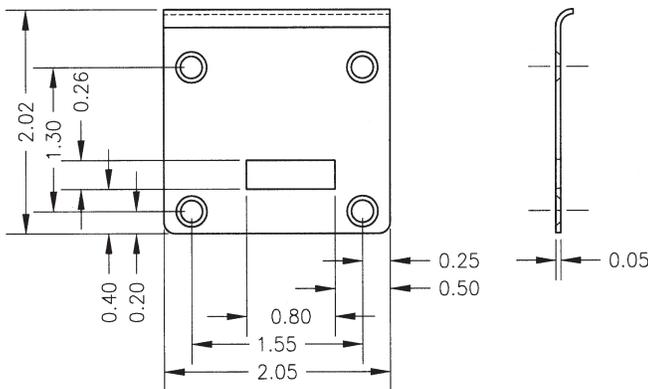

**850-210 lip strike**

for use with 1-1/8" barrel length locks

Title  
Installation instructions for 950 series cabinet drawer lock

|                      |                                |                               |                            |                                 |
|----------------------|--------------------------------|-------------------------------|----------------------------|---------------------------------|
| Series<br><b>950</b> | Barrel Length<br><b>1-1/8"</b> | Bolt type<br><b>Deadlatch</b> | Mounting<br><b>Surface</b> | Revision Date<br><b>09/2012</b> |
|----------------------|--------------------------------|-------------------------------|----------------------------|---------------------------------|

**OLYMPUS**  
**LOCK, INC.**