
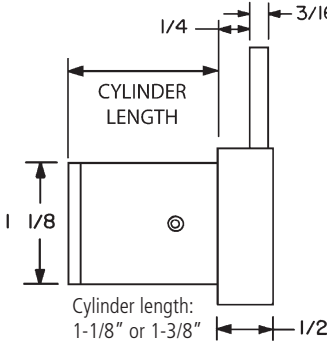
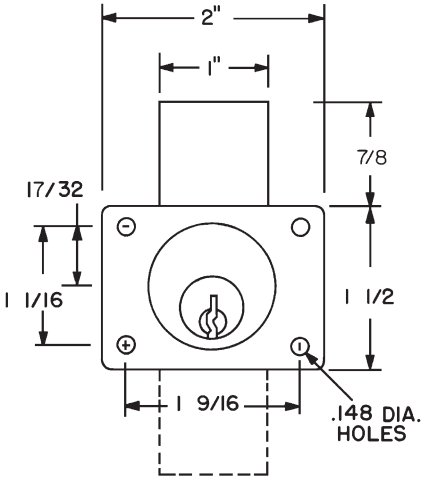



# Installation Instructions

## 800S


### Typical Installation

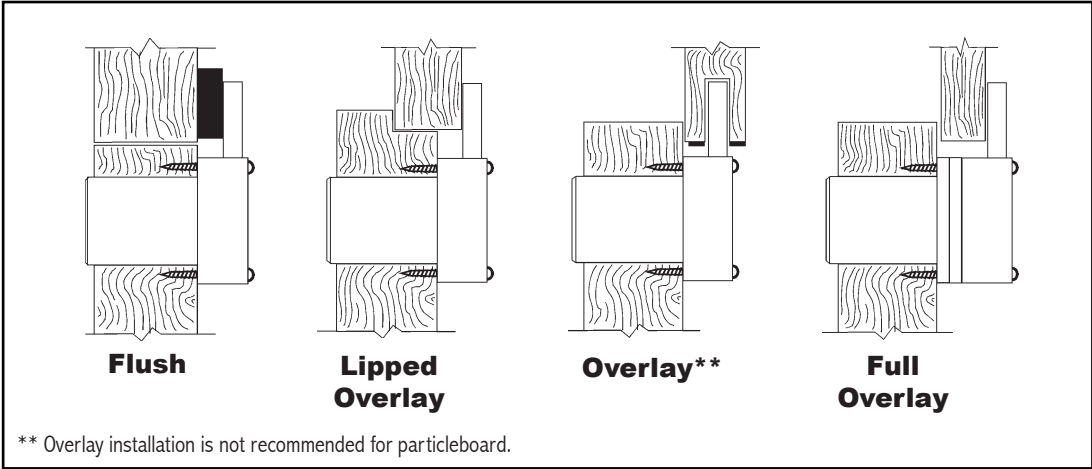


Note: Use of spacers and strikes depends on application and material thickness.

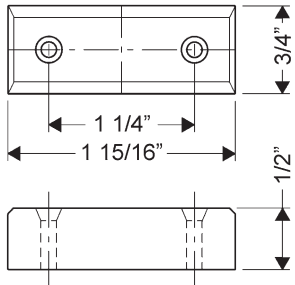

**10-055 - 1/2" bar strike**

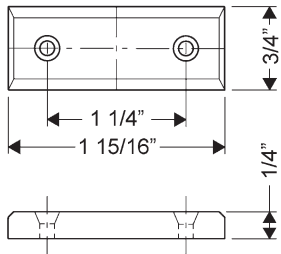

**10-054 - 1/4" bar strike**

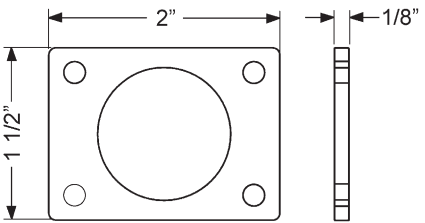

**10-350 - 1/8" spacer**

Title <b>Installation instructions for 800S series cabinet drawer lock</b>				
Series <b>800S</b>	Barrel Length <b>1-1/8" or 1-3/8"</b>	Bolt type <b>Deadbolt</b>	Mounting <b>Surface</b>	Revision Date <b>08/2015</b>

