



Wood Jamb Installation

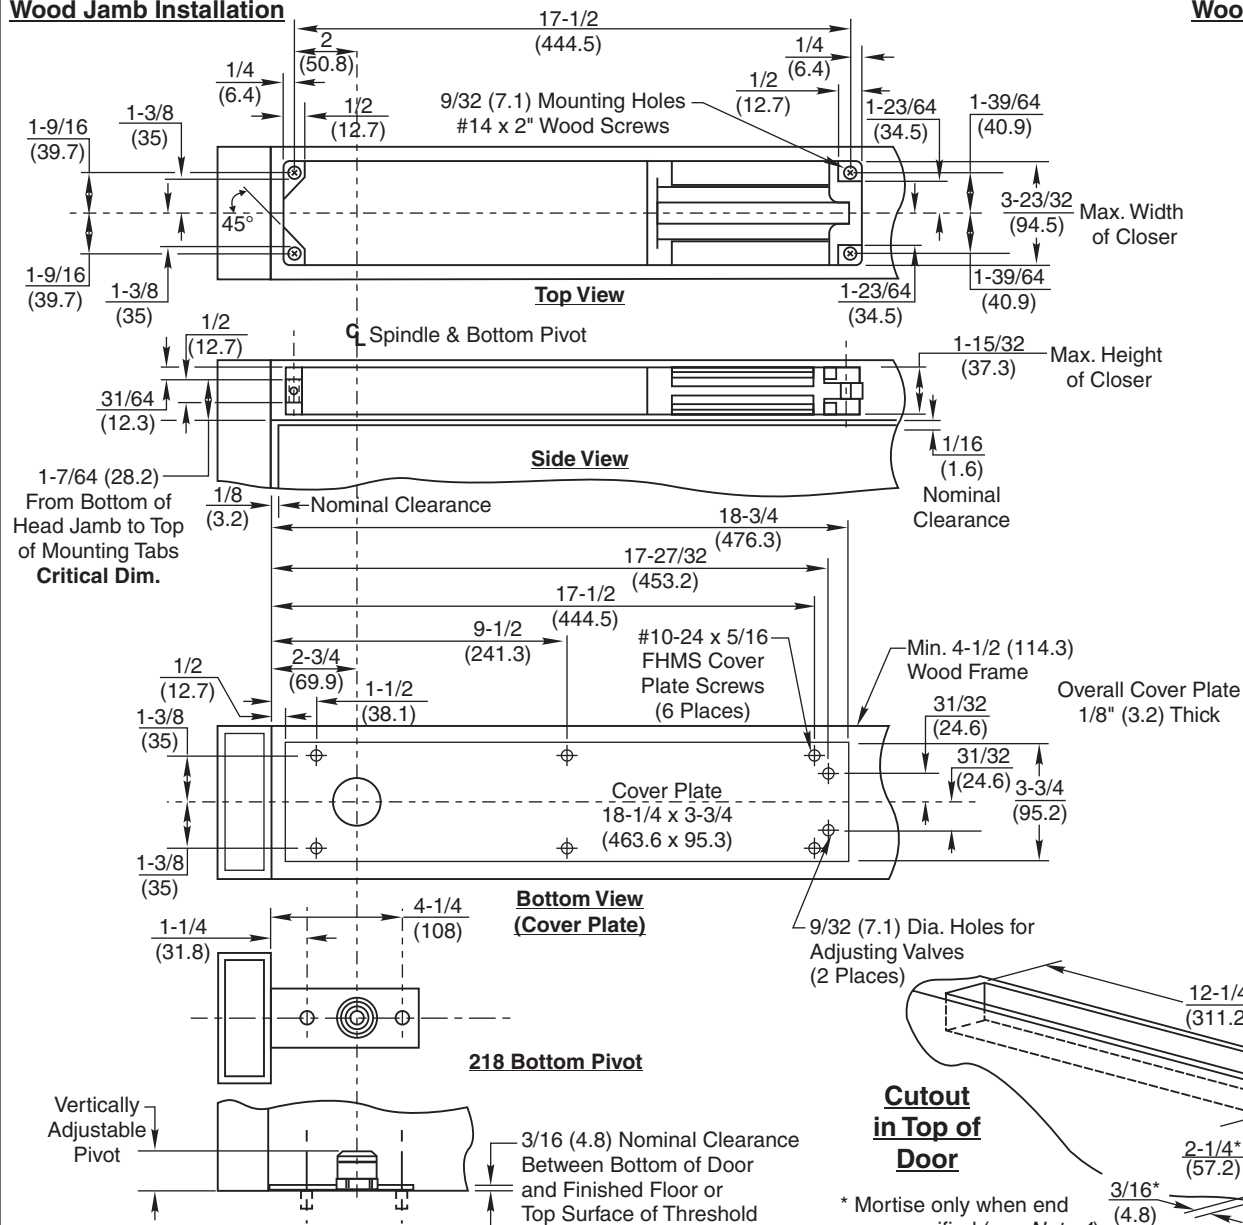

Wood Door Installation

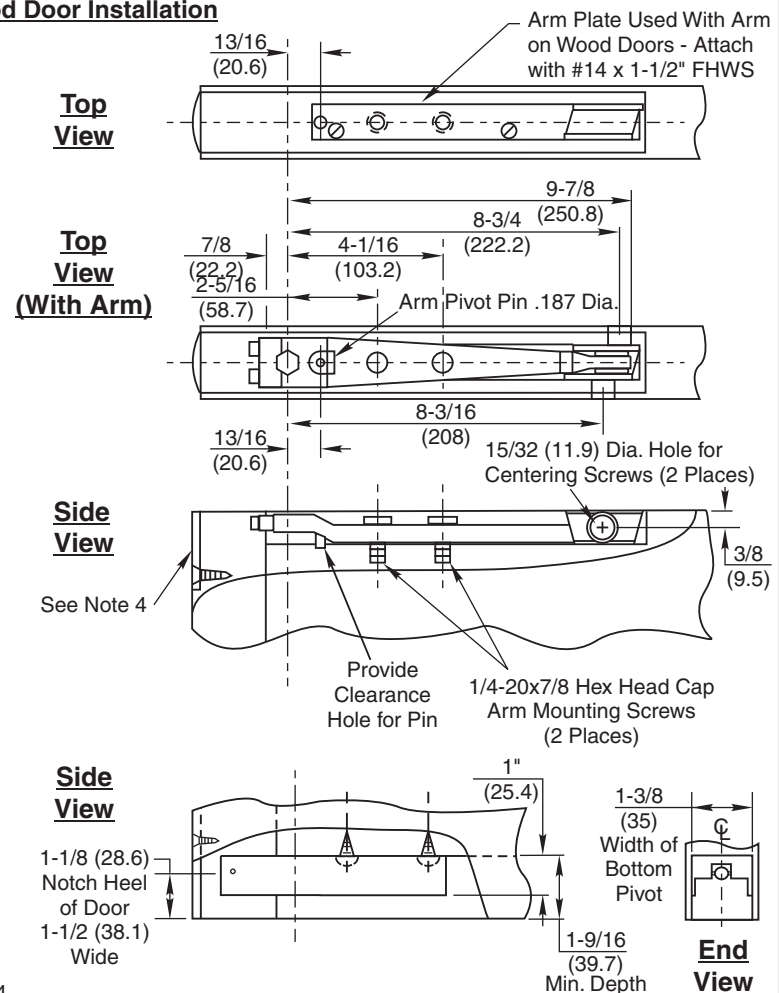

NOTES:

1. Do not scale drawing.
2. #198 Wood Mounting Plate details on OC60120B.
3. Single acting operation requires a door stop on the underside of frame.
4. #199 door end cap optional extra. (mortise for top and bottom of door is identical.)
5. Door radius recommended is 2-5/8" (66.7).
6. All dimensions given in inches (mm).

W700 Single Acting & W800 Double Acting Overhead Concealed Door Closer Center Hung for Wood Doors and Wood Frames

RIXSON®

ASSA ABLOY

www.rixson.com



TEMPLATE NUMBER

OC60120

DATE

04-09

198 Wood Mounting Plate Center Hung

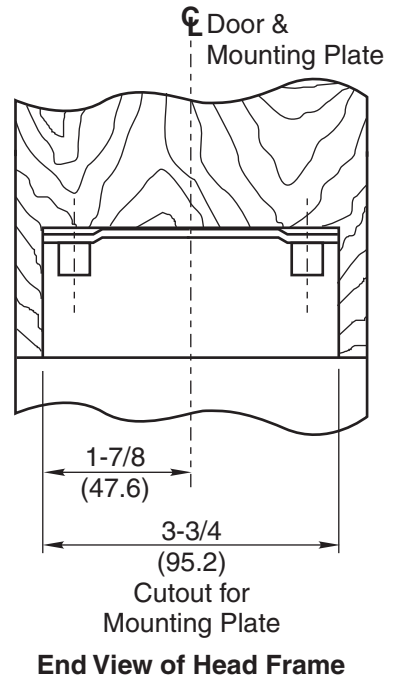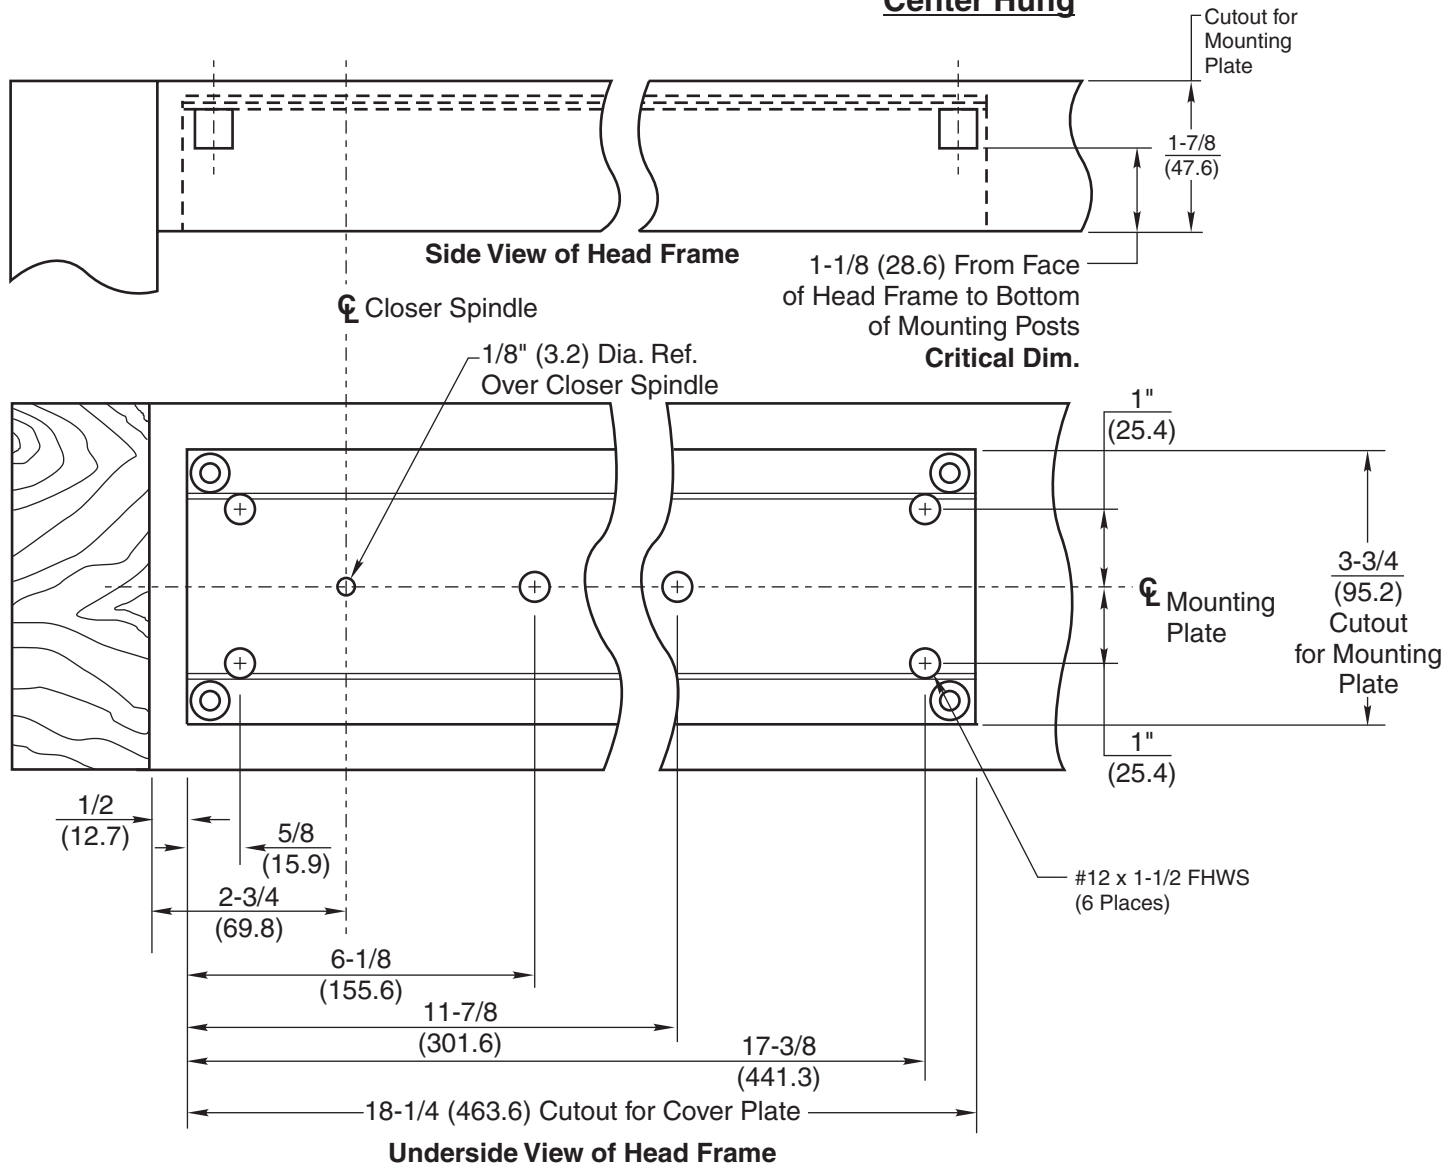

- NOTES:**
1. Do not scale drawing.
 2. Right hand shown.
 3. All dimensions given in inches (mm).

**W700 Single Acting & W800 Double Acting
Overhead Concealed Door Closer
Center Hung for Wood Doors and Wood Frames**

RIXSON®

ASSA ABLOY

www.rixson.com

TEMPLATE NUMBER

OC60120

DATE

04-09