


Rockwood 325 Latch Protector - Mounting

The global leader in
door opening solutions

NOT TO SCALE

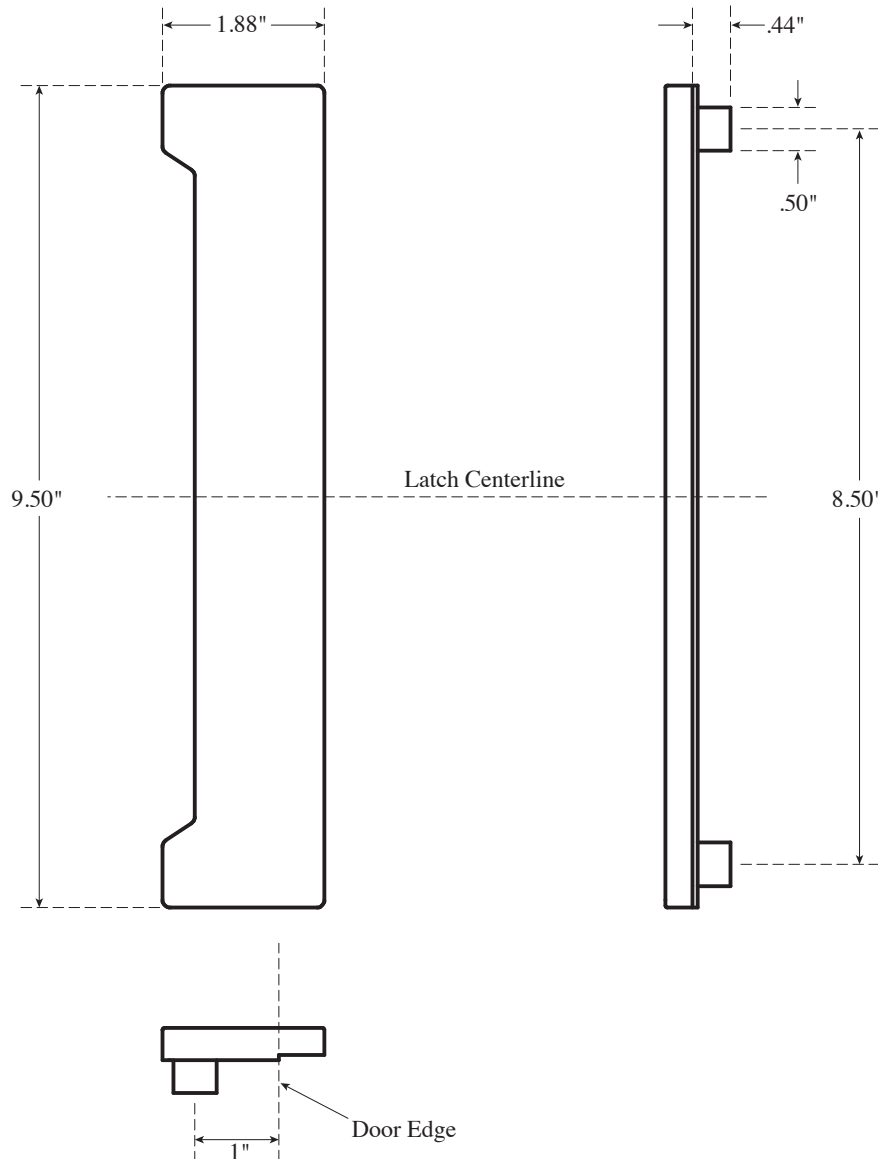

Template T-325

Effective date: January 1, 2017
Supersedes: All Previous

NOTE: ASSA ABLOY reserves the right to make product changes and is not responsible for obsolete template errors. To ensure your template is current, please visit our website at www.rockwoodmfg.com or call us at 800-458-2424

1. Drill two $\frac{9}{32}$ " thru holes $8\frac{1}{2}$ " center to center and 1" in from the outside edge of the door.
2. Counterbore two $\frac{17}{32}$ " holes dp. $\frac{7}{16}$ " on the outside of the door only.