


SCHREXKIT-FE-ML

INSERT INSTRUCTIONS

The Command Access SCHREXKIT-FE-ML is a field-installable Request to Exit switch for the Factory Electrified Schlage Mortise Lock.


A.

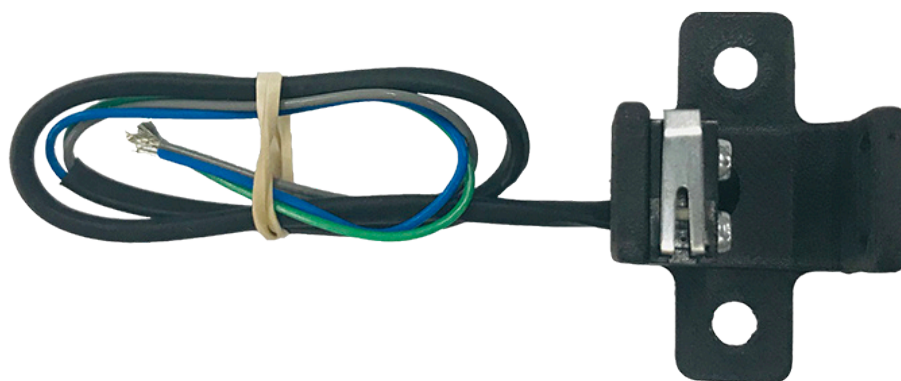

B.



C.

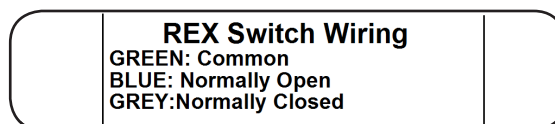

KIT INCLUDES

- A. 60336 - SCHREXKIT-FE-ML
- B. 40177 - MACHINE SCREW M2 X 8 (X2)
- C. 20015 - REX STICKER

TOOLS REQUIRED


#2 PHILLIPS SCREWDRIVER

INSTALLATION INSTRUCTIONS

- 1 Determine what will be the inside lever of your lock body by locating the **Handing Screw**. This will be the side that your **REX Switch** will need to be installed on.




- 2 Remove the two **Machine Screws** on the underside of the lock body.

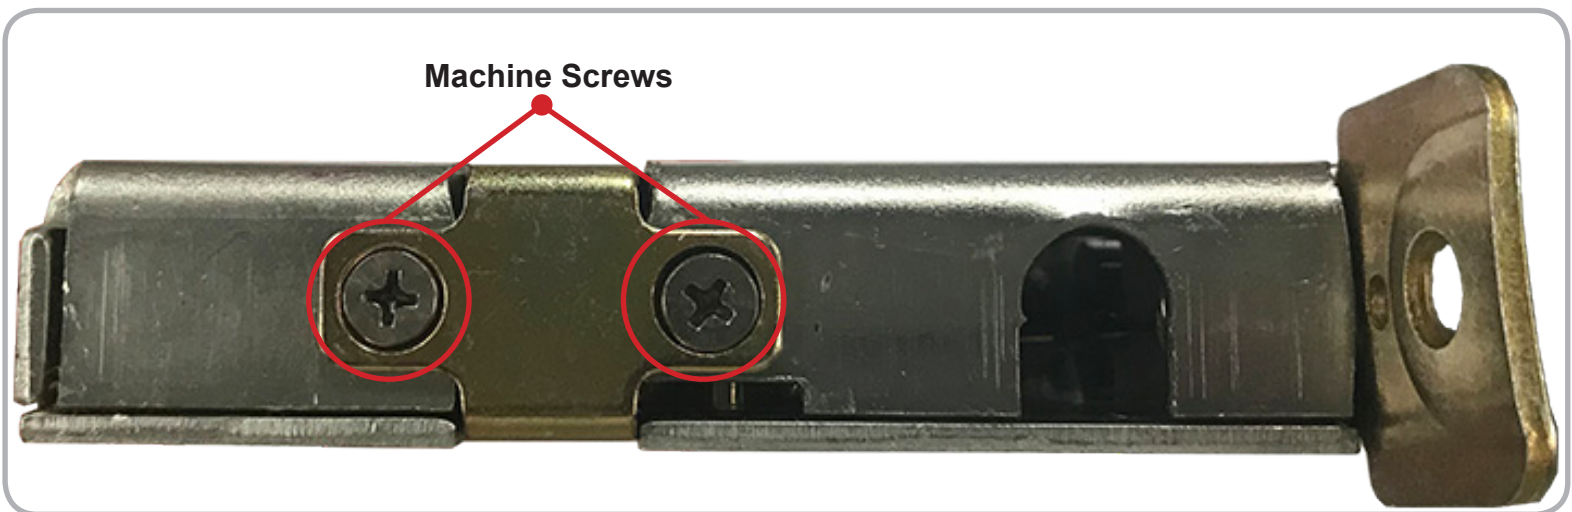


INSTALLATION INSTRUCTIONS


- 3** Remove the **Bottom Plate** from the lock body and ensure that you have the **Handing Screw** facing up.

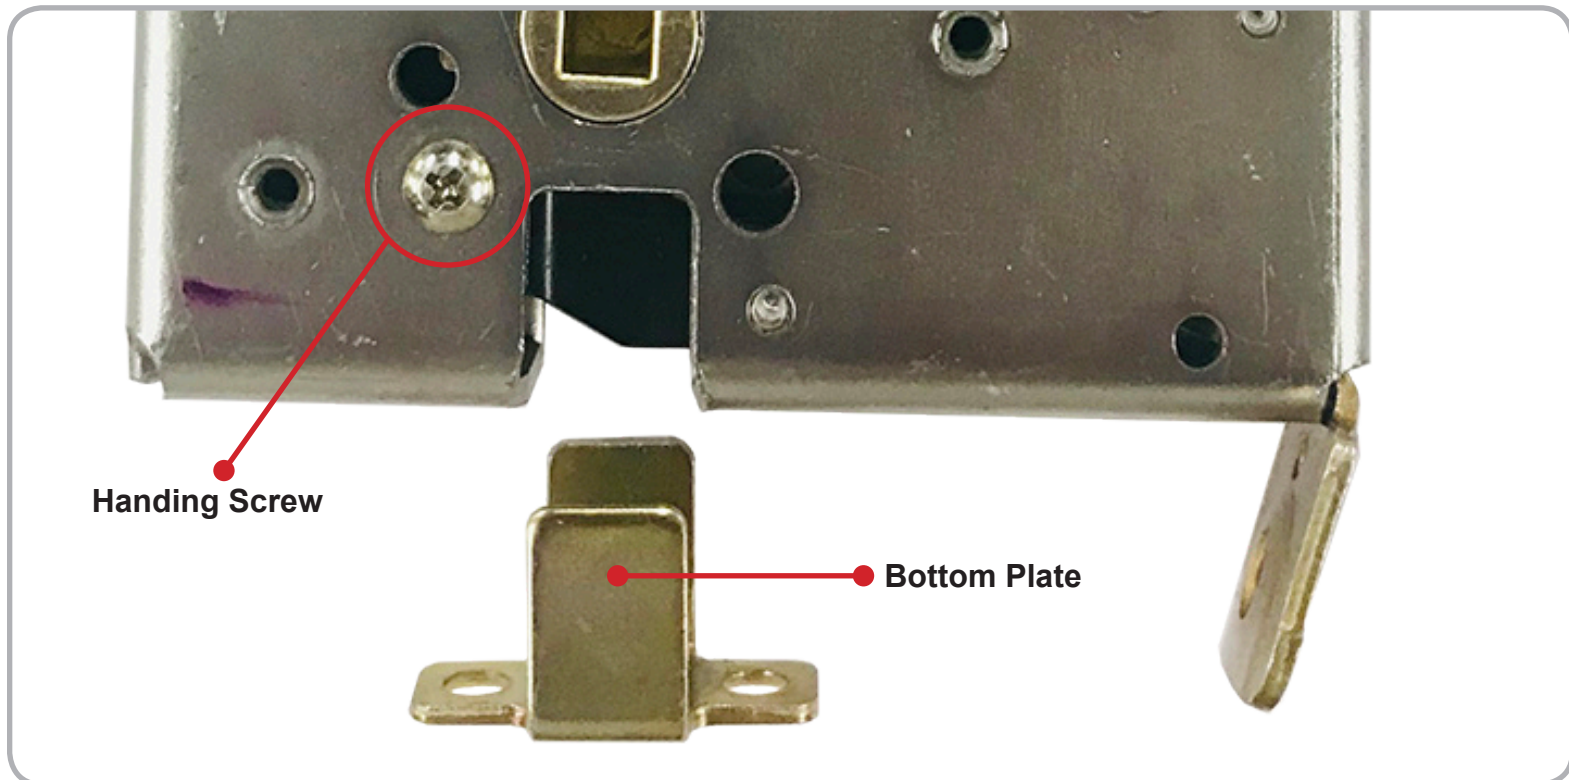

- 4** Install the **REX Switch Body**, with the **REX Switch Arm** on the same side of the **Handing Screw**.

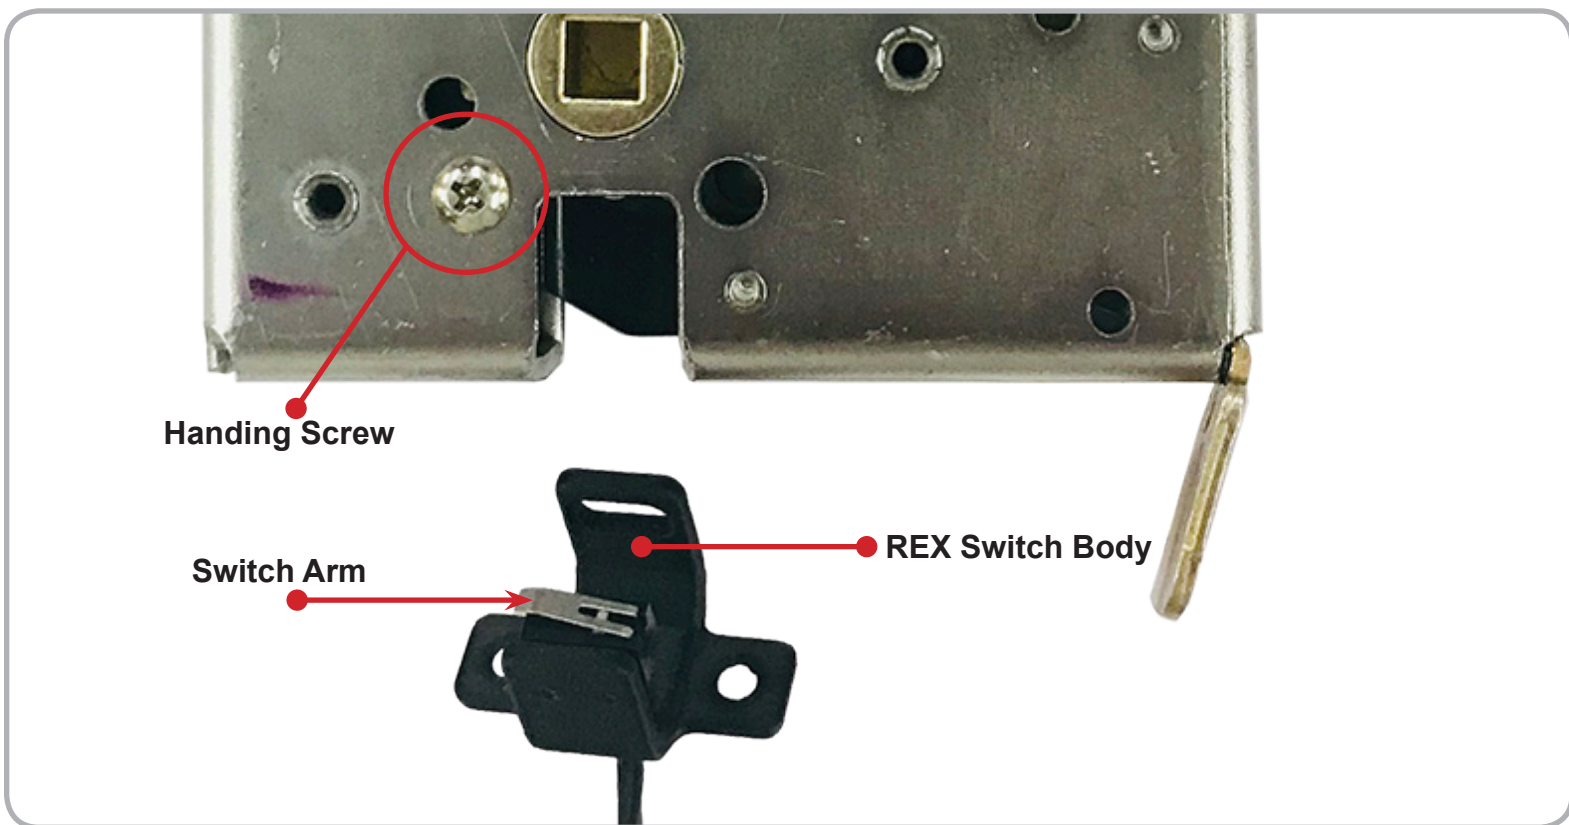

- 5** Reinstall the two **Machine Screws** on the underside of the lock body.

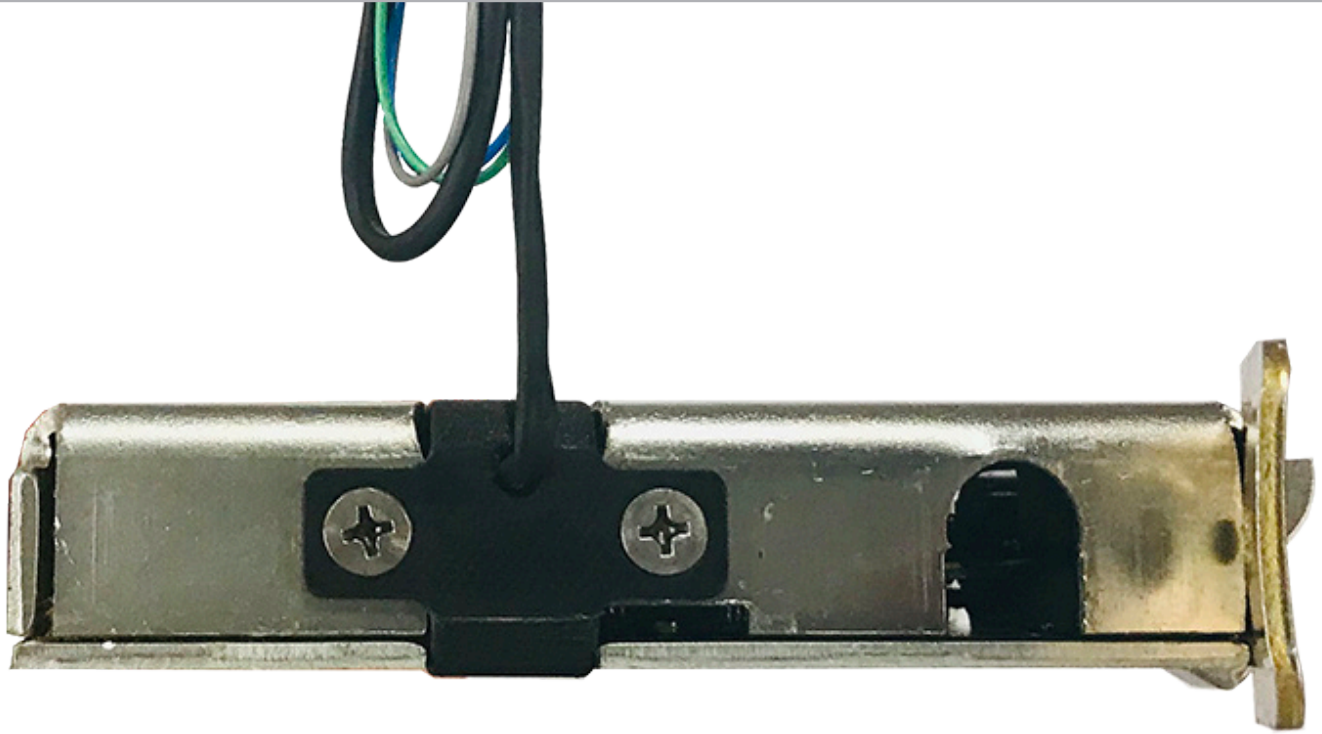

Link to Command Access
website and instructions



SCAN ME FOR
MORE INFORMATION

SPECIFICATIONS:

- Single Pole - Double Throw (SPDT)
- Rating: .5A @24VAC
- Configuration: Green - Common (C)
Blue - Normally Open (NO)
Gray - Normally Closed (NC)