


REFERENCE ONLY, NOT TO SCALE
DO NOT USE AS A DRILLING TEMPLATE

CALL 800-849-8324

Top

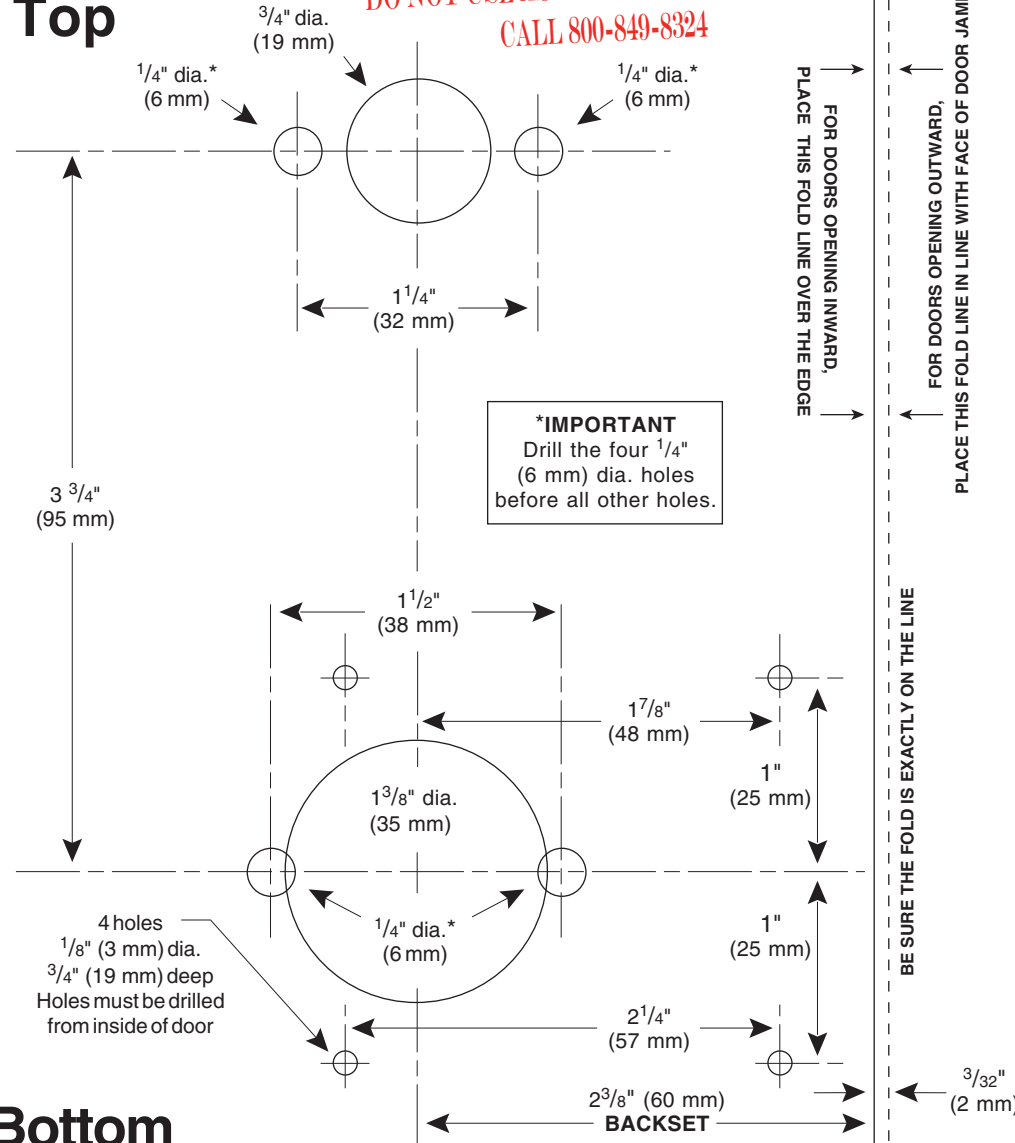

3 3/4" (95 mm)

***IMPORTANT**
Drill the four 1/4" (6 mm) dia. holes before all other holes.

Bottom

4 holes
1/8" (3 mm) dia.
3/4" (19 mm) deep
Holes must be drilled from inside of door

CAUTION
Apply template and drill from the inside but compensate for door bevel if any

NOTE: Lock will accommodate doors 1 3/8" (35 mm) to 2 1/4" (57 mm) thick. Suitable reinforcement shall be provided by the hollow metal door manufacturer to prevent collapsing of door. When door silencers are to be installed, proper allowances must be made for strike location.

D2-PKG-1294 1/97

7006
TEMPLATE
RIGHT HAND DOOR


MARK ACCURATELY
BORE STRAIGHT

Place this template on the **INTERIOR SIDE OF THE DOOR** using the correct fold line for door edge for door opening inward or outward.

D2-PKG-1294.1/97

CAUTION

Apply template and drill from the inside but compensate for door bevel if any

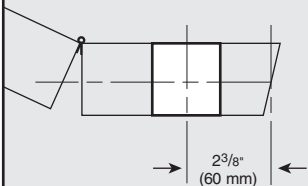

NOTE: Lock will accommodate doors 1 3/8" (35 mm) to 2 1/4" (57 mm) thick. Suitable reinforcement shall be provided by the hollow metal door manufacturer to prevent collapsing of door. When door silencers are to be installed, proper allowances must be made for strike location.

7006 TEMPLATE LEFT HAND DOOR

**MARK ACCURATELY
BORE STRAIGHT**

Place this template on the
INTERIOR SIDE OF THE DOOR
using the correct fold line for
door edge for door opening
inward or outward.

**REFERENCE ONLY, NOT TO SCALE
DO NOT USE AS A DRILLING TEMPLATE**

CALL 800-849-8324

