


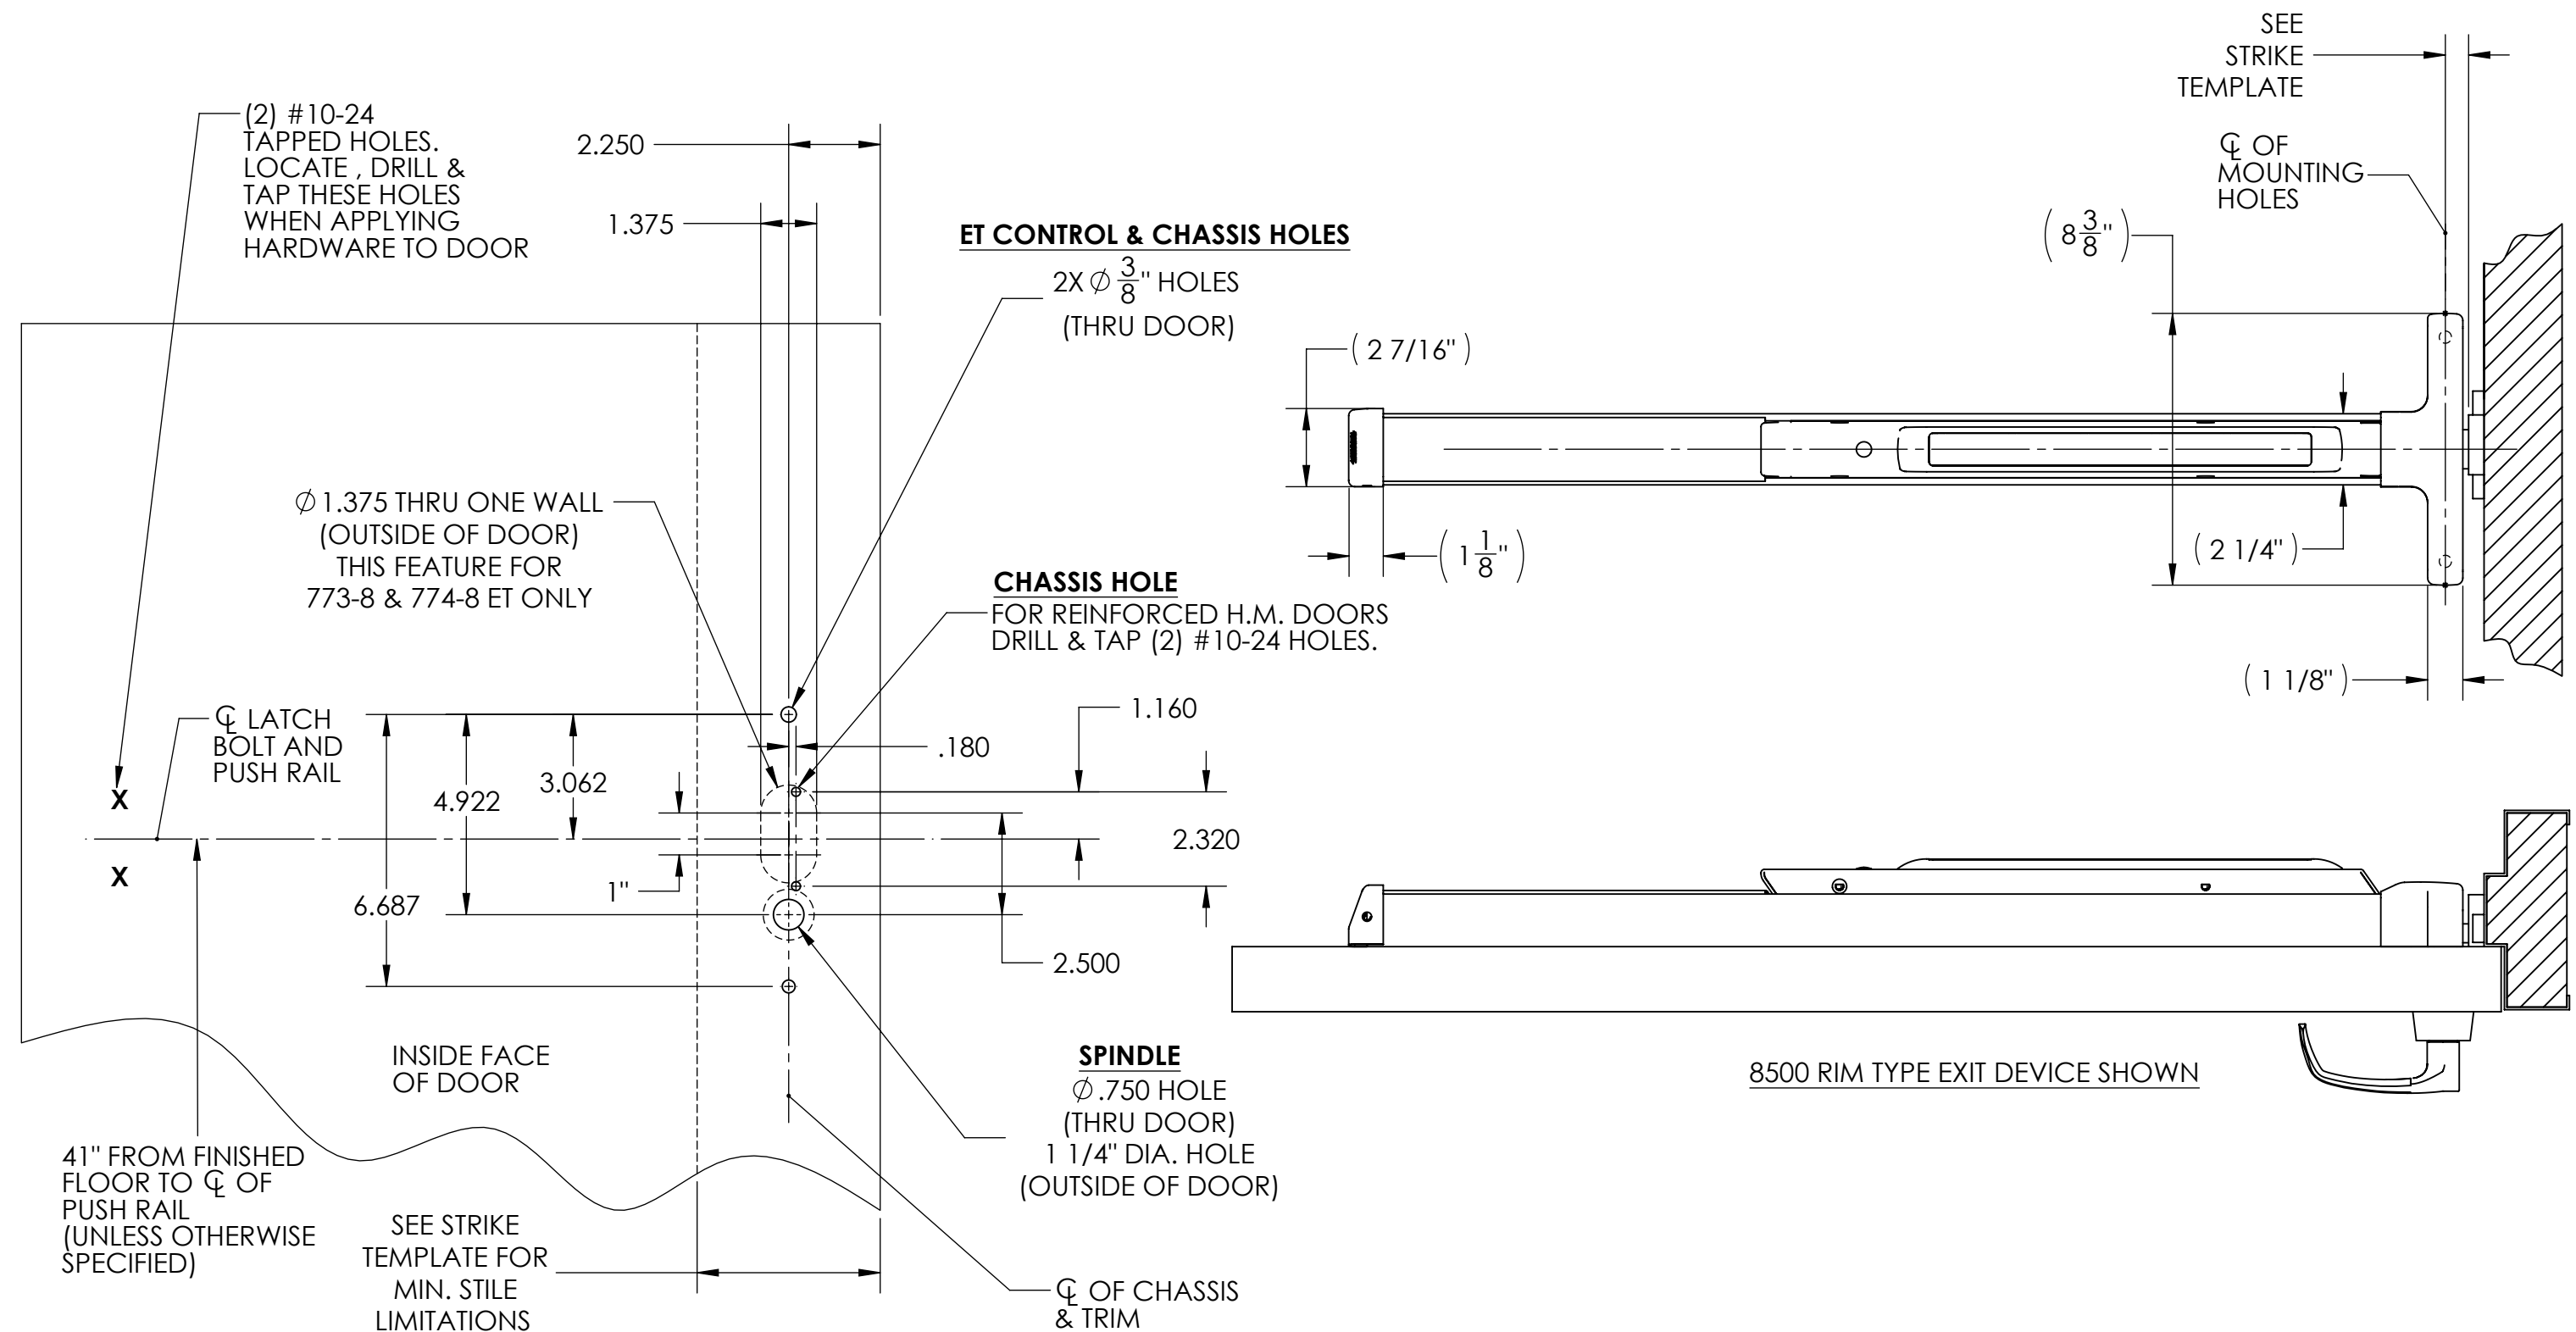

NOTES:

1. TOLERANCE ON ALL DIMENSIONS IS $\pm 1/64$ ".
2. WE RECOMMEND THAT ALL TAPPED HOLES BE DRILLED & TAPPED IN THE FIELD.
3. SEE STRIKE TEMPLATE FOR MOUNTING LOCATION OF STRIKE.
FOR 881 MONITOR STRIKE SEE TEMPLATE 4386.
4. SEE MASTER SHEET No. 4019 FOR AREAS REQUIRING REINFORCEMENTS.
5. SURFACE OF DOOR WHERE EXIT DEVICE IS TO BE APPLIED MUST BE FLUSH.
6. FOR RACEWAY INFO. SEE TEMPLATES 4568 AND 4571.

SARGENT
ASSA ABLOY

Sargent Manufacturing Company
100 Sargent Drive New Haven, CT 06511

TEMPLATE: 8500, 12-8500, AD-8500, &
WS-AD-8500 NARROW DESIGN RIM TYPE
EXIT DEVICE x 706-8, 713-8, 715-8, 743-8,
746-8, 773-8, & 774-8 ET CONTROL

RELEASE DATE
JUNE 1, 2011

TEMPLATE NO.
4645 E