


# For Mounting Battery Box Above Exit Trim Device

**HOLES "A" & "AA"**  
 Locate Holes "A" and "AA" on the templates at right. These holes are **only** for use when mounting the battery box **above** the exit device. Drill a 3/4" hole for the wire. Preferably to be used with hollow doors but a hole can be drilled into a solid door from "A" to "AA" using a long drill bit. These holes are **NOT** thru-holes!

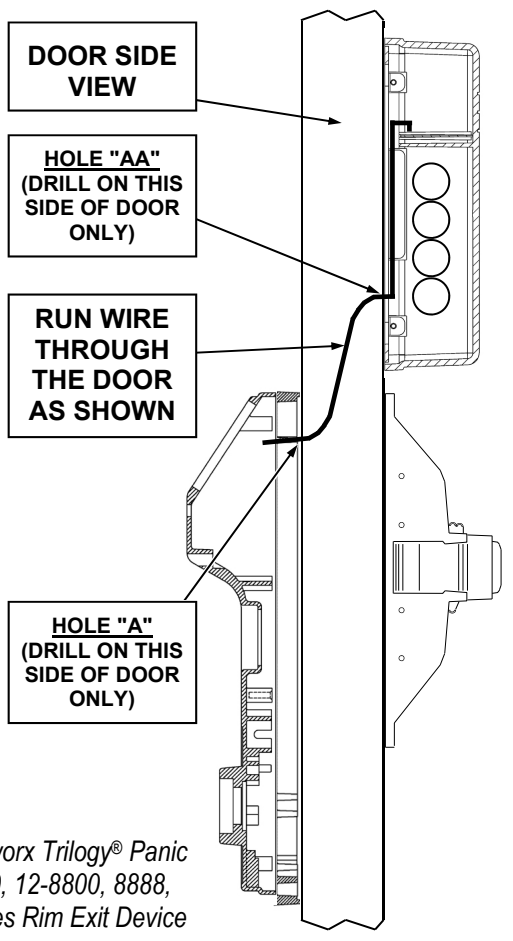


This template is from the ET-PDLN Networkx Trilogy® Panic Exit Device Trim Sargent Models 8800, 12-8800, 8888, 12-8888, WS-8800, & 12-WS 8800 Series Rim Exit Device

# ET-PDLN Networkx Trilogy® Panic Exit Device Trim Sargent Models 8800, 12-8800, 8888, 12-8888, WS-8800, & 12-WS 8800 Series Rim Exit Device


Alarm Lock Systems, Inc.  
 A division of the NAPCO Security Technologies, Inc.  
 345 Bayview Avenue, Amityville, NY 11701  
 Tel: (631) 789-4871 Fax: (631) 789-3383  
[www.alarmlock.com](http://www.alarmlock.com)

Publicly traded on NASDAQ Symbol: NSSC  
 © 2015 Alarm Lock Systems, Inc.  
 WI1956B-NS8 06/15

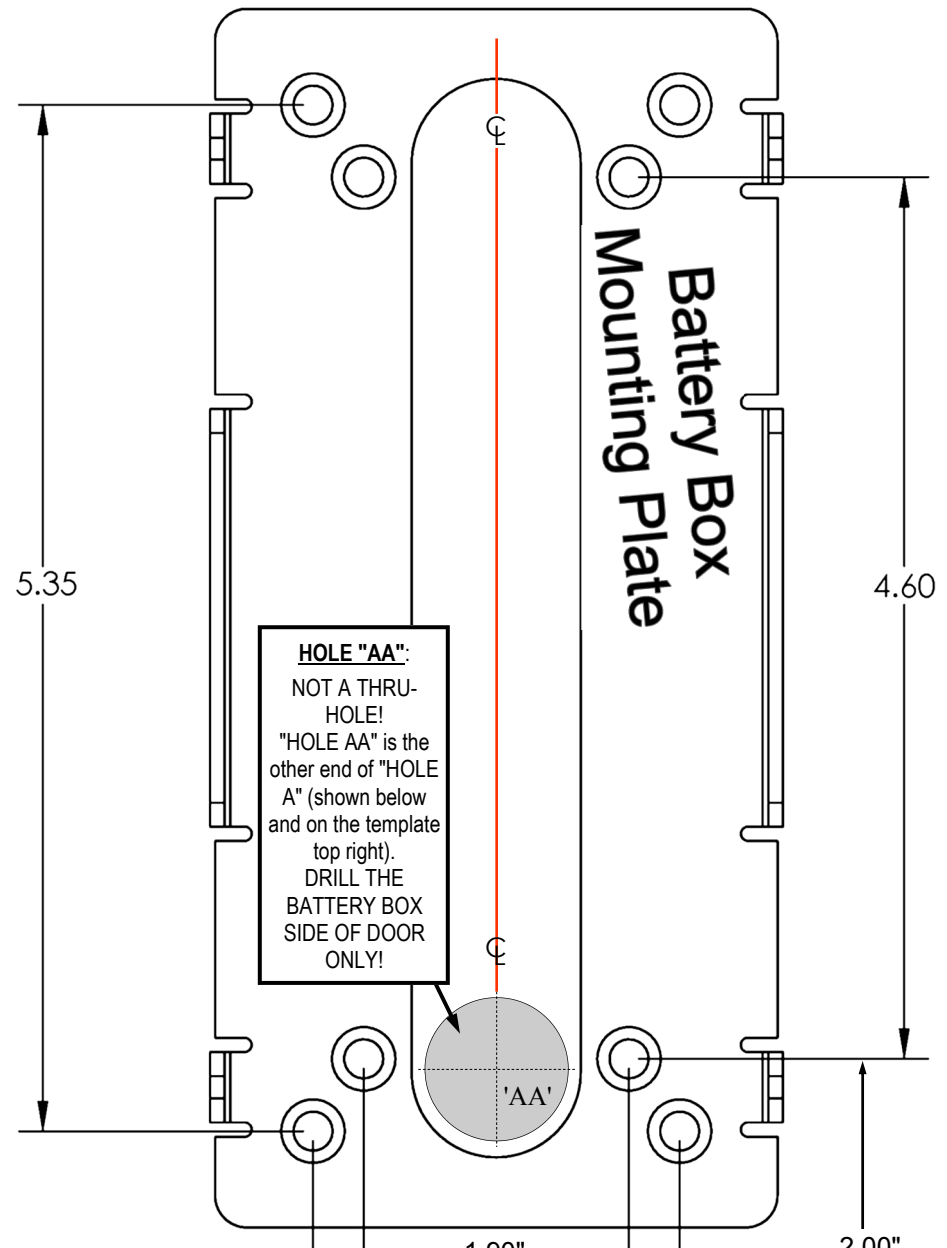


**HOLE "A"**  
 DRILL A 3/4" HOLE FOR THE WIRE TO "HOLE AA" ON BATTERY BOX TEMPLATE. PREFERABLY TO BE USED WITH HOLLOW DOORS BUT CAN BE DRILLED INTO A SOLID DOOR. THIS HOLE IS **NOT** A THROUGH-HOLE! DRILL THE ET-PDLN SIDE OF DOOR ONLY.

**HOLES "C":** This is the location of the two existing thru-bolt holes (5/16") for mounting the ET-PDL. These holes are also shown on the template (top right).

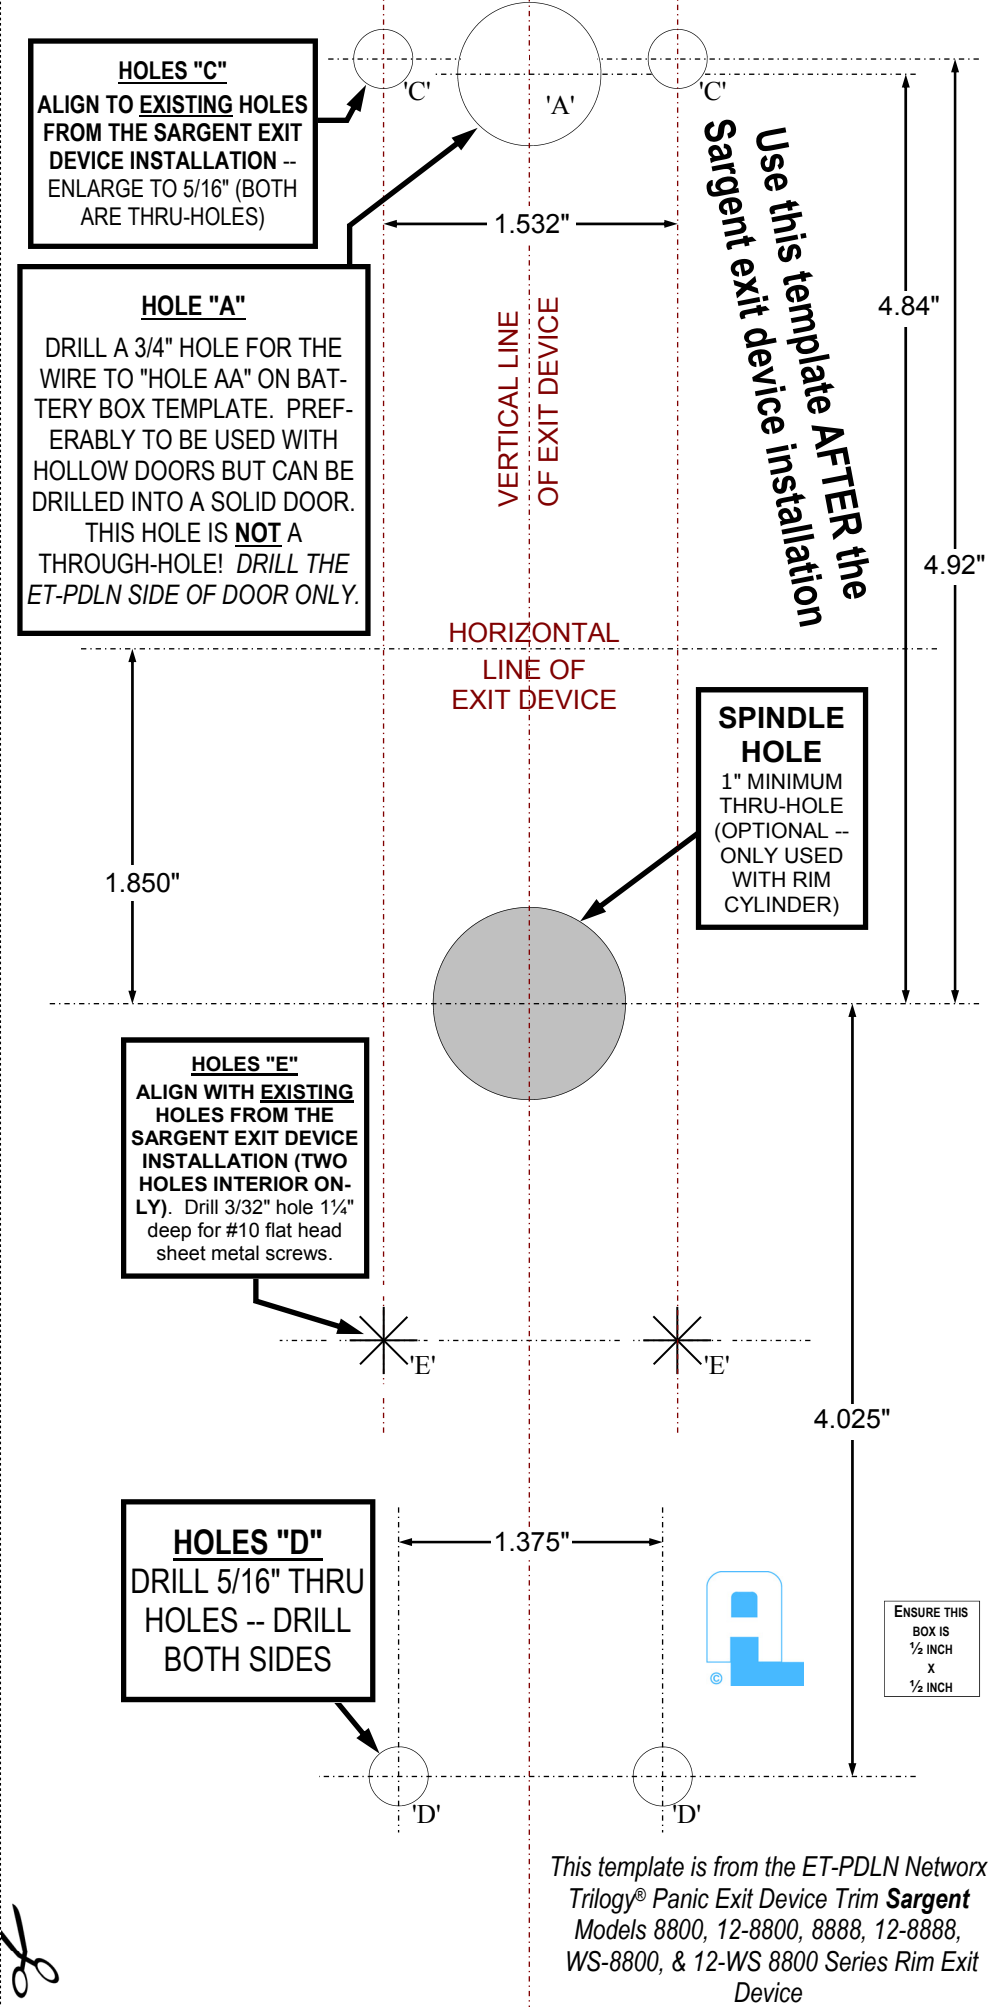

This template is from the ET-PDLN Networkx Trilogy® Panic Exit Device Trim Sargent Models 8800, 12-8800, 8888, 12-8888, WS-8800, & 12-WS 8800 Series Rim Exit Device

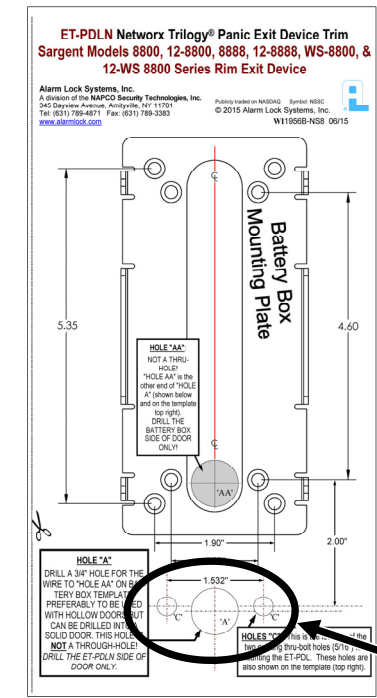

**Note:** There are two templates on this sheet. To show the relationship between the location of the lock body and the Battery Box, the holes "A" and "C" (located at the bottom of the "Battery Box Mounting Plate Template"), are also shown at the top of the "Lock Template". See WI1858-NS8 for step-by-step instructions.