


APPLICATION SCHEDULE	
DEVICE	DIM. "A"
9975 & 9975-F	11/16"
9875 & 9875-F	11/16"
8875 & 8875-F	1/2"
5575 & 5575-F	1/2"

PILOT DRILL FOR
#12 WOOD SCREW
2 PLACES

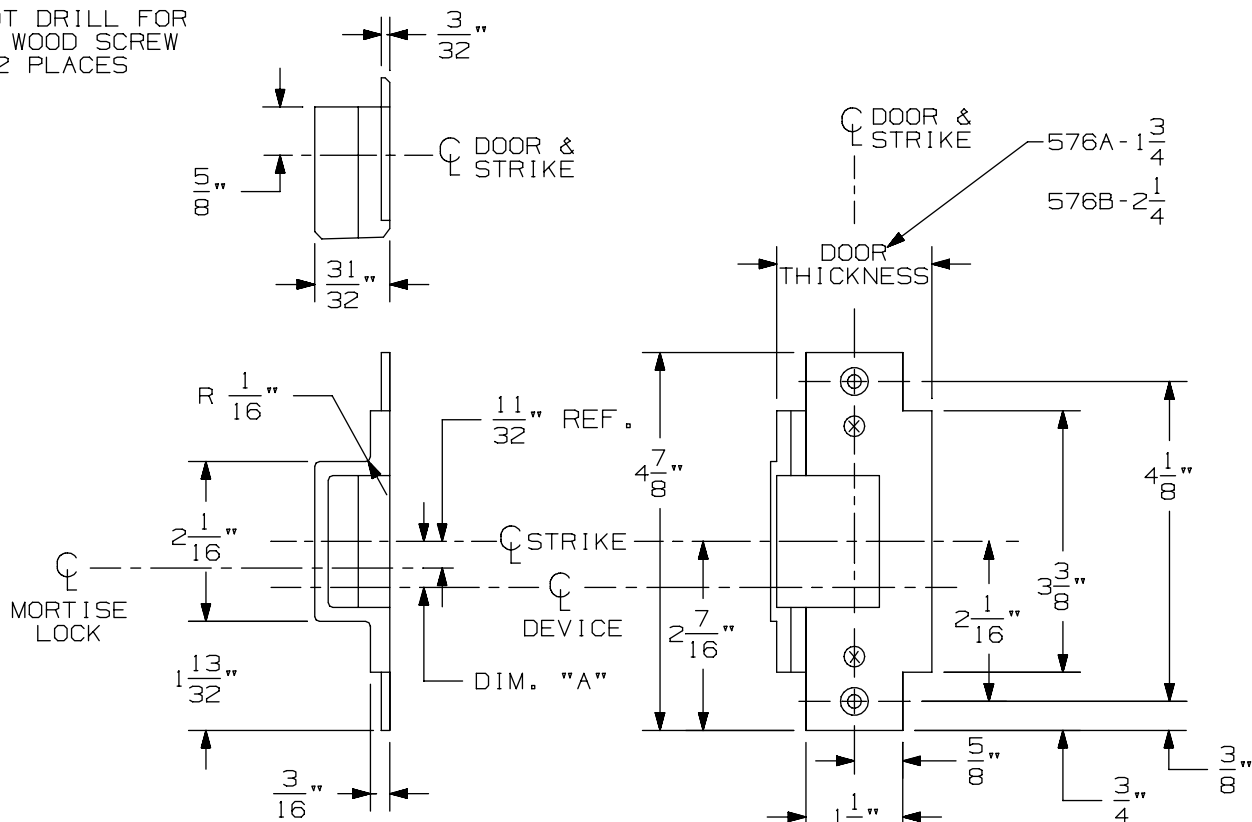

LHR APPLICATION SHOWN
RHR APPLICATION OPPOSITE

576A & 576B Mortise Strike for Mortise Lock (Wood Door)

VON DUPRIN®

NOTES: SEE MASTER SHEET #10001 FOR SUGGESTED REINFORCING

TEMPLATE
NUMBER:

W30211_a

DATE:
05-29-13