


LINE X-X CORRESPONDS TO
LINE X-X ON DEVICE TEMPLATE

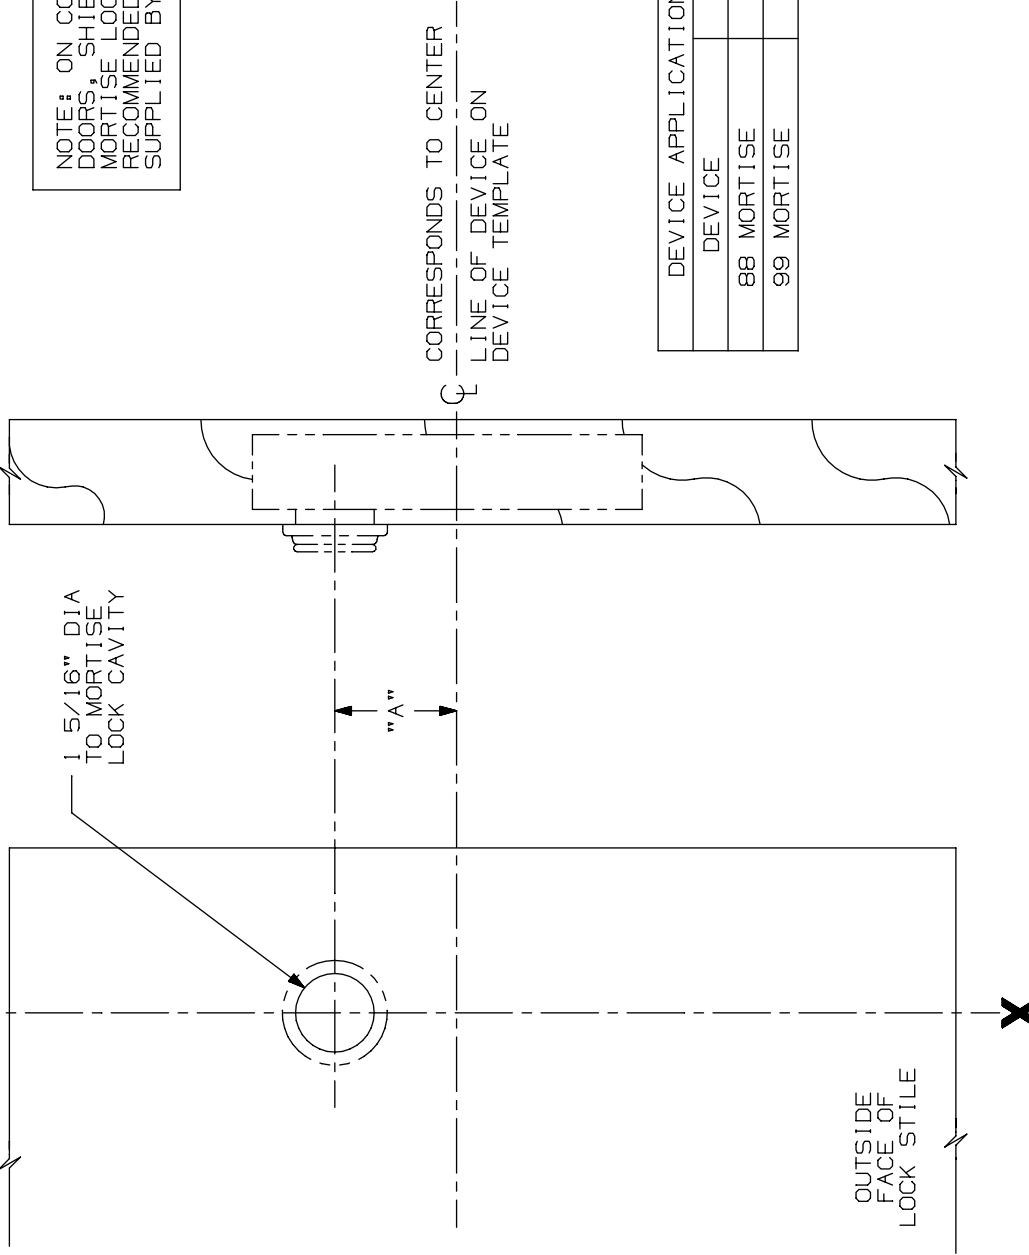

NOTE: ON COMPOSITE TYPE DOORS, SHIELDS FOR THE MORTISE LOCK & TRIM ARE RECOMMENDED. OTHERS ARE SUPPLIED BY OTHERS.

CORRESPONDS TO CENTER
LINE OF DEVICE ON
DEVICE TEMPLATE

DEVICE APPLICATION SCHEDULE	
DEVICE	DIM. "A"
88 MORTISE	2 1/32"
99 MORTISE	2 7/32"

LHR SHOWN
RHR OPPOSITE

NOTE: WIRING TO E7500 & SS7500 LOCKS GO THRU DOOR & NOT DEVICE.
NOTE: MOUNTING HOLES TO BE PREPARED AT INSTALLATION ON DOOR.

FOR CUTOUTS ON INSIDE FACE OF DOOR SEE DEVICE TEMPLATE.

7500 Mortise Lock Cylinder Preparation (Wood Door)

VON DUPRIN®

NOTES: SEE MASTER SHEET #10001 FOR SUGGESTED REINFORCING

TEMPLATE NUMBER:

W40019_a

DATE: 05-29-13