


"C" DIMENSION FORMULA

| | |
|---|--|
| | "A" (CENTERLINE OF OPENING TO HINGE STOP) |
| - | "B" (SEE DEVICE TEMPLATE FOR BACKSET) |
| = | |
| - | SUBTRACT 30 1/2" FOR DOOR FROM 2'6" THRU 3'0" SUBTRACT 42 1/2" FOR DOOR FROM 3'0" THRU 4'0" |
| = | "C" DIM. (ENTER CALCULATED DIMENSION BUT NOT LESS THAN 1 11/32") |

LHR SHOWN
RHR OPPOSITE

NOTE: MOUNTING HOLES TO BE PREPARED AT INSTALLATION ON DOOR.

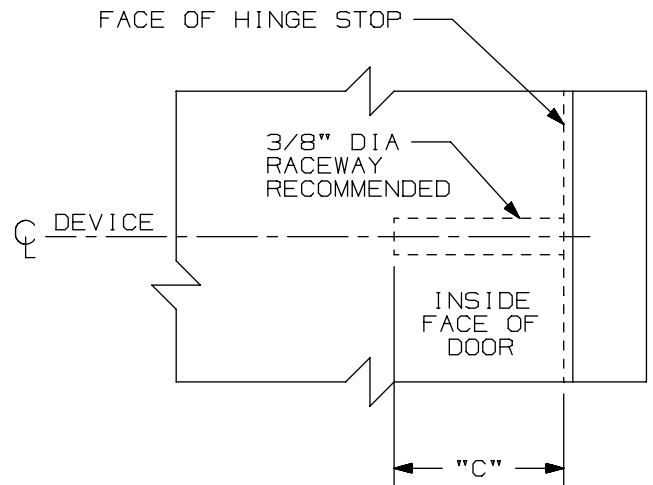

EL, SS, CX99 Series Rim Devices on Pair of Doors w/ Mullion Hinge Stile Preparation (Wood Door)

VON DUPRIN®

NOTES: SEE MASTER SHEET #10001 FOR SUGGESTED REINFORCING

TEMPLATE NUMBER:

W40085_a

DATE: 05-29-13