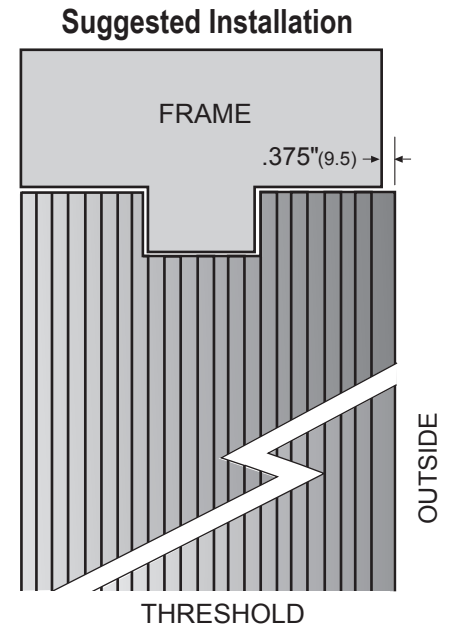# All Utility Thresholds

ZERO INTERNATIONAL

1 Measure and cut threshold to size as required.

2 Notch as necessary, to suit door frame.

3 Caulk underneath and around edges of threshold for moisture control.

4 Attach threshold to floor surface with screws provided.

Suggested Installation

FRAME

.375"(9.5)

OUTSIDE

THRESHOLD

ALLEGION