

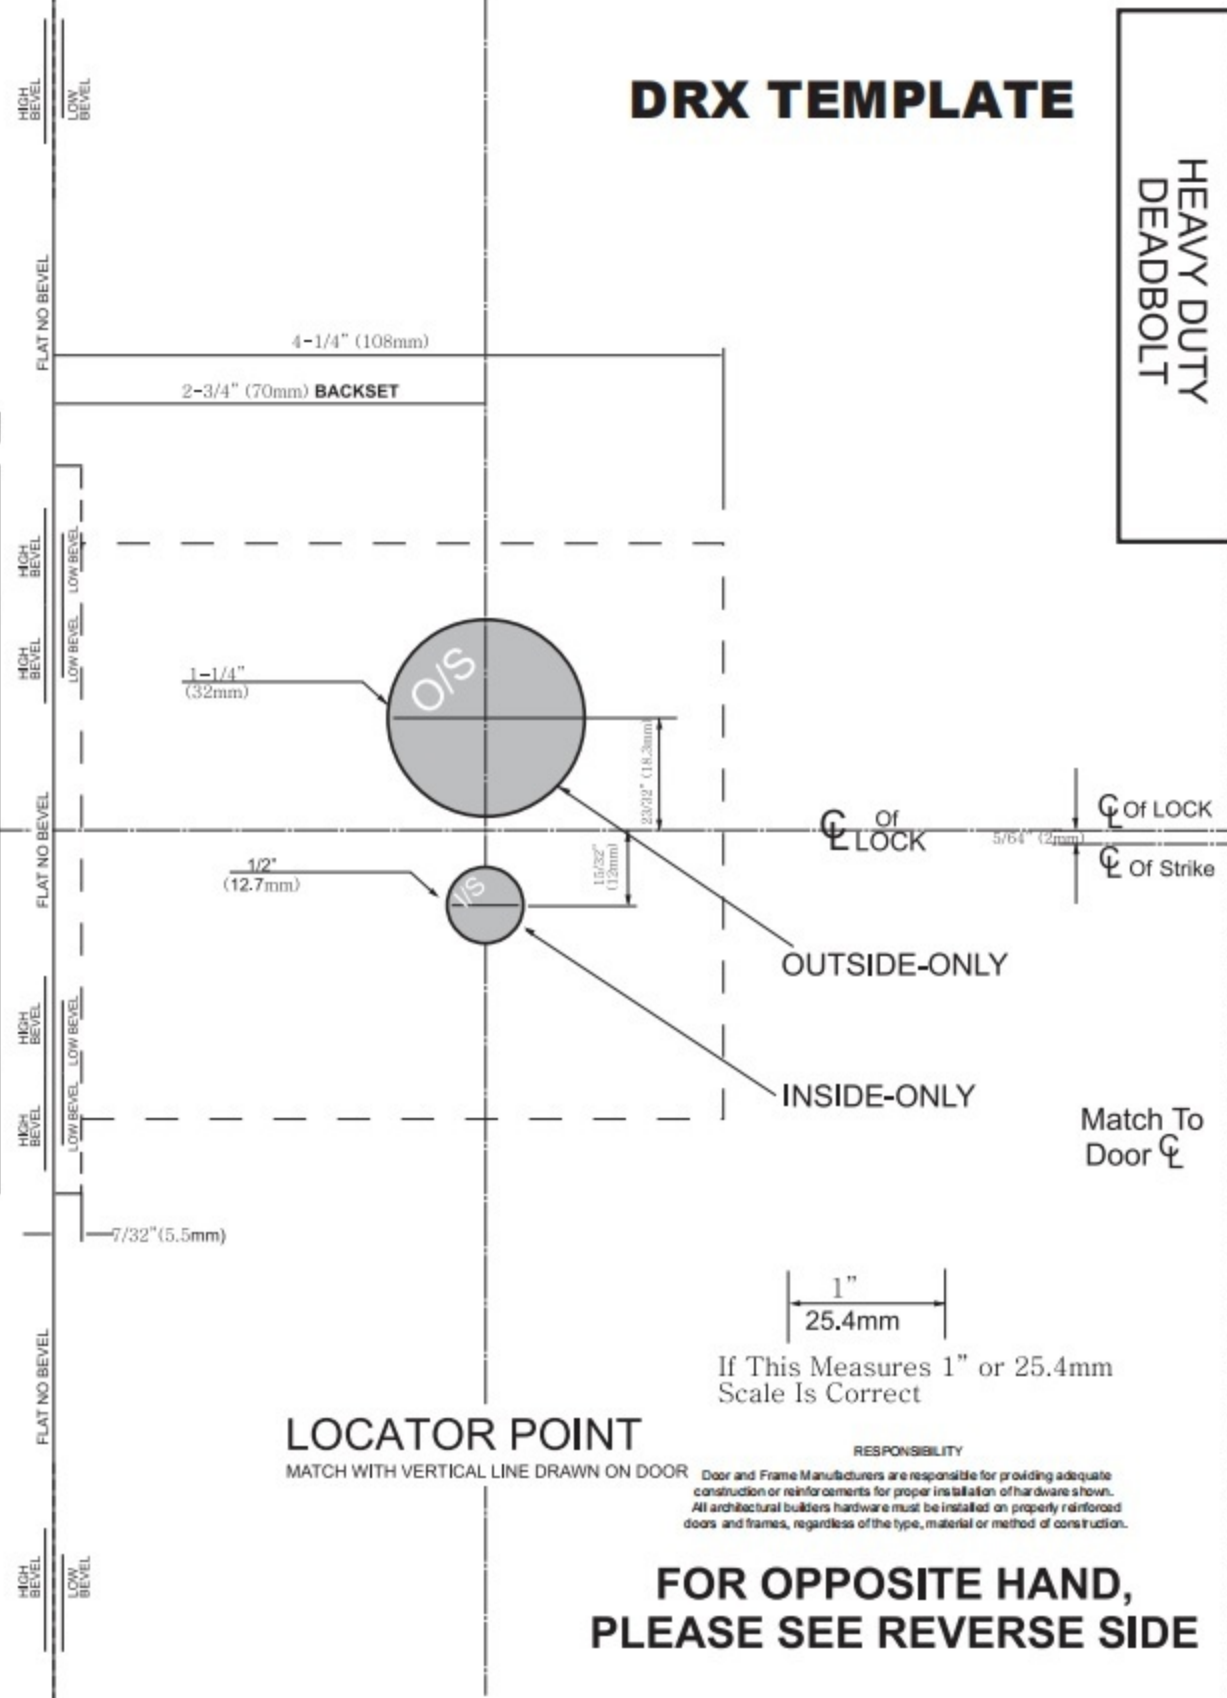


LOCK FUNCTION		OUTSIDE		INSIDE	
09	•	Cylinder Hole	•	Cylinder Hole	•
16	•	Thumb Turn Hole	•	Thumb Turn Hole	•
07	•	Thumb Turn Hole	•	Thumb Turn Hole	•
18	•	Thumb Turn Hole	•	Thumb Turn Hole	•

## DOOR PREPARATION CHART

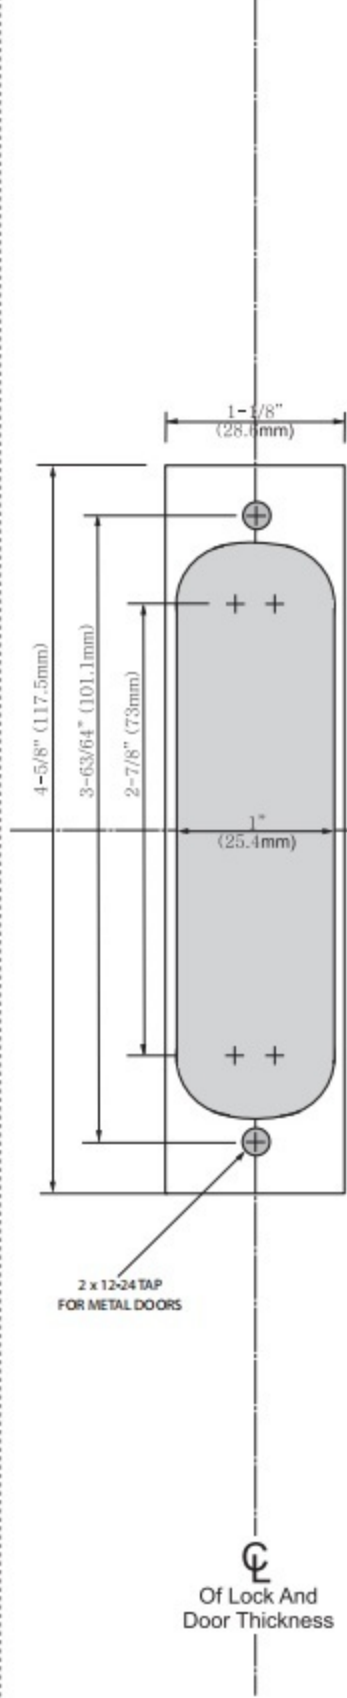

**HEAVY DUTY DEADBOLT**

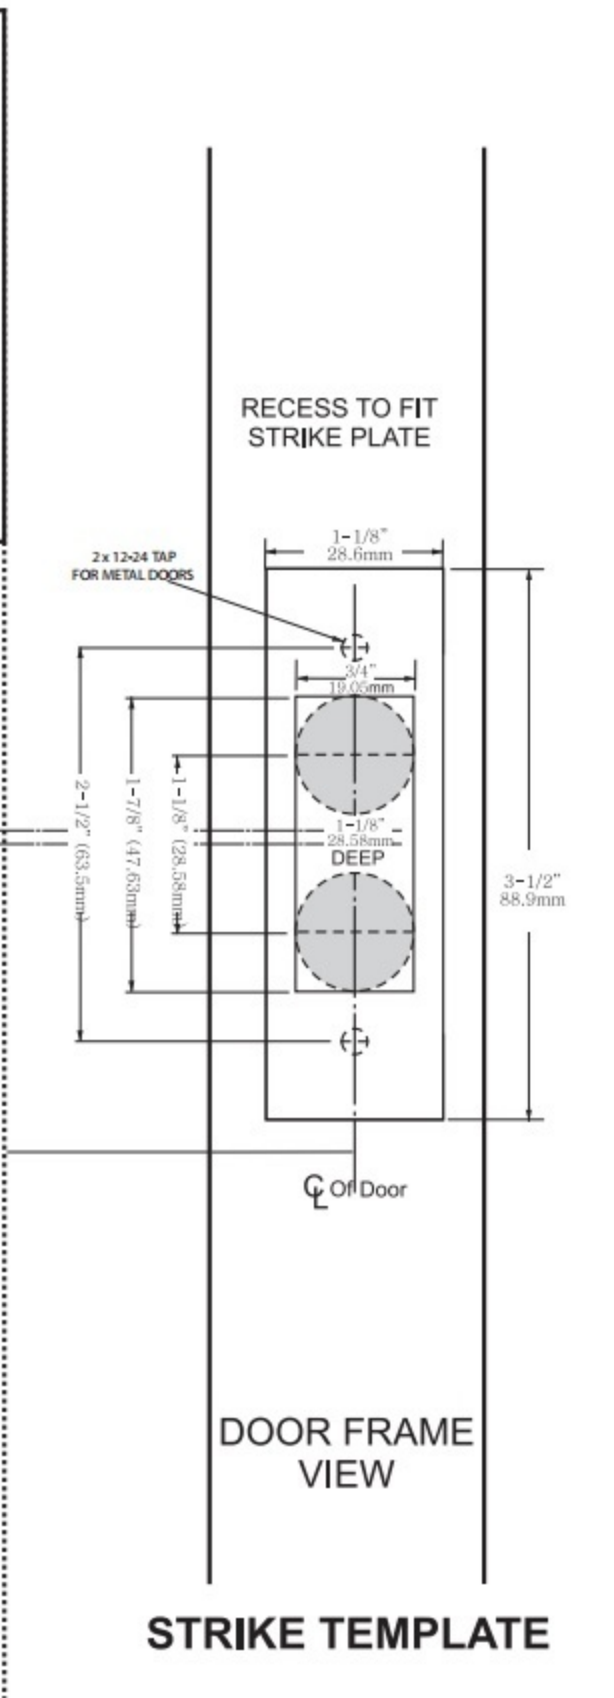

### LOCATOR POINT

MATCH WITH VERTICAL LINE DRAWN ON DOOR

**RESPONSIBILITY**  
 Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material or method of construction.

**FOR OPPOSITE HAND, PLEASE SEE REVERSE SIDE**