



Parallel Arm Installation Template – Flush Partitions Stop Only or Hold Open Unitrol Door Closer With or Without 1988 Drop Plate

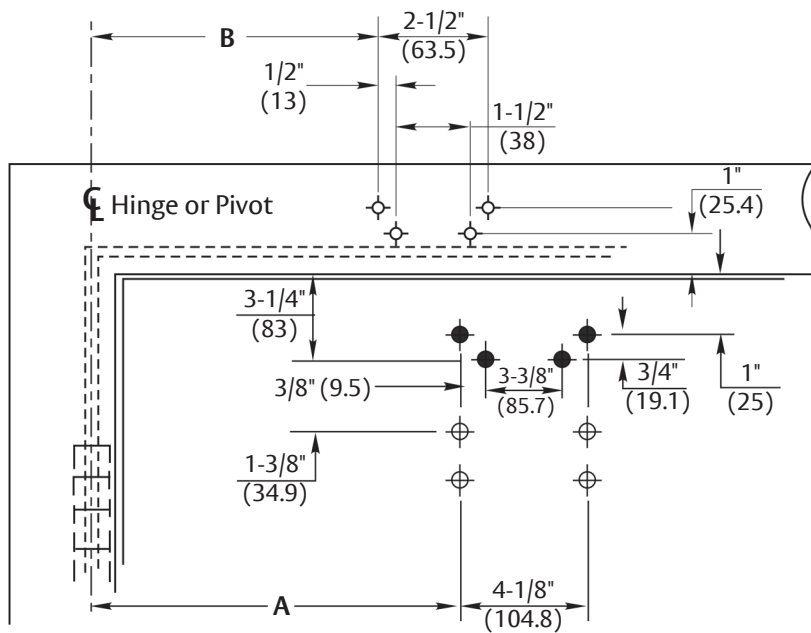

● No. 1988 Drop Plate Mounting Holes Only

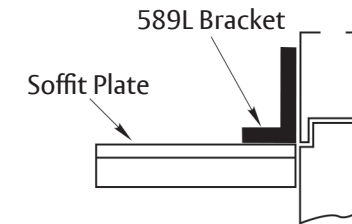

Notes:

1. Do not scale drawing
2. Left hand door shown.
3. Dimensions are in inches (mm).
4. **CAUTION:** Hollow-metal doors require channel or box type reinforcement.
5. UNI-1910 Series closers have a hold open arm feature and are not permitted to be used on fire door assemblies.

Door Opening Angle		Dimensions ★			
Hold Open ★★	Dead Stop	Butts and Offset Pivots		Center Pivots	
		A	B	A	B
85°	90°	11-5/8" (295)	10-1/2" (267)	12-3/8" (314)	11-1/4" (286)
90°	95°	11" (279)	9-7/8" (251)	11-3/4" (298)	10-5/8" (270)
95°	100°	10-1/2" (266)	9-1/2" (241)	11-1/4" (286)	10-1/8" (257)
100°	105°	10" (254)	8-7/8" (225)	10-3/4" (273)	9-5/8" (244)
105°	110°	9-1/2" (241)	8-3/8" (213)	10-1/4" (260)	9-1/8" (232)
110°	115°	9-1/8" (231)	8" (203)	9-7/8" (251)	8-3/4" (222)

★ "A" and "B" dimensions measured from centerline of hinge or pivot.
 ★★ Door must be free to swing 5" beyond hold-open position.

Preparation for Fasteners

Fasteners	Application	Door or Frame	Drill Sizes
Sex Nuts and Bolts	Closer Drop Plate 2022 Bracket	Hollow Metal	9/32" (7.00mm) through 3/8" (9.50mm) door face opposite to closer
		Aluminum or Wood	3/8" (9.50mm) through

Experience a safer and more open world

Copyright © 2004, 2006, 2023, ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

UNI-1900 Series Closer - Non Hold Open/Stop Arm
 UNI-1910 Series Closer - Hold Open/Stop Arm
 Flush Transom Parallel Arm with 589L Bracket
 Doors 28" – 32" (0.70-0.80m) Wide

Template Number:
7319-1354
Sheet: 1 of 1
Date: 12/23

ASSA ABLOY

1-800-438-1951
www.assaabloy.com