



INSTALLATION INSTRUCTIONS

For 106, 113, WD106 & WD113 Auxiliary Control With Concealed Vertical Rod Exit Devices

SARGENT

ASSA ABLOY

FOR ASSISTANCE, CONTACT SARGENT AT 800-727-5477 or www.sargentlock.com

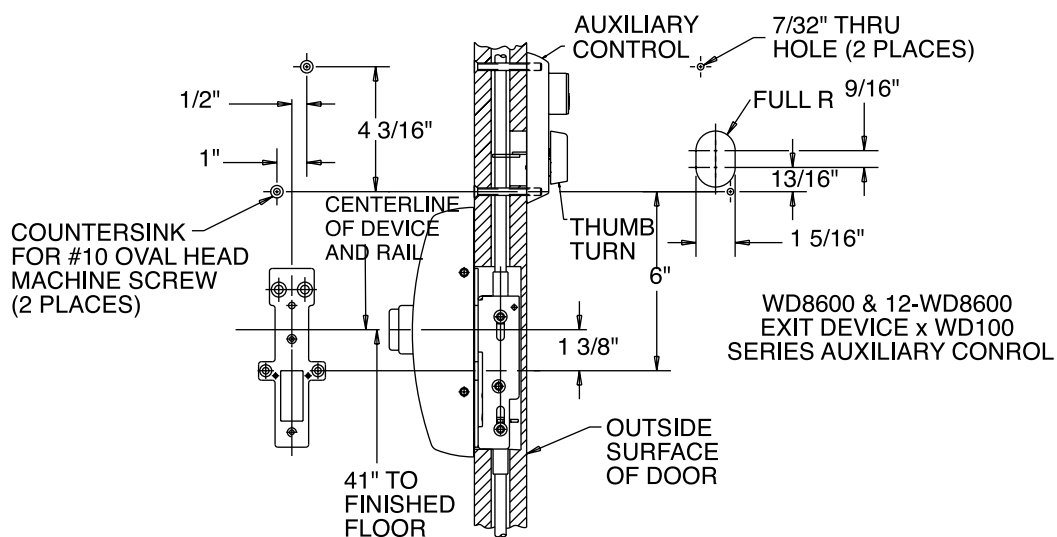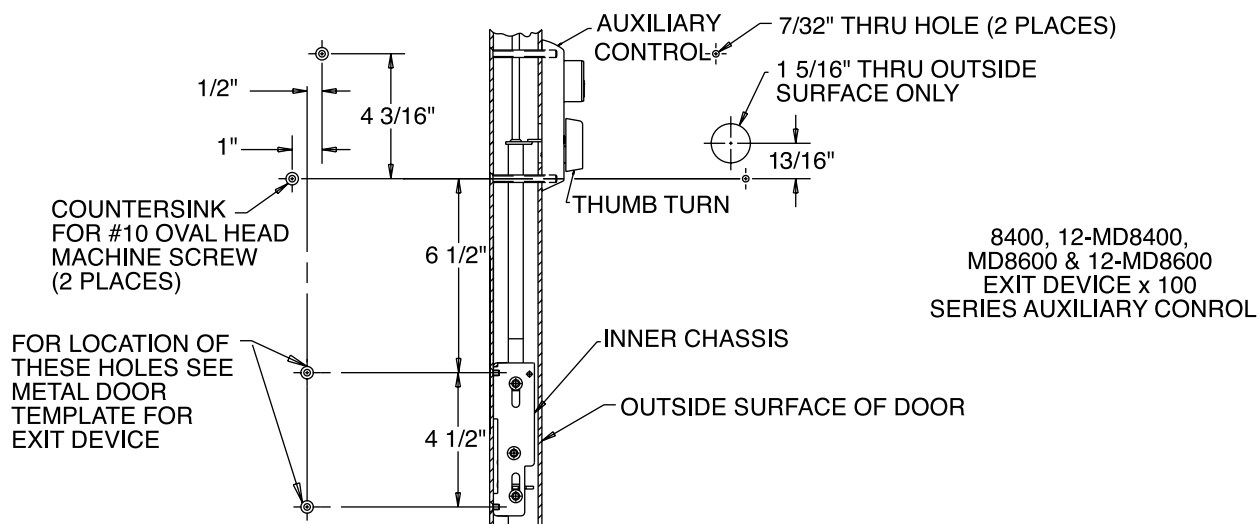

INSTRUCTIONS

1. USING EXIT DEVICE INSTRUCTIONS;
PREPARE DOOR FOR EXIT DEVICE.
2. PREPARE DOOR FOR AUXILIARY
CONTROL AS ILLUSTRATED ABOVE.
3. USING EXIT DEVICE INSTRUCTIONS;
MOUNT EXIT DEVICE TO DOOR.
4. MOUNT AUXILIARY CONTROL TO
DOOR AS ILLUSTRATED ABOVE.


OPERATION

THE 106 AUXILIARY CONTROL IS OPERATIVE
ONLY WHEN THE KEY IS IN THE CYLINDER
AND TURNED

THE 113 AUXILIARY CONTROL CAN BE
MADE OPERATIVE OR INOPERATIVE BY
TURNING THE KEY.


SARGENT®

ASSA ABLOY

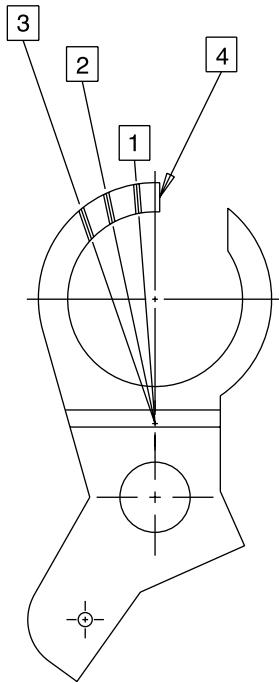

BREAK OFF POINTS (IF NEEDED)

- 1 USED FOR SARGENT 106 & WD106 FUNCTION.
- 2 USED ON 51-06 FUNCTION 82- & 83- CYLINDERS PREFIX (OLD STYLE REMOVEABLE CORE).
- 3 USED ON SARGENT 113 & WD113 FUNCTION ALL CYLINDERS.
- 4 USE AS IS FOR 70-106, 70-WD106, 72-106, 72-WD106, 73-106 AND 73-WD106 BEST CYLINDER FUNCTIONS. SCHLAGE CYLINDER SIZE #41.

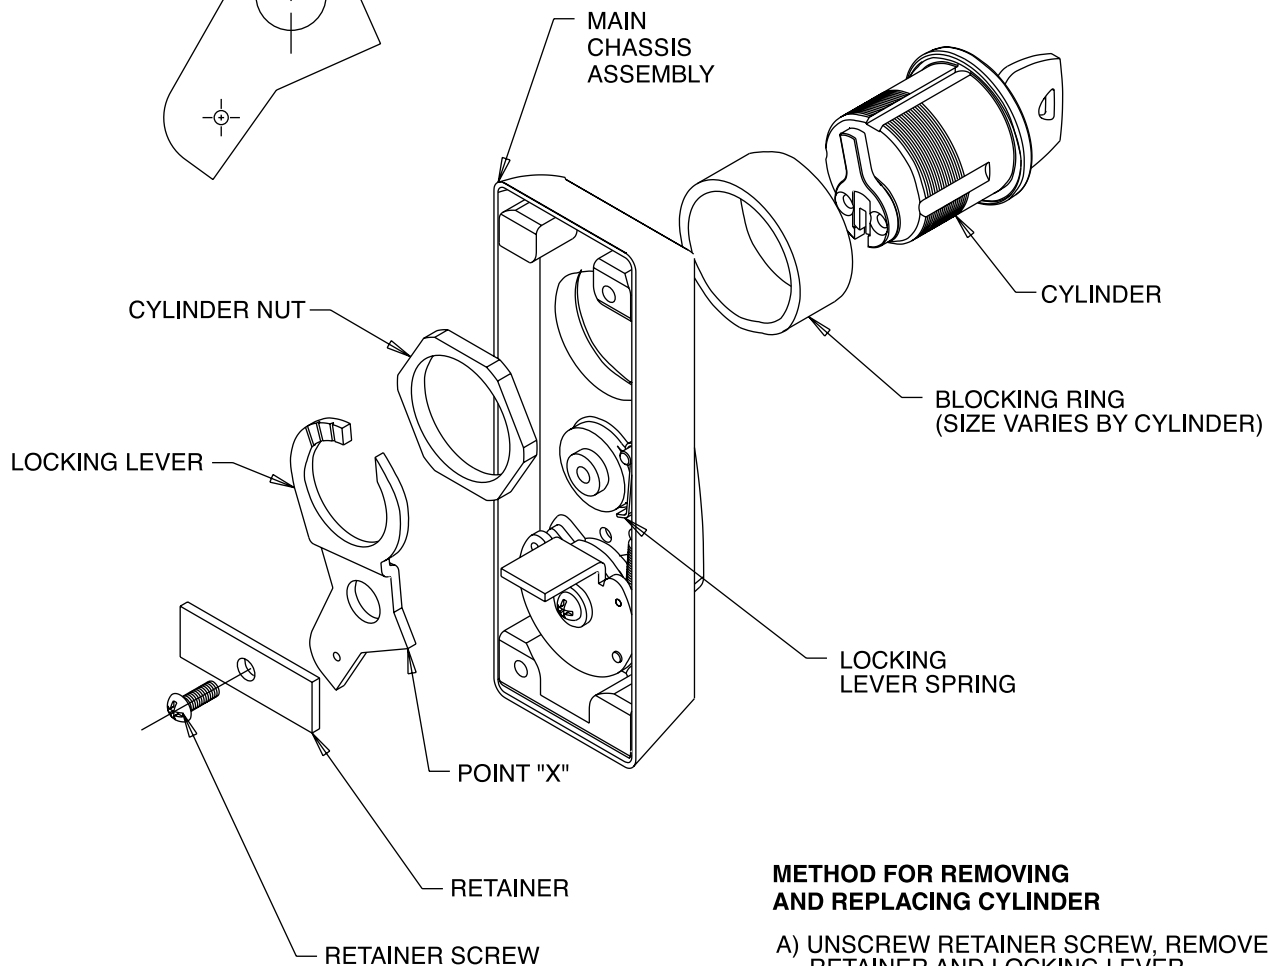

METHOD FOR REMOVING AND REPLACING CYLINDER

- A) UNSCREW RETAINER SCREW, REMOVE RETAINER AND LOCKING LEVER.
- B) UNSCREW CYLINDER NUT, REMOVE BLOCKING RING AND CYLINDER.
- C) REPLACE CYLINDER BY REVERSING PROCEDURES ABOVE. MAKE SURE THAT CYLINDER CAM FACES UP AND THAT LOCKING LEVER SPRING ENGAGES LOCKING LEVER AT POINT "X".