INSTALLATION INSTRUCTIONS FOR
8200 ALP MORTISE LOCK
VISUAL (185CALP) / OCCUPANCY (185PALP) INDICATORS

FOR INSTALLATION ASSISTANCE CALL SARGENT AT 1-800-727-5477 / www.sargentlock.com

SARGENT

ASSA ABLOY

ASSA ABLOY, the global leader in door opening solutions

185CALP

185PALP

Item No.	Part No.	Description	QTY
1	82-0592	PLAIN BUTTON	1
1	82-0591	EMERGENCY BUTTON	
2	78-0486	INDICATOR HOUSING	1
3	82-4050	SLIDE ASSEMBLY (RED/WHITE)	1
3	82-4051	SLIDE ASSEMBLY (VAC/OCC)	
4	82-0590	HUB PLATE	1
5	01-4552	RETAINING RING	1
6	77-1195	SPINDLE (FOR DOORS 1-3/8" THRU 2-1/4")	1
7	01-2036	#6 x 5/8" WOOD SCREW (NOT SHOWN)	2
8	01-1020	#6-32 x 1/2" MACHINE SCREW (NOT SHOWN)	2

185CALP

185PALP
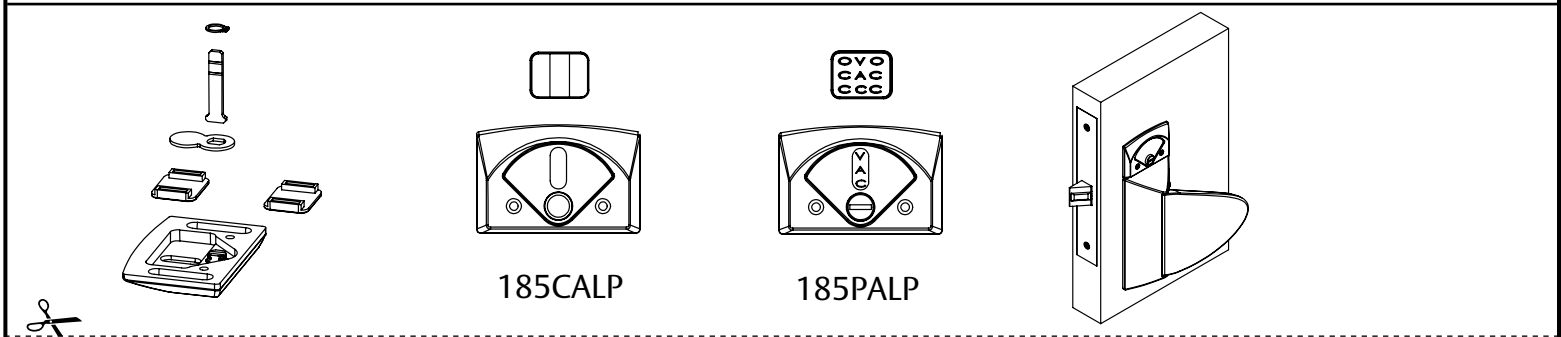
FOLD HERE ACCORDING TO DOOR HAND AND BEVEL

Installation Instructions: Install lockbody & trim per instructions. Engage & align indicator/thumbturn with lockbody & trim. Mark pilot holes and drill (2) #6 (.204) holes for wood doors or drill & tap (2) #6-32 holes. Secure to door with screws supplied.

LOW SIDE OF DOOR INSIDE LHRB OUTSIDE RH

CENTER LINE OF BEVEL

HIGH SIDE OF DOOR INSIDE LH OUTSIDE RHRB

$2\frac{1}{2}$"

$2\frac{3}{4}$"

$\frac{3}{4}$"

$1\frac{1}{2}$"

FOR METAL DOORS: DRILL (2) PILOT HOLES 0.106 (#36 DRILL) AND TAP (#6-32 UNC)

$\frac{1}{2}$" DIA. HOLE

LEVER OR KNOB

EMERGENCY BUTTON/ THUMB TURN HOLE
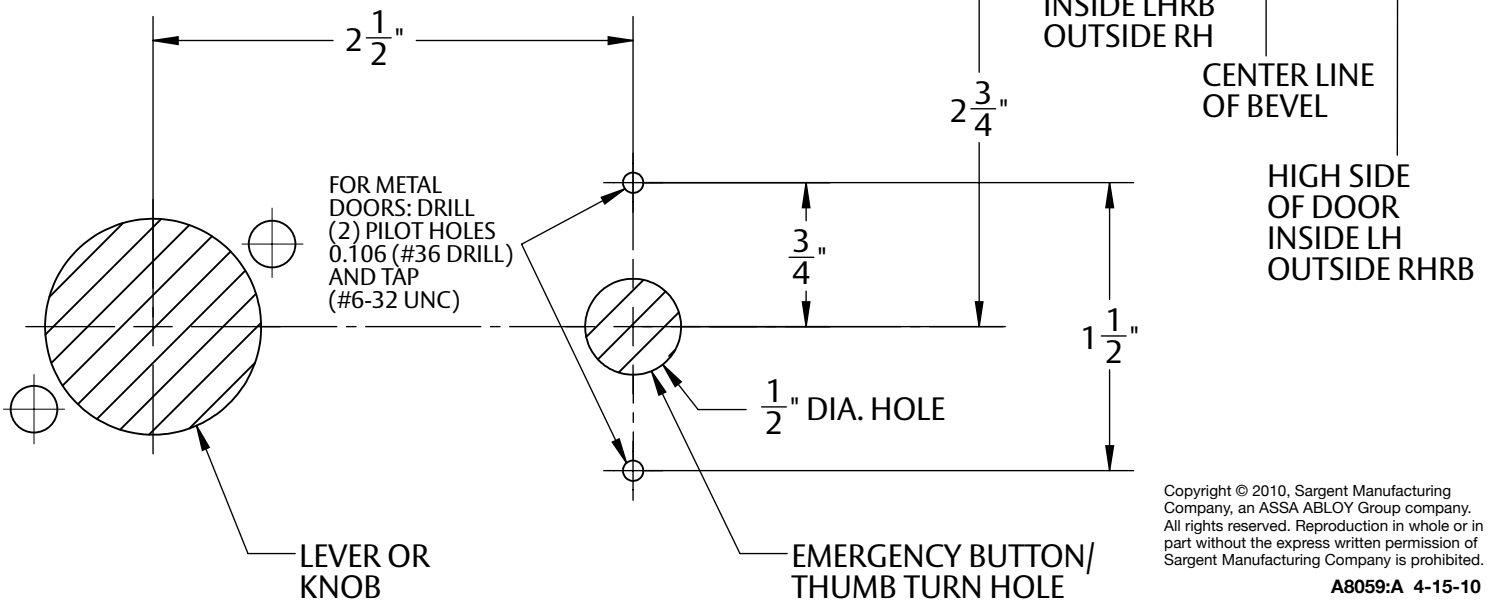
A8059:A 4-15-10

INSTALLATION INSTRUCTIONS FOR
8200 ALP MORTISE LOCK
## VISUAL (186CALP) / OCCUPANCY (186PALP) INDICATORS

FOR INSTALLATION ASSISTANCE CALL SARGENT AT 1-800-727-5477 / www.sargentlock.com

SARGENT®

ASSA ABLOY

ASSA ABLOY, the global leader in door opening solutions

186CALP

186PALP
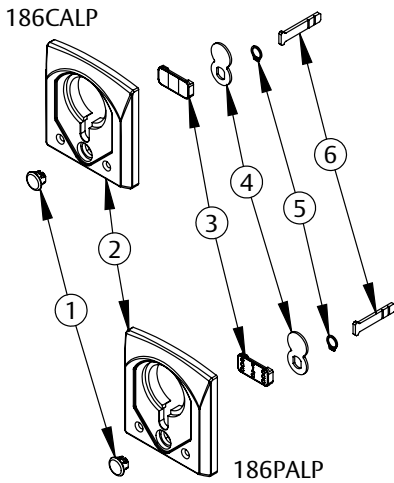
| Item No.	Part No.	Description	QTY
1	82-0592	PLAIN BUTTON	1
2	78-0491	INDICATOR HOUSING (CYLINDER)	
3	82-4836	SLIDE ASSEMBLY (RED/WHITE)	1
	82-4837	SLIDE ASSEMBLY (VAC/OCC)	
4	82-0590	HUB PLATE	1
5	01-4552	RETAINING RING	1
6	77-1195	SPINDLE (FOR DOORS 1-3/8" THRU 2-1/4")	1
7	01-2036	#6 x 5/8" WOOD SCREW (NOT SHOWN)	2
8	01-1020	#6-32 x 1/2" MACHINE SCREW (NOT SHOWN)	2

Note: 186PALP & 186CALP indicators are designed for use with #41(1-1/8") cylinders. For longer cylinders, shims are supplied; for #42 (1-1/4") cylinders, use (1) shim and for #43 (1-3/8") cylinders, use (2) shims.
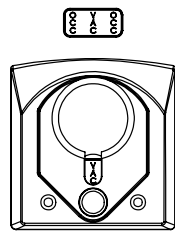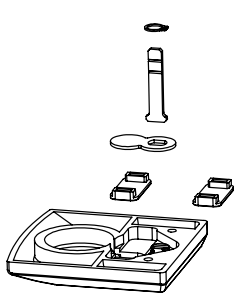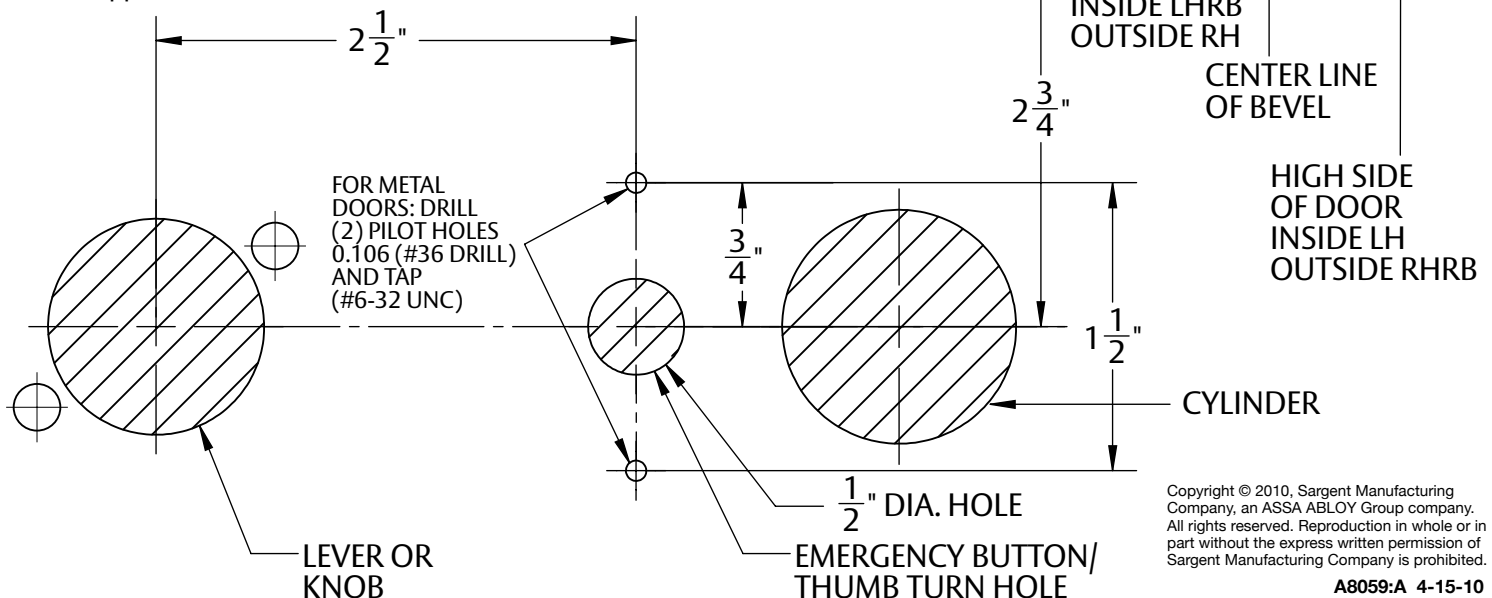
186PALP
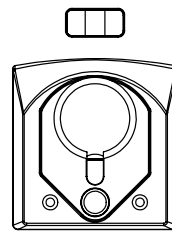
186CALP
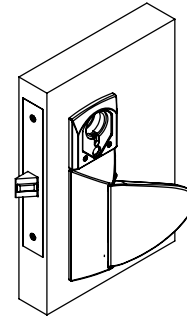
FOLD HERE ACCORDING TO DOOR HAND AND BEVEL

Installation Instructions: Install lockbody & trim - except the cylinder - per instructions. Engage & align indicator with lockbody & install cylinder through the indicator and secure. Mark pilot holes and drill (2) #6 (.204) holes for wood doors or drill & tap (2) #6-32 holes. Secure to door with screws supplied.

LOW SIDE OF DOOR INSIDE LHRB OUTSIDE RH

CENTER LINE OF BEVEL

HIGH SIDE OF DOOR INSIDE LH OUTSIDE RHRB

$2\frac{1}{2}$"

$2\frac{3}{4}$"

FOR METAL DOORS: DRILL (2) PILOT HOLES 0.106 (#36 DRILL) AND TAP (#6-32 UNC)

$\frac{3}{4}$"

$1\frac{1}{2}$"

CYLINDER

$\frac{1}{2}$" DIA. HOLE

LEVER OR KNOB

EMERGENCY BUTTON/ THUMB TURN HOLE

A8059:A 4-15-10