LHR ONLY

* SEE 8700 TEMPLATE FOR PREP DIMS.

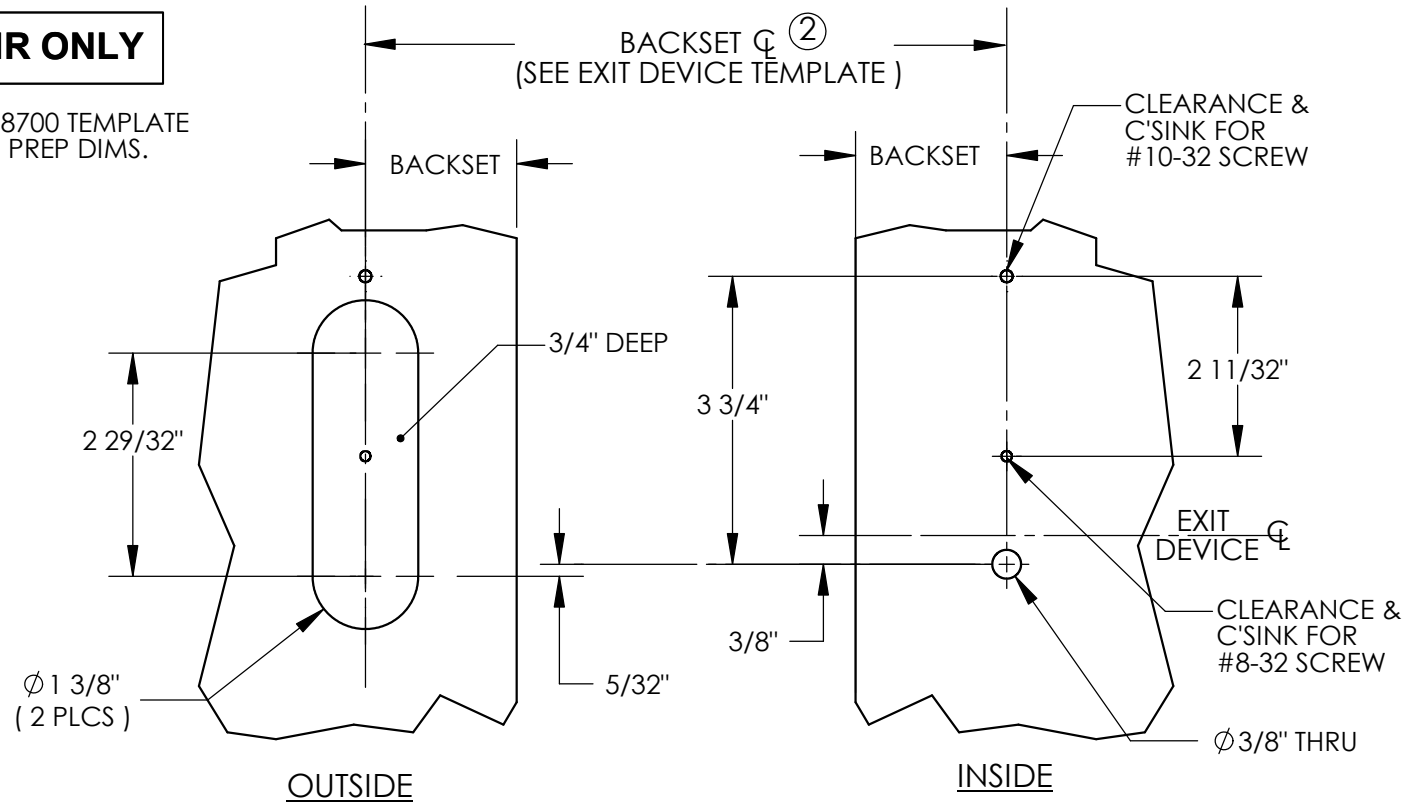

RHR ONLY

* SEE 8700 TEMPLATE FOR PREP DIMS.

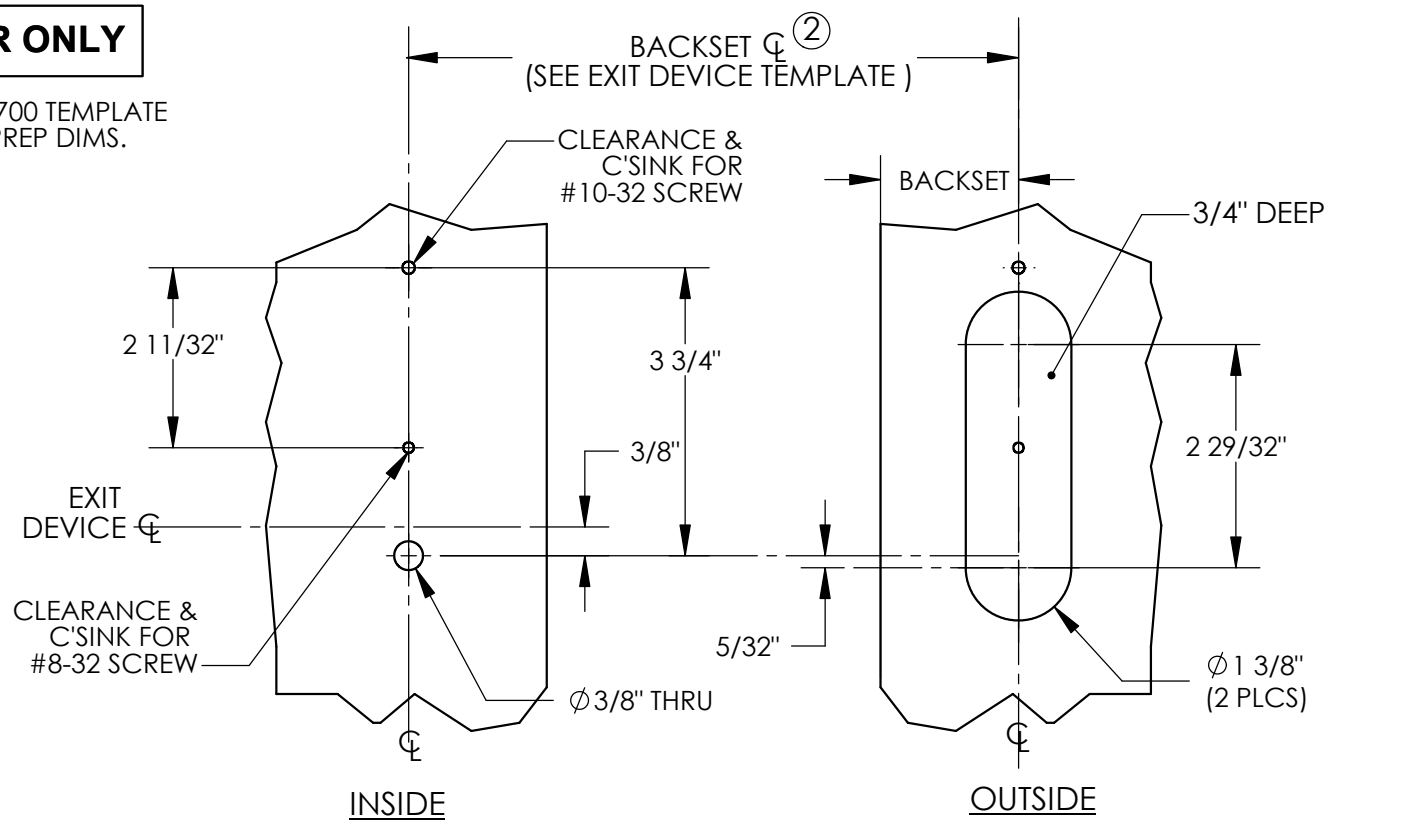

8066 ENTRY FUNCTION FOR 8700 RIM EXIT WOOD DOOR PREPARATION

NOTE:
SEE MASTER SHEET 10001 FOR SUGGESTED REINFORCEMENT

TEMPLATE NO.: 20137-2

DATE: 03/08/04

ADAMS RITE MANUFACTURING CO.
260 Santa Fe Street, Pomona, CA 91767
Phone: (909) 632-2300 Fax: (909) 632-2369