650F54 STRIKE DETAIL

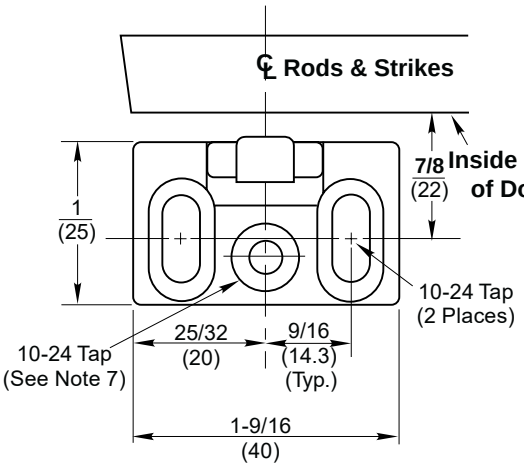

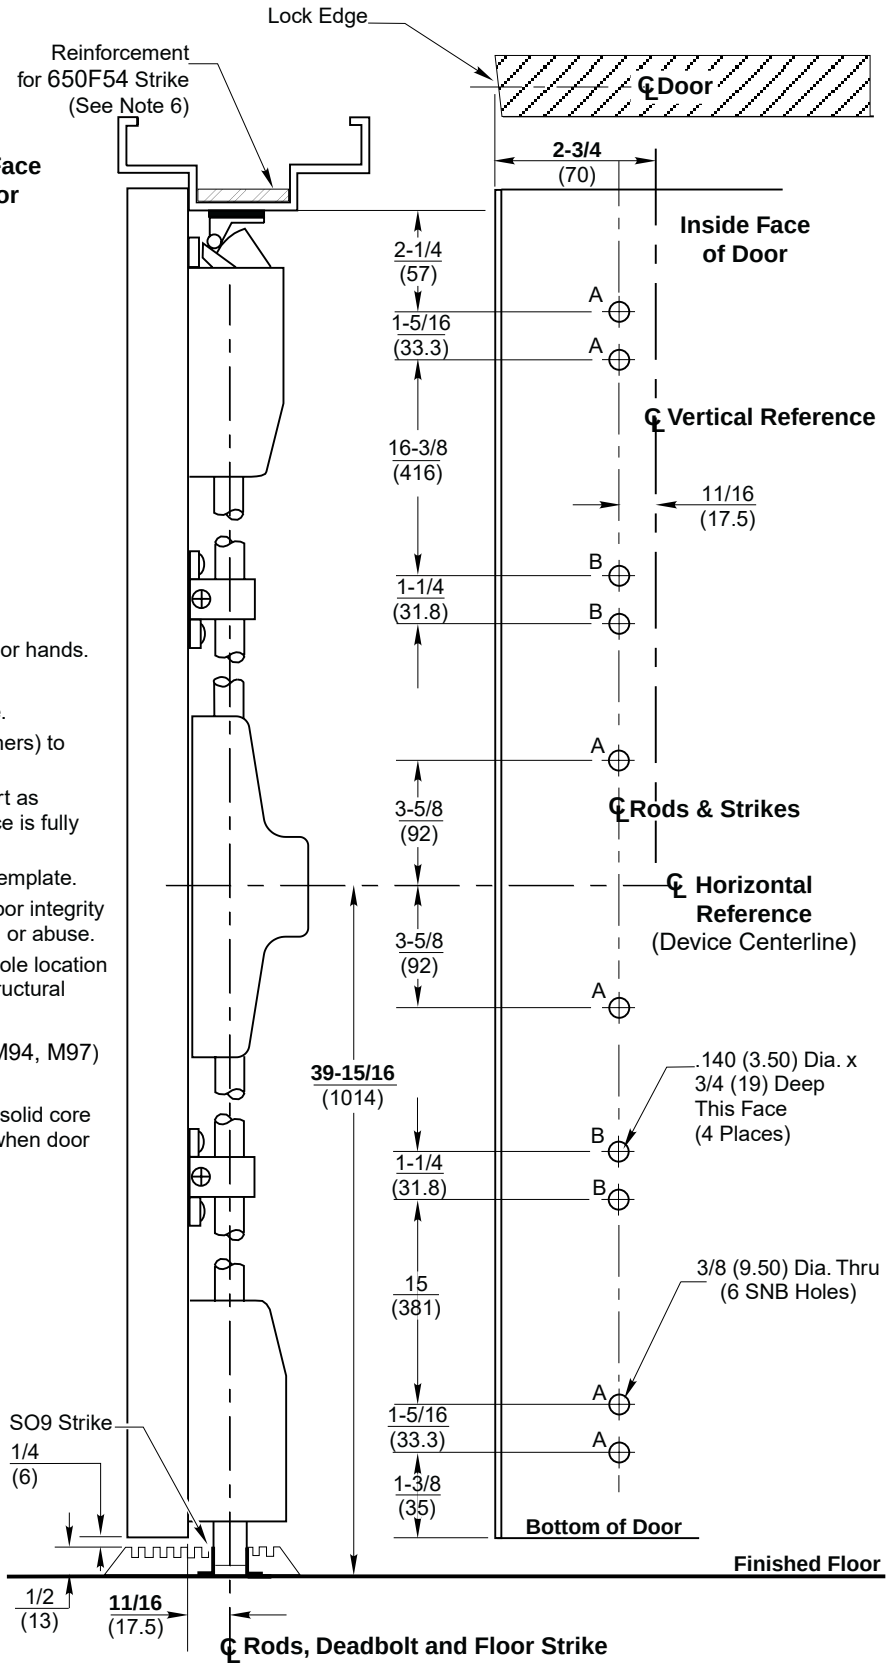

Notes:

1. Do not scale drawing.
2. Dimensions are in inches (mm).
3. LHR door shown. Preparation is typical for both door hands.
4. Minimum door stile width: 4-1/2 (114).
5. Prepare mounting holes when installing the device.
6. Unreinforced frames require blind rivet nuts (by others) to mount the strike.
7. This hole MUST be field located using physical part as template, after installation is complete and device is fully operational.
8. For outside trim preparation see appropriate trim template.
9. Provide adequate structural support to maintain door integrity after device installation with power tools, door use, or abuse.
10. Device mount to hinge stile (not shown) requires hole location and preparation during device installation. Door structural requirements are similar for both door stiles.
11. For electrical devices (suffixes M91, M92, M93, M94, M97) also see template T30890.
12. Wood screws #14x1-1/4" (by others) permitted for solid core wood doors if pilot holes are used for installation, when door label allows its use.

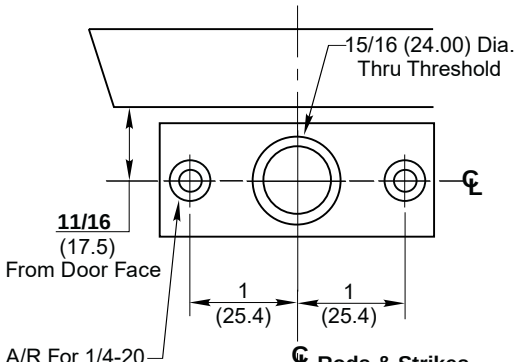

SO9 STRIKE DETAIL (650F88)

ED2400 & ED2400A, ED5400 & ED5400A Series Surface Vertical Rod Exit Devices with Optional SNB

Application for Wood or Composite Door and H.M. Frame with 1/2" Threshold and SO9 Optional Floor Strike

Corbin Russwin ®
ASSA ABLOY

SUPERSEDES T30838-2	DO NOT SCALE DRAWING	
TEMPLATE NUMBER T30838-3	DATE 10-22	

Copyright © 2018-2022, ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.