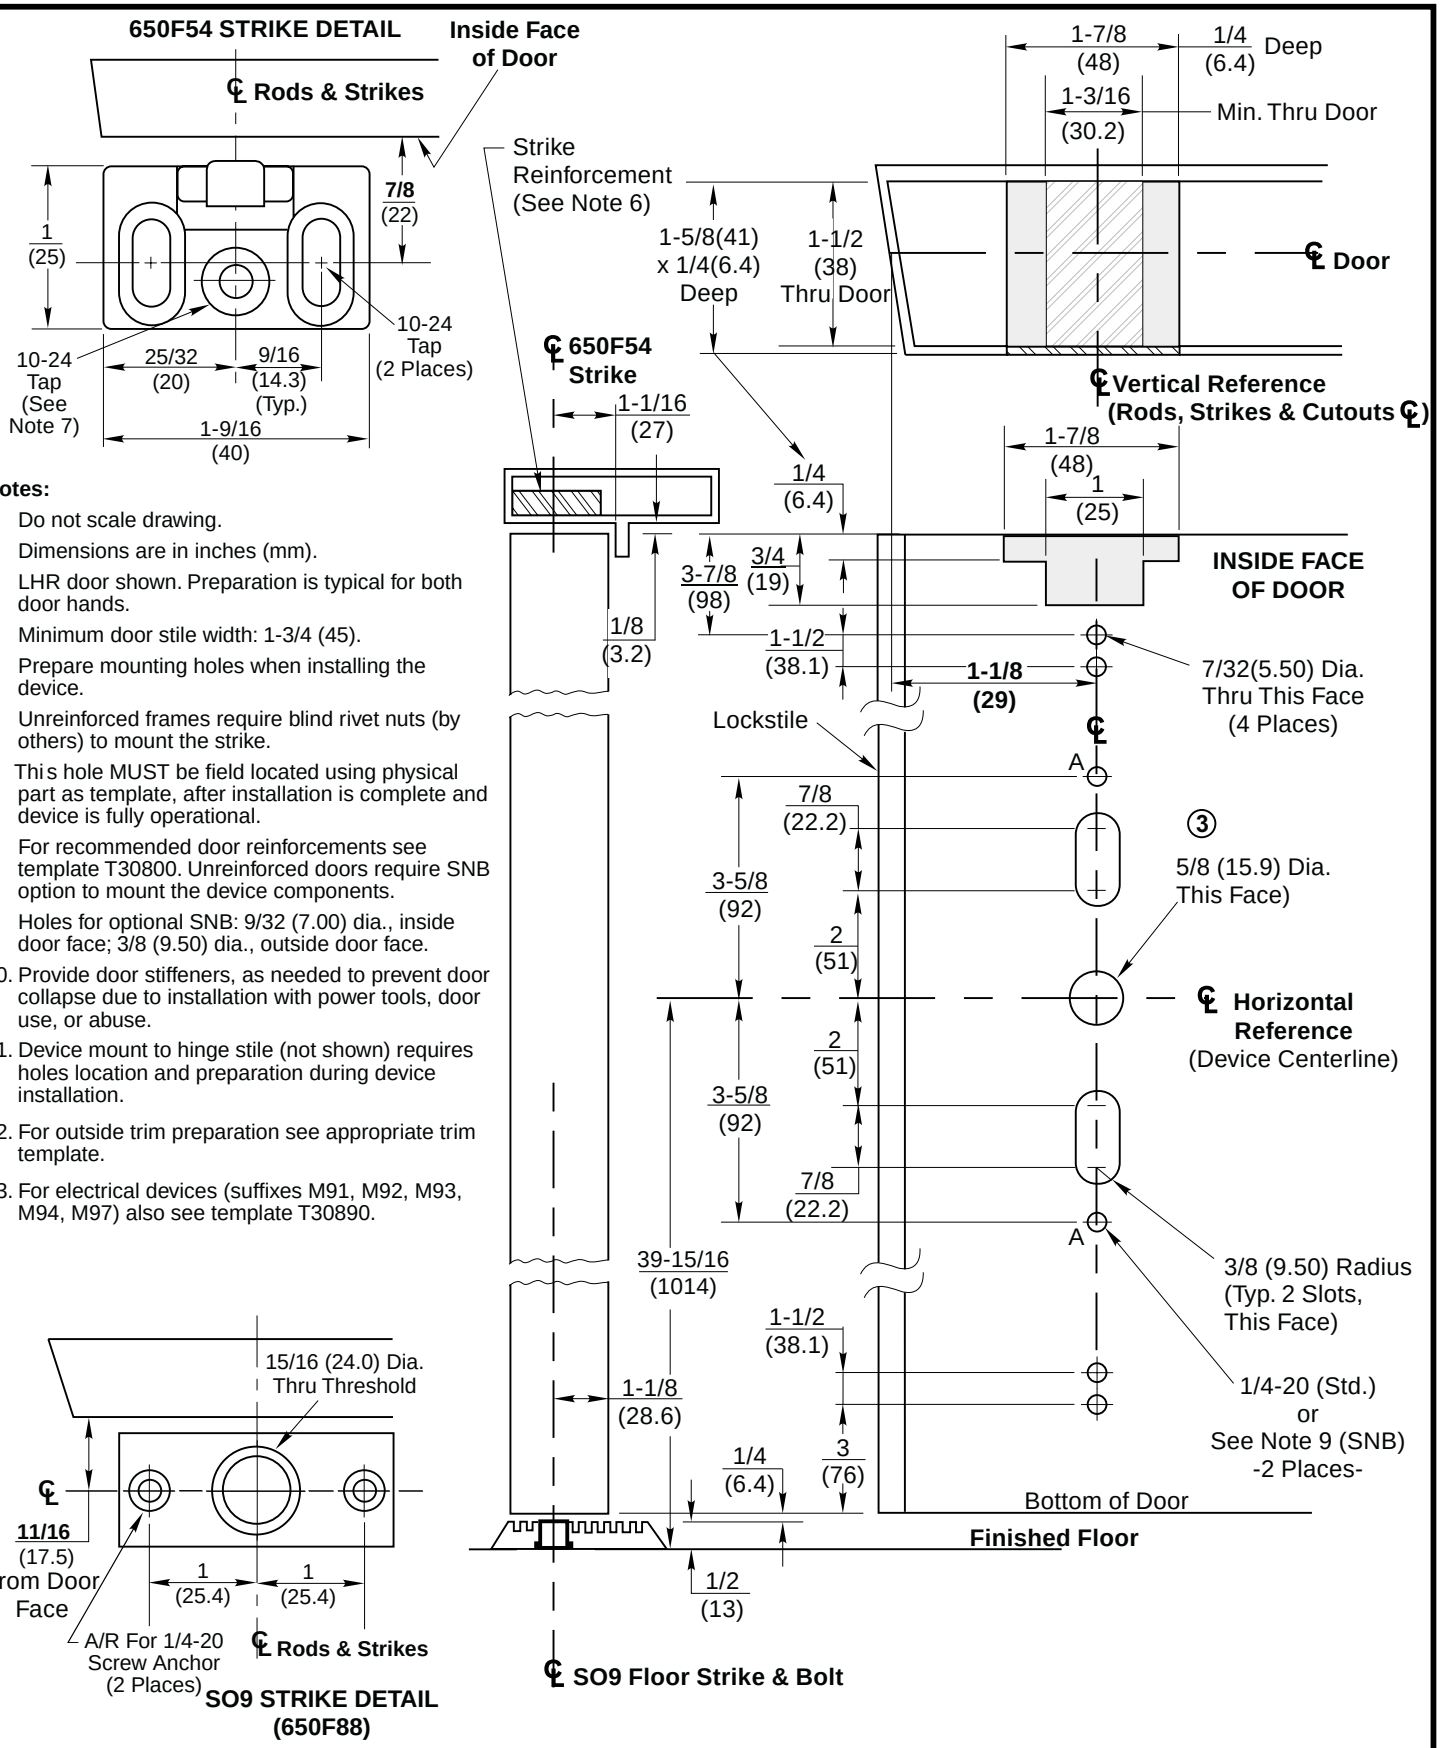

Notes:

1. Do not scale drawing.
2. Dimensions are in inches (mm).
3. LHR door shown. Preparation is typical for both door hands.
4. Minimum door stile width: 1-3/4 (45).
5. Prepare mounting holes when installing the device.
6. Unreinforced frames require blind rivet nuts (by others) to mount the strike.
7. This hole MUST be field located using physical part as template, after installation is complete and device is fully operational.
8. For recommended door reinforcements see template T30800. Unreinforced doors require SNB option to mount the device components.
9. Holes for optional SNB: 9/32 (7.00) dia., inside door face; 3/8 (9.50) dia., outside door face.
10. Provide door stiffeners, as needed to prevent door collapse due to installation with power tools, door use, or abuse.
11. Device mount to hinge stile (not shown) requires holes location and preparation during device installation.
12. For outside trim preparation see appropriate trim template.
13. For electrical devices (suffixes M91, M92, M93, M94, M97) also see template T30890.

ED4800 Series Narrow Stile
Concealed Vertical Rod Panic Devices
Application for Aluminum Door and Blade Stop Frame
With 1/2" Threshold and Optional SO9 Floor Strike.

Corbin Russwin®
www.corbinrusswin.com

SUPERSEDES T30879-2	DO NOT SCALE DRAWING	
TEMPLATE NUMBER T30879-3	DATE 3-01	