K-REX
TRIM REX MONITORING KIT
INSTALLATION INSTRUCTIONS
SDC MODELS: GK08, EK08, GK14, EK14, EKE03 & GKE03

INSTALL THE KIT PARTS AS SHOWN

REMOVE AND RETAIN THESE
EXISTING COMPONENTS

For Hollow Metal doors run
1/2" conduit.

For Wood doors drill 3/8"
wire raceway from hinge
side through door.

Hinge side
of Door

ROUTE WIRES AS SHOWN THRU
CABLE TIE AND ALONG SIDE OF THE LOCK.
COM = WHT/RED
N/O = YEL/RED
N/C = ORG/RED
3 AMPS @ 125 VAC RESISTIVE
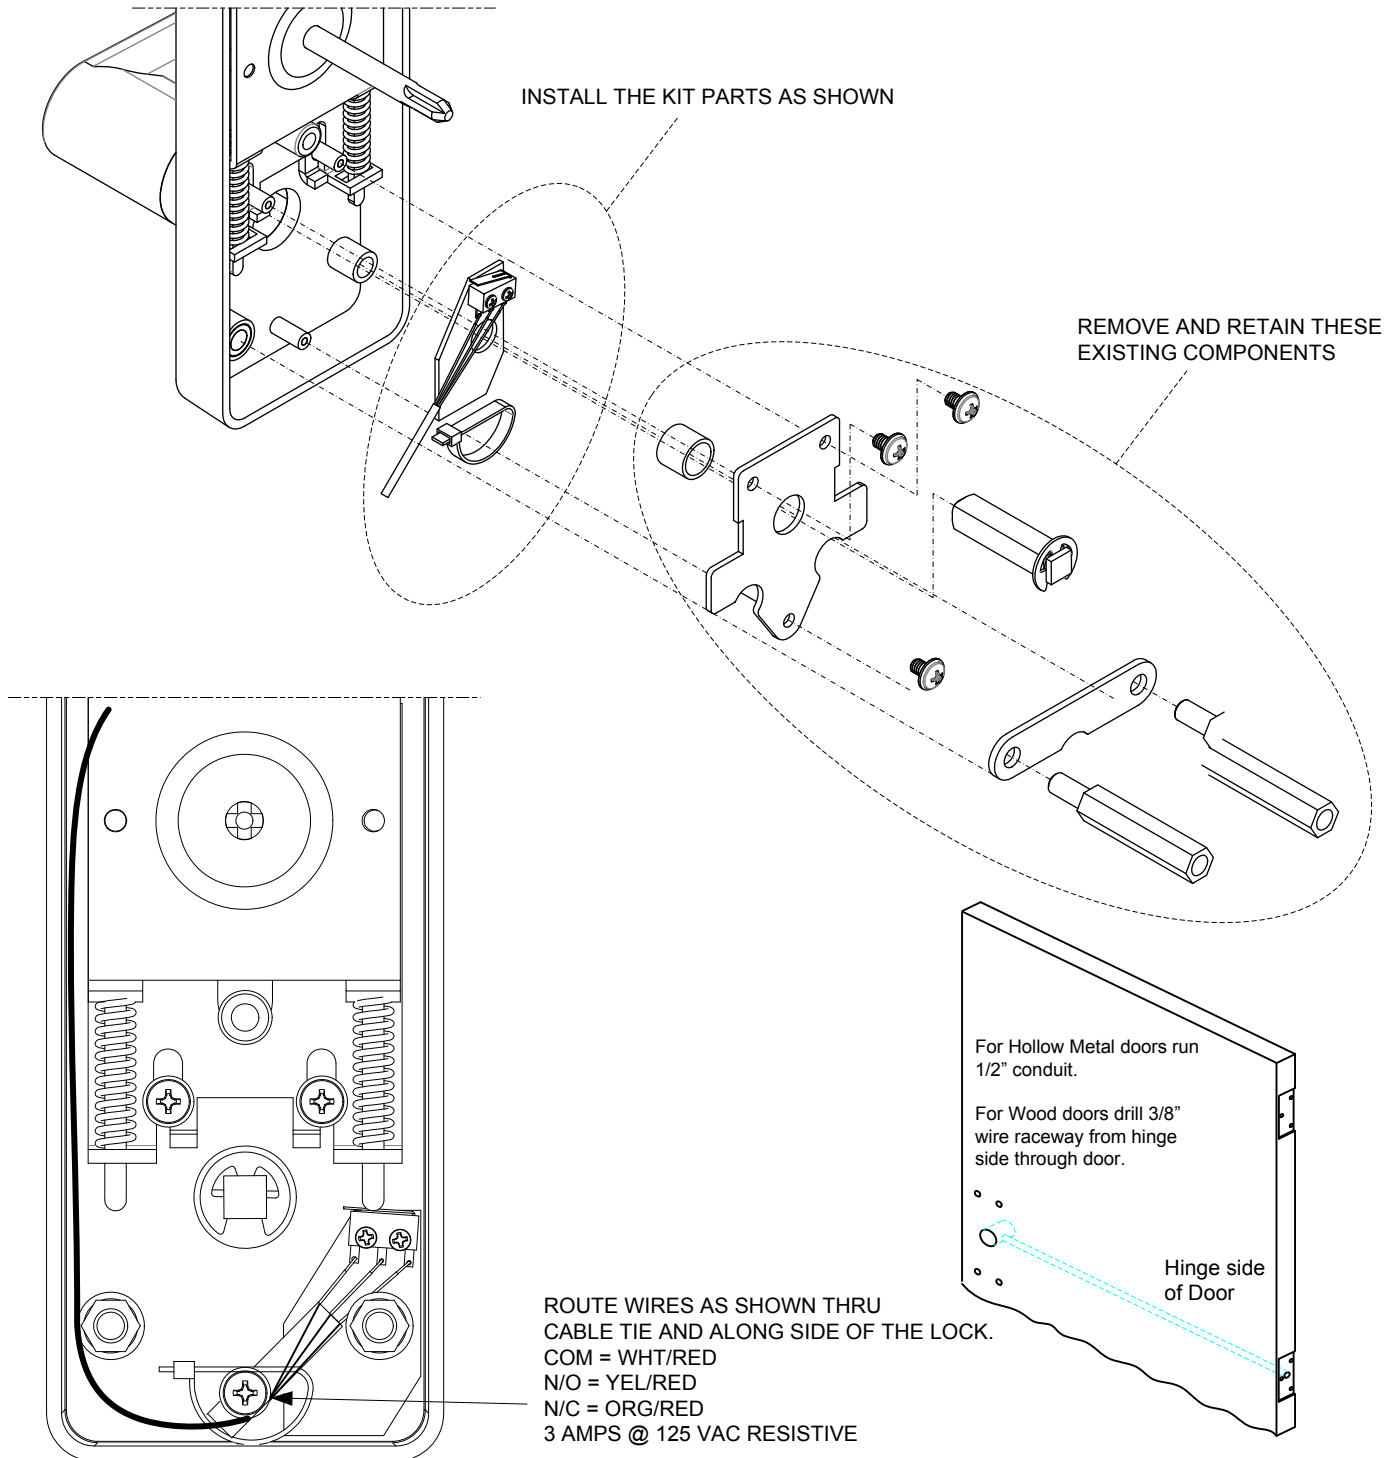
Any suggestions or comments to this instruction or
product are welcome. Please contact us through
our website or email engineer@sdcsecurity.com