
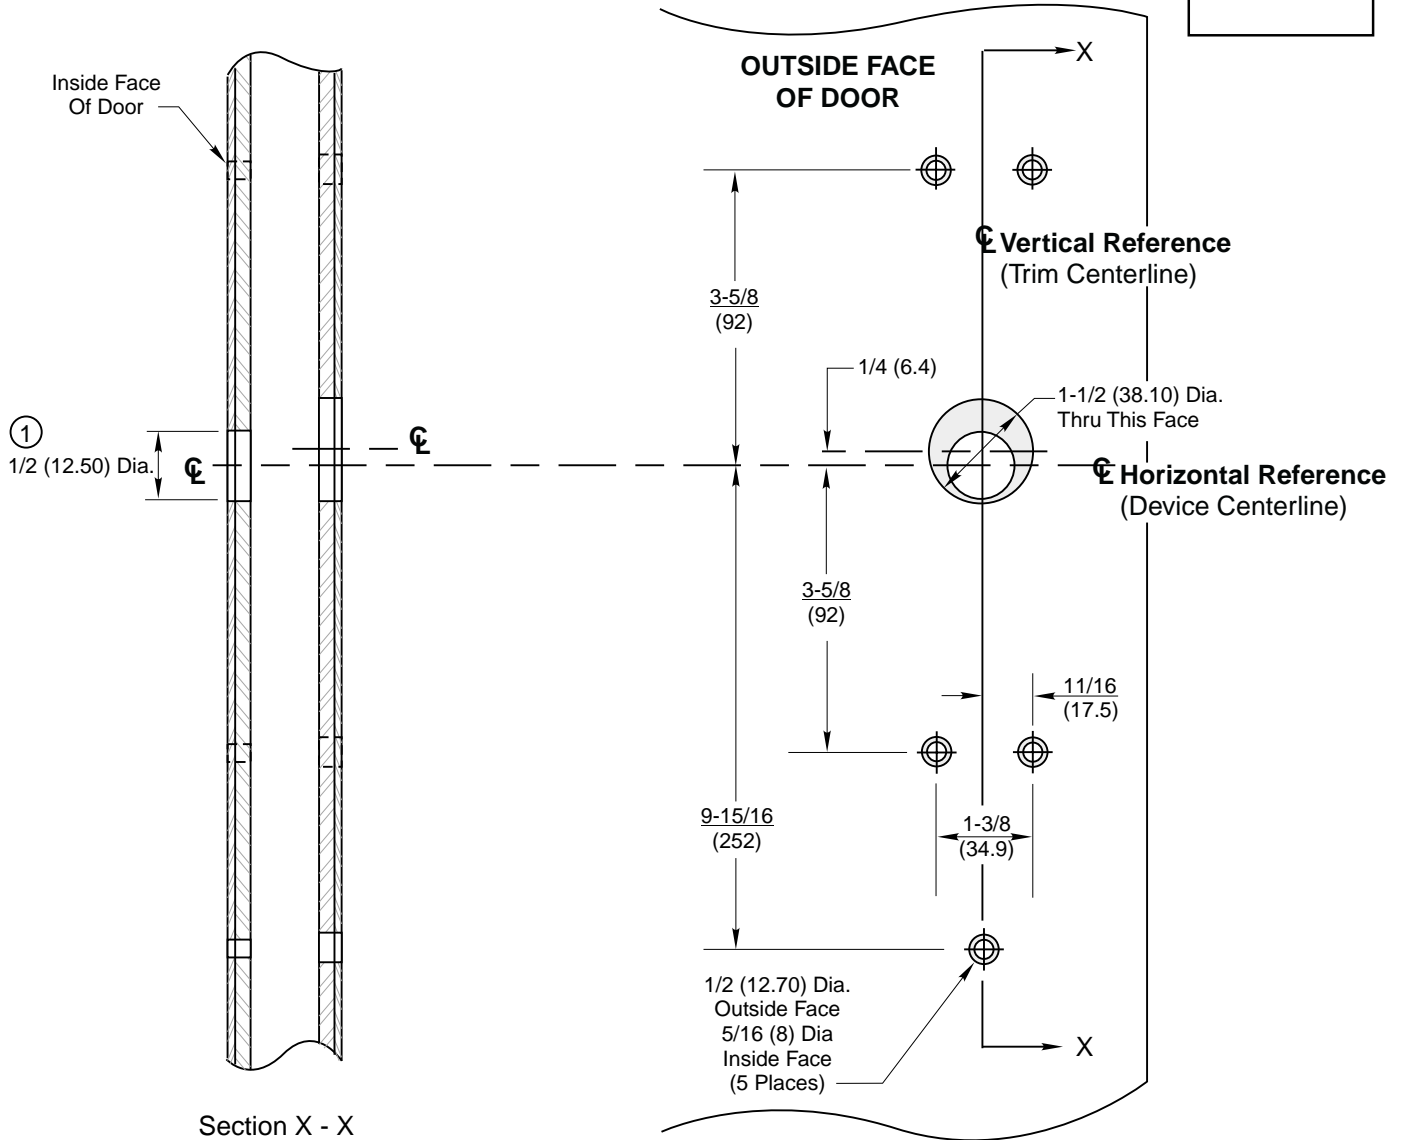


**Notes:**

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. For door reinforcement see template T30800.
6. Prepare mounting holes when installing trim.
7. Provide adequate internal support to prevent door deformation from bolting trim to the device.
8. Dimensions given about a centerline are symmetrical.

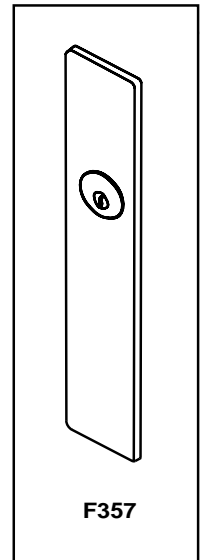

**F357 Trim**  
 With ED5200, ED5400 or ED5800 Series  
 Rim and Vertical Rod Exit Devices  
**Metal Door Preparation**

|                                                                                                                |                      |
|----------------------------------------------------------------------------------------------------------------|----------------------|
| <br>www.corbinrusswin.com |                      |
| SUPERSEDES<br><b>T30823</b>                                                                                    | DO NOT SCALE DRAWING |
| TEMPLATE NUMBER<br><b>T30823-1</b>                                                                             | DATE<br><b>9-99</b>  |