

Installation Instructions




Door Coordinator & Carry Bar


Door Coordinator

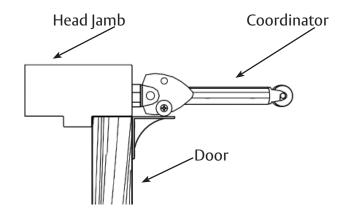

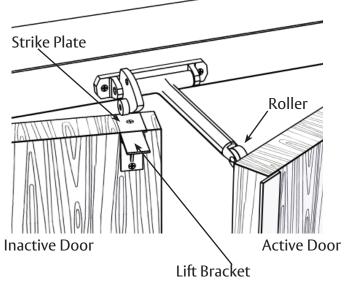

Carry Bar (Supplied on order only.)

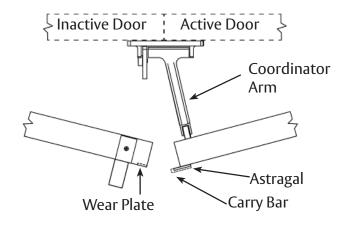

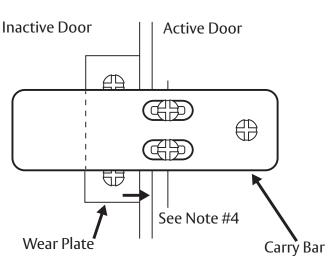

- 1. Roller must be at the bottom of the cam. Relocate to change hand.
- 2. Mount the lift bracket and strike plate.
- 3. Mount the coordinator so that the lift bracket will lift the roller to clear the door.
- 4. Mount the carry bar approximately 6" from the top of the active door. The inactive door should just clear the carry bar when the active door is held open by the coordinator.
- 5. Install wear plate in the edge of inactive door as shown.



A5692F 9/22