

For Notes & Frame Prep
See Sheet 2

DOOR SPECIFICATION

Door Thickness : 1-3/4"
(45mm) Min.

Door Construction: Wood or composite door with fire or panic rating as required. Door may require metal channel edge which may alter bracket dimensions. Consult door manufacturers listings.

Exit Device Ratings:



2160-LBR, 2165-LBR,
Panic Exit Door up to 4' x 8'

2160F90-LBR, 90
Minute Rated Fire Exit
Doors up to 4' x 8'

2160-LBR-10, 2165-
LBR-10, Panic Exit Door
up to 4' x 10'

2160F90-LBR-10, 90
Minute Rated Fire Exit
Doors up to 4' x 10'

Door Edge Detail

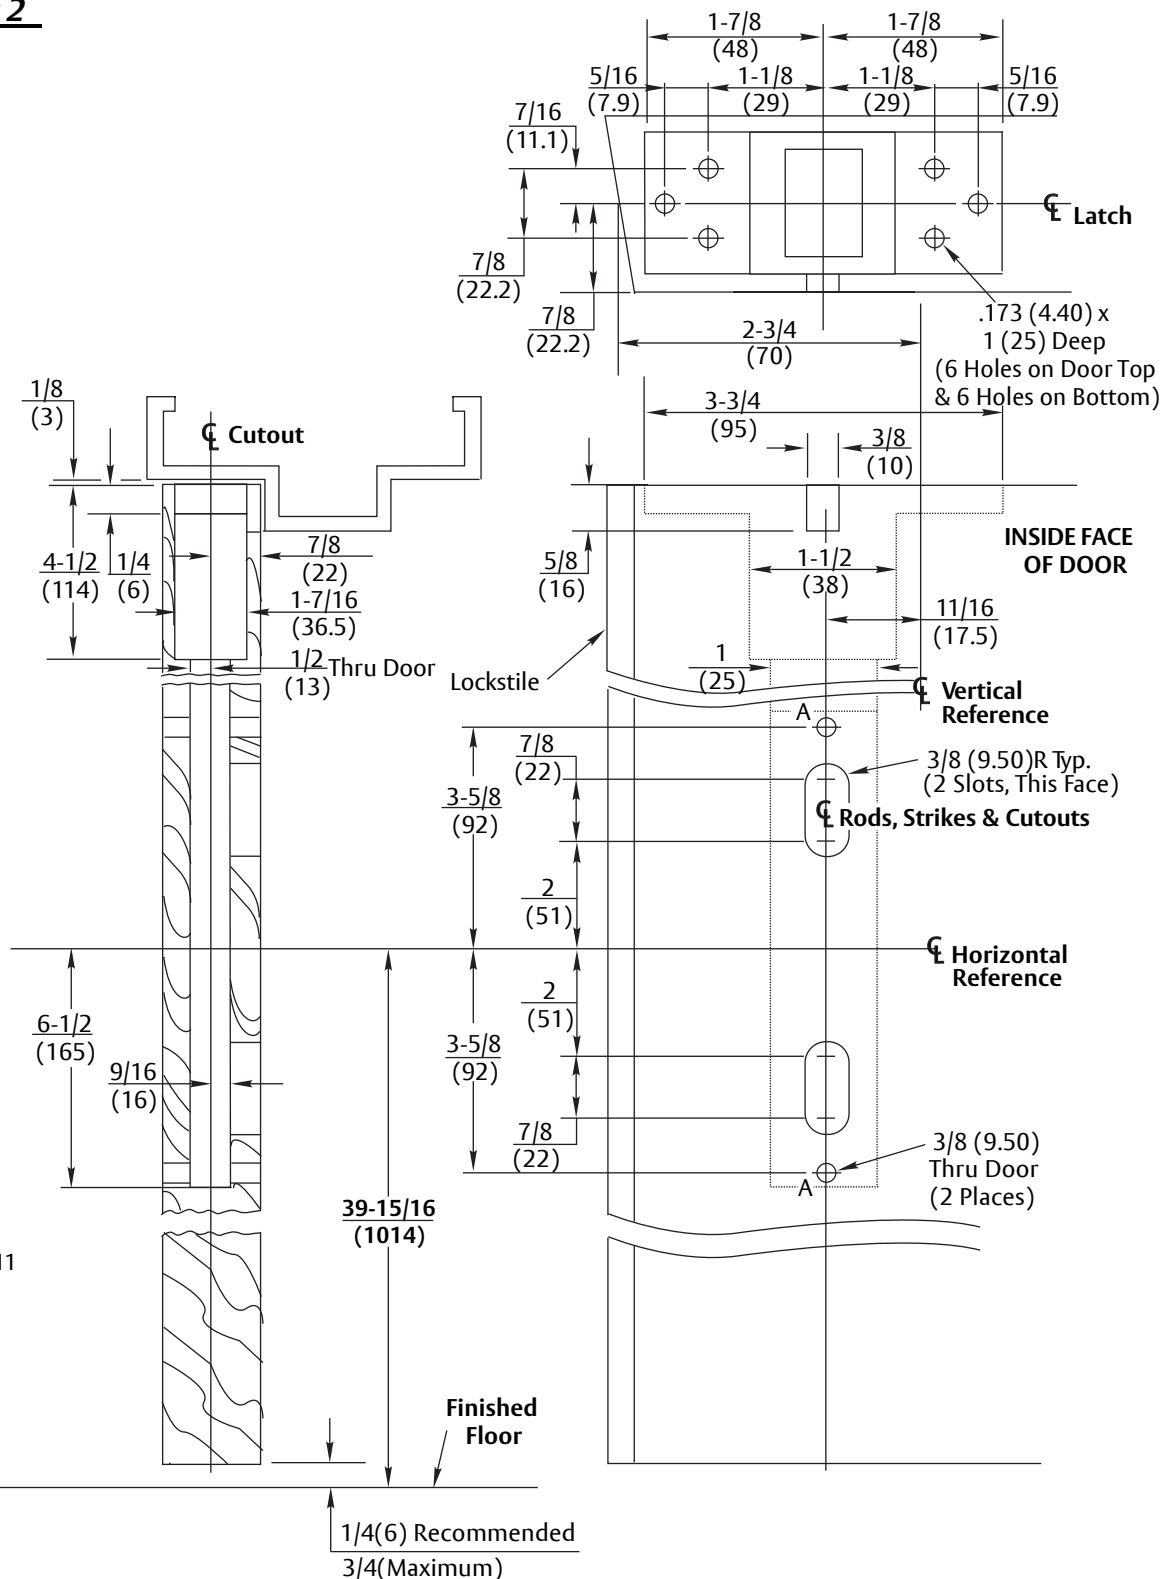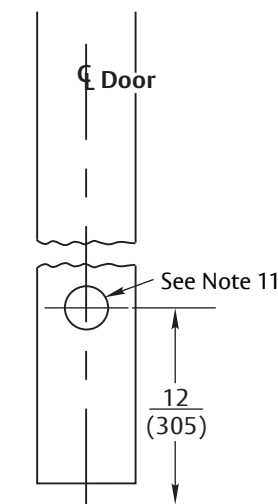

RESPONSIBILITY


DOOR AND FRAME MANUFACTURERS ARE RESPONSIBLE FOR PROVIDING ADEQUATE CONSTRUCTION OR REINFORCEMENTS FOR PROPER INSTALLATION OF HARDWARE SHOWN. ALL ARCHITECTURAL BUILDERS HARDWARE MUST BE INSTALLED ON PROPERLY REINFORCED DOORS AND FRAMES, REGARDLESS OF TYPE, MATERIAL, OR METHOD OF CONSTRUCTION.

2160(F90) LBR Series
2160-LBR-10, 2165-LBR-10, 2160(F90)-LBR-10
Concealed Vertical Rod Exit Devices
Application for Wood Door &
Metal Frame Less Bottom Rod
Contact us for support at 1-855-557-5078.

ASSA ABLOY

SUPERSEDES	06/17	DO NOT SCALE DRAWING	
TEMPLATE NUMBER	7421-1065	SHEET	1 of 2
		DATE	12-23

761 Top Strike Preparation (See Note 6)

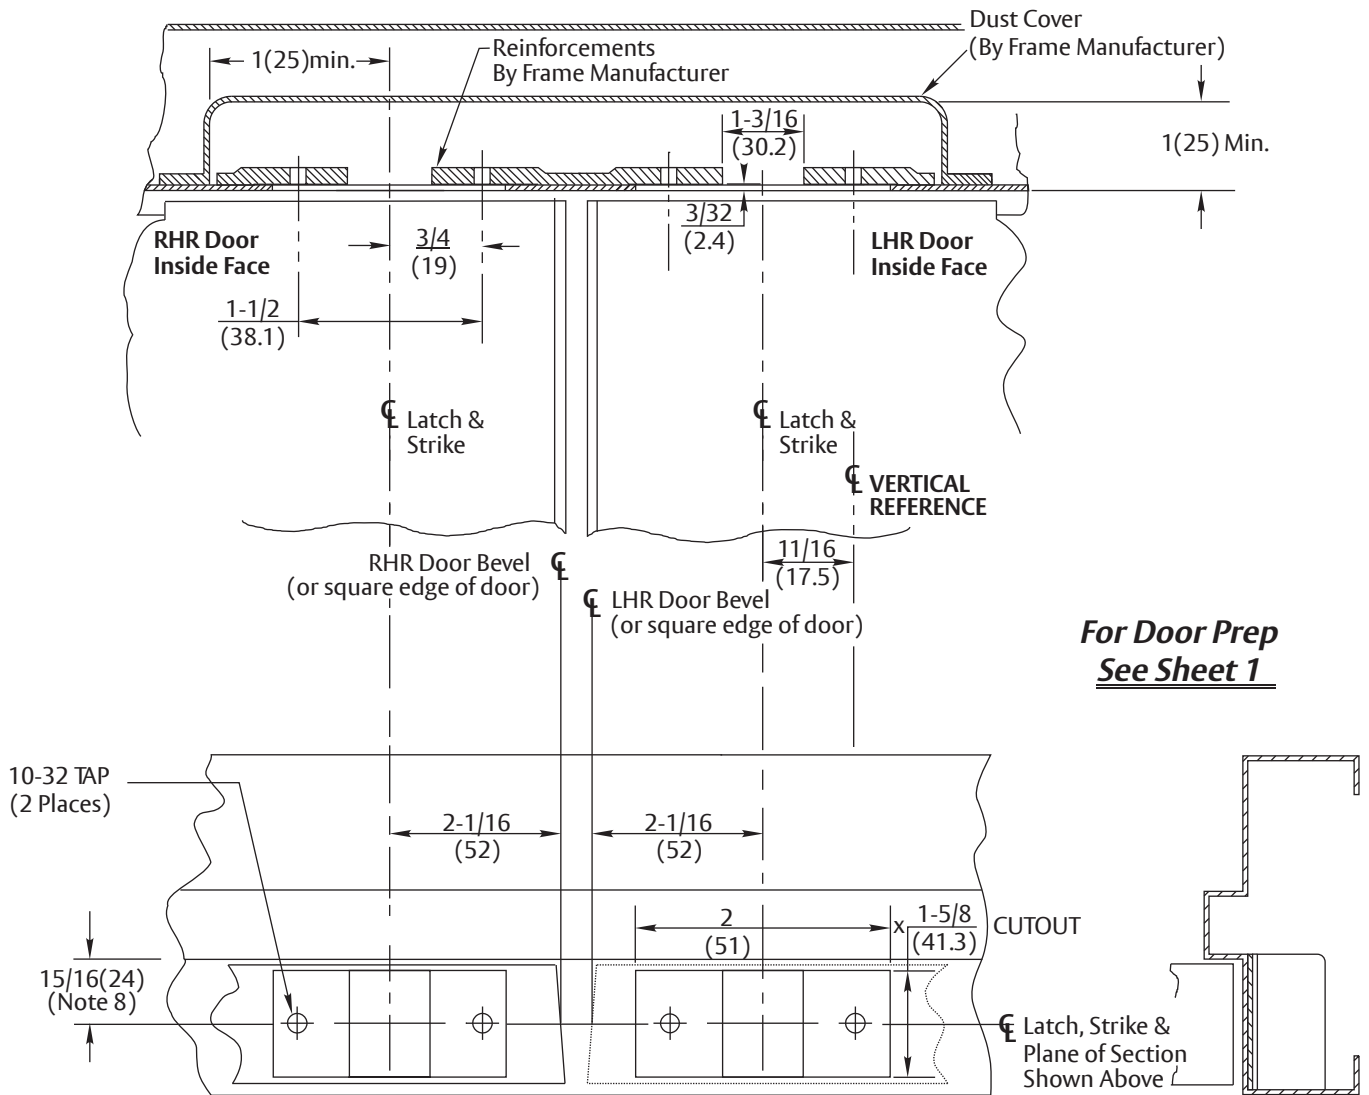

**For Door Prep
See Sheet 1**

Notes:

1. Do not scale drawing.
2. Dimensions are in inches (mm).
3. Preparation is typical for both hands.
4. Minimum door stile width: 4-1/2 (114).
5. Prepare mounting holes when installing the device.
6. Drawing shows elevation (frame bisected on strike center), bottom view looking up and side view.
7. Provide adequate structural support to maintain door integrity after device installation with power tools, door use, or abuse.
8. Door located in frame for door silencers. If not used, compensate this dimension to seat the door against the stop without rattle.
9. Device mount to hinge stile (not shown) requires hole location and preparation during device installation. Door structural requirements are similar for both stiles.
10. For outside trim preparation see appropriate trim template.
11. For labeled door pairs only. Reinforce door as needed for heat activated interlocking bolt. See template 7470-1700.

RESPONSIBILITY

DOOR AND FRAME MANUFACTURERS ARE RESPONSIBLE FOR PROVIDING ADEQUATE CONSTRUCTION OR REINFORCEMENTS FOR PROPER INSTALLATION OF HARDWARE SHOWN. ALL ARCHITECTURAL BUILDERS HARDWARE MUST BE INSTALLED ON PROPERLY REINFORCED DOORS AND FRAMES, REGARDLESS OF TYPE, MATERIAL, OR METHOD OF CONSTRUCTION.

2160(F90) LBR Series
2160-LBR-10, 2165-LBR-10, 2160(F90)-LBR-10
Concealed Vertical Rod Exit Devices
 Application for Wood Door &
 Metal Frame Less Bottom Rod
Contact us for support at 1-855-557-5078.

ASSA ABLOY

SUPERSEDES	06/17	DO NOT SCALE DRAWING	
TEMPLATE NUMBER	7421-1065	SHEET	2 of 2
		DATE	12-23

Experience a safer and more open world

Copyright © 2017, 2023, ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.